HP 1805A

STABRO LABORATORIES

OPERATING AND SERVICE MANUAL

DUAL CHANNEL VERTICAL AMPLIFIER

1805A

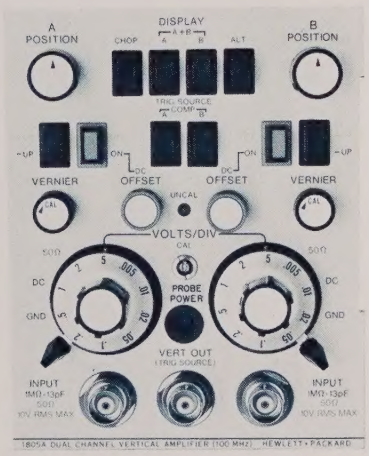

HEWLETT hp PACKARD

HP 1805A

CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. The cathode-ray tube (CRT) in the instrument and any replacement CRT purchased from HP are also warranted against electrical failure for a period of one year from the date of shipment from Colorado Springs. BROKEN TUBES AND TUBES WITH PHOSPHOR OR MESH BURNS, HOWEVER, ARE NOT INCLUDED UNDER THIS WARRANTY. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

C W&A 5/77

OPERATING AND SERVICE MANUAL

DUAL CHANNEL VERTICAL AMPLIFIER
MODEL 1805A
(Including Option 003)

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 1513A.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 1205A through 1409A.

...BRO LABORATORIES, INC.
TECHNICAL REFERENCE LIBRARY

DOCUMENT CONTROL ADMINISTRATOR

HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

Manual Part Number 01805-90903
Microfiche Part Number 01805-90803

PRINTED: JUNE 1976

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

TABLE OF CONTENTS

Section			Page
I	GENERAL INFORMATION		1-1
	1-1.	Introduction	1-1
	1-5.	Specifications	1-1
	1-7.	Accessories Supplied	1-1
	1-9.	Accessories Available	1-1
	1-11.	Options	1-1
	1-12.	Option 003	1-1
	1-13.	Instrument and Manual Identification	1-1
II	INSTALLATION		2-1
	2-1.	Introduction	2-1
	2-3.	Initial Inspection	2-1
	2-5.	Preparation for Use	2-1
	2-8.	Repacking for shipment	2-1
III	OPERATION		3-1
	3-1.	Introduction	3-1
	3-3.	Instrument Capabilities	3-1
	3-6.	General Operating Instructions	3-1
	3-7.	Controls and Connectors	3-1
	3-8.	Initial Turn-on Procedure	3-1
	3-9.	Amplifier Calibration	3-1
	3-10.	Application Procedures	3-1
	3-11.	Peak-to-peak Voltage Measurements	3-1
	3-12.	DC Voltage Measurements	3-1
	3-13.	Time-interval Measurements	3-3
	3-14.	Frequency Calculation	3-3
	3-15.	Probe Compensation	3-3
IV	PRINCIPLES OF OPERATION		4-1
	4-1.	Introduction	4-1
	4-3.	Block Diagram	4-1
	4-5.	Attenuator	4-1
	4-6.	Impedance Converter	4-1
	4-7.	Preamplifier	4-1
	4-8.	Channel A Control	4-1
	4-9.	Sync Amplifier	4-1
	4-11.	Delay Line	4-1
	4-12.	Main Amplifier	4-1
	4-13.	Output Amplifier	4-1
	4-14.	Control Circuit	4-1
	4-19.	Power Supply	4-2
	4-21.	Detailed Circuitry	4-2
	4-23.	Attenuators A10 and A11	4-2
	4-28.	Preamplifier	4-2
	4-35.	Delay Line	4-2
	4-36.	Main Amplifier	4-2
	4-37.	Output Amplifier	4-3
	4-38.	Sync Amplifier	4-3
V	PERFORMANCE CHECK AND ADJUSTMENTS		5-1
	5-1.	Introduction	5-1
	5-3.	Equipment Required	5-1
	5-5.	Performance Checks	5-1
	5-7.	Adjustments	5-1
	5-9.	Performance Check Record	5-1
	5-11.	Front-panel Control Settings	5-1
	5-13.	Performance Check Procedures	5-2
	5-14.	Initial Performance Check	5-2
	5-15.	Polarity Check	5-2
	5-17.	Deflection Factor	5-2
	5-19.	DC Offset Voltage	5-3
	5-21.	Rise Time	5-3
	5-23.	Bandwidth Check	5-4
	5-25.	Common Mode Rejection	5-4
	5-27.	Vertical Output Amplitude	5-5
	5-29.	Vertical Output Bandwidth	5-5
	5-31.	Triggering	5-6
	5-33.	VSWR Check	5-6
	5-35.	Adjustments	5-7
	5-37.	DC Balance Adjustment	5-7
	5-38.	Sync Balance Adjustment	5-7
	5-39.	Sync Level Adjustment	5-7
	5-40.	Vert Out Level Adjustment	5-7
	5-41.	Volts/Div Cal Adjustment	5-9
	5-42.	Attenuator Adjustments	5-9
	5-43.	Pulse Response Adjustments	5-10
VI	REPLACEABLE PARTS		6-1
	6-1.	Introduction	6-1
	6-3.	Ordering Information	6-1
VII	MANUAL CHANGES		7-1
	7-1.	Introduction	7-1
	7-3.	Manual Changes	7-1
	7-5.	Manual Change Instructions	7-1
VIII	SCHEMATICS AND TROUBLESHOOTING		8-1
	8-1.	Introduction	8-1
	8-3.	Schematics	8-1
	8-8.	Repair and Replacement	8-1
	8-10.	Output Transistor Removal	8-1
	8-11.	Attenuator Removal	8-1
	8-12.	Attenuator Repair	8-1
	8-16.	Circuit Boards	8-2
	8-17.	Board Connections	8-2
	8-18.	Circuit Board Removal	8-2
	8-27.	Semiconductor Replacement	8-3
	8-28.	Integrated Circuit Replacement	8-3
	8-29.	Troubleshooting	8-3

LIST OF ILLUSTRATIONS

Figure	Title	Page
2-1.	Plug-in Mating	2-2
3-1.	Controls and Connectors	3-2
3-2.	Divider Probe Adjustment Display	3-4
5-1.	Polarity Check Test Setup	5-2
5-2.	Deflection Factor Test Setup	5-3
5-3.	Rise Time Test Setup	5-3
5-4.	Bandwidth Test Setup	5-4
5-5.	CMR Test Setup	5-4
5-6.	Vertical Output Amplitude Test Setup	5-5
5-7.	Vertical Output Bandwidth Test Setup	5-5
5-8.	VSWR Test Setup	5-6
5-9.	Adjustment Locations	5-8
8-1.	Attenuator Assembly	8-2
8-2.	Chassis Component and Assembly Locations	8-4
8-3.	Troubleshooting Block Diagram	8-6
8-4.	Attenuator Component Identification	8-8
8-5.	Attenuator Schematic 1	8-9
8-6.	Preamplifier and Sync Amplifier Board A6, Component Identification	8-10
8-7.	Preamplifier and Sync Amplifier Schematic 2	8-10
8-8	Interconnecting Board A4, Component Identification	8-12
8-9.	Preamplifier and Sync Amplifier Schematic 3	8-12
8-10.	Main Amplifier Board A7, Component Identification	8-14
8-11.	Output Amplifier Board A8, Component Identification	8-14
8-12.	Output Amplifier Schematic 4	8-14
8-13.	Top Switched Board A1, Component Identification	8-16
8-14.	Top Switch Board Schematic 5	8-17
8-15.	Bottom Switch Board A2, Component Identification	8-18
8-16.	Bottom Switch Board Schematic 6	8-19
8-17.	Control Board A3, Component Identification	8-20
8-18.	Control Board Schematic 7	8-20
8-19.	Power Supply Board A5, Component Identification	8-22
8-20.	Power Supply Schematic 8	8-23

LIST OF TABLES

Table	Title	Page
1-1.	Specifications	1-2
5-1.	Recommended Test Equipment	5-0
5-2.	Deflection Factor Accuracy	5-3
5-3.	Triggering	5-6
5-4.	VSWR	5-7
5-5.	Compensation Adjustments	5-9
5-6.	Attenuator Input Adjustments	5-10
5-7.	Compensation Adjustment	5-10
5-8.	Attenuator Input Adjustment	5-10
5-9.	Channel A Pulse Response Adjustments	5-10
5-10.	Channel B Pulse Response Adjustments	5-10
	Performance Check Records	5-11
6-1.	Abbreviations for Replaceable Parts List	6-1
6-2.	Replaceable Parts	6-2
6-3.	List of Manufacturers' Codes	6-9
7-1.	Manual Changes	7-1

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. The Hewlett-Packard Model 1805A plug-in is a dual-channel vertical amplifier designed to operate with a horizontal time base in an HP 180-series oscilloscope mainframe. Each channel provides accurate measurements of high-frequency signals and fast rise time pulses with 5 mV/div vertical deflection capability over the full 100-MHz bandwidth. Selectable input impedance of either 50 ohms or 1 megohm permits impedance selection that best meets measurement applications. Its low shunt capacitance of approximately 13 pF reduces phase shift and signal loss in pulse or cw measurements. In addition, the dc offset capability of ±200 divisions allows low-level, biased logic pulses to be positioned on screen for accurate measurements.

1-3. This manual contains installation and operating instructions, as well as maintenance information for the 1805A. Instrument specification and procedures for verifying proper operation are included. Procedures are also included for adjusting the instrument to its performance specifications. Schematic diagrams, the theory of operation, and troubleshooting information are provided for use in maintaining the instrument.

1-4. This section of the manual contains the performance specifications for the 1805A, and a list of available options. It also lists the accessories that are available. Instrument and manual identification information are also included.

1-5. SPECIFICATIONS.

1-6. Table 1-1 is a complete list of the 1805A critical specifications that are controlled by tolerances. Any changes in specifications due to manufacturing, design, or traceability to the U.S. National Bureau of Standards will be listed on a manual change sheet included with this manual. The manual and manual change sheet supersede all previous information concerning specifications of the 1805A.

1-7. ACCESSORIES SUPPLIED.

1-8. The following accessories are supplied with the 1805A:

Two Voltage Divider Probes, HP Model 10014A

1-9. ACCESSORIES AVAILABLE.

1-10. The following accessories are available for the 1805A:

Model 10016A Voltage Divider Probes
Model 10020A Resistive Divider Probe Kit
Model 1120A 500 MHz Active Probe
Model 1125A Impedance Converter Probe

1-11. OPTIONS.

1-12. OPTION 003. This option provides the basic instrument without the two HP Model 10014A Voltage Divider Probes.

1-13. INSTRUMENT AND MANUAL IDENTIFICATION.

1-14. Instrument identification by serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix, separated by a letter designating the country in which the instrument was manufactured. (A=U.S.A.; G=West Germany; J=Japan; U=United Kingdom.)

1-15. This manual applies to instruments with a serial prefix number as shown on the title page. If changes have been made in the instrument since this manual was printed, a "Manual Changes" supplement supplied with the manual will define these changes. Be sure to record these changes in your manual. Backdating information in Section VII adapts the manual to instruments with serial numbers lower than that shown on the title page. Part numbers for the manual and the microfiche copy of the manual are also shown on the title page.

Table 1-1. Specifications

MODES OF OPERATION

Channel A; channel B; channels A and B displayed alternately on successive sweeps (ALT); channel A and B displayed by switching between channels at approx 400 kHz rate (CHOP) with blanking during switching; channel A plus channel B (algebraic addition).

EACH CHANNEL (2)

BANDWIDTH: (measured with or without 10014A probe, 3 dB down from 8 div reference signal from a terminated 50-ohm source.)

DC-coupled: dc to 100 MHz.

AC-coupled: approx 10 Hz to 100 MHz (lower limit is approx 1 Hz with 10014A probe).

RISE TIME: <3.5 ns (measured with or without 10014A probes, 10% to 90% points of 6 div input step from a terminated 50-ohm source).

DEFLECTION FACTOR

Ranges: 5 mV/div to 5 V/div (10 calibrated positions) in 1, 2, 5 sequence. ±2% attenuator accuracy.

Vernier: provides continuous adjustment between deflection factor settings and extends maximum deflection factor to at least 12.5 V/div. Front panel light indicates when vernier is not in CAL position.

POLARITY: + or — up, selectable.

SIGNAL DELAY: input signals are delayed sufficiently to view leading edge of input pulse without advanced trigger.

INPUT COUPLING: AC, DC, 50 ohms (dc), or ground. Ground position disconnects input connector and grounds amplifier input.

INPUT RC

AC and DC: 1 megohm ±1% shunted by approx 13 pF. Constant on all ranges.

50 ohm: 50 ohms ±2%. VSWR <1.2:1 at 100 MHz on all ranges.

MAXIMUM INPUT

AC and DC: ±300 V (dc + peak ac) at 1 kHz or less. ±150 V (dc + peak ac) on 5 mV/div range at 1 kHz or less.

50 ohm: 10 V rms.

DYNAMIC RANGE: 6 div at 100 MHz increasing to 16 div at ≤15 MHz.

POSITIONING RANGE: 16 div.

A+B OPERATION

Amplifier: bandwidth and deflection factors are unchanged; either channel may be inverted for ±A ±B operation.

Differential Input (A—B) Common Mode: CMRR is at least 40 dB from dc to 1 MHz for common mode signals of 16 div or less. CMRR is at least 20 dB at 50 MHz for common mode signals of 6 div or less.

TRIGGERING

SOURCE: selectable from channel A, channel B or a composite (Comp) signal from A and B in any display mode. Composite is channels A and B signals switched for Alt and Chop modes and added for A and B mode. Vernier and position controls do not affect A, B, or composite trigger signals. A and B signals are independent of polarity selection.

FREQUENCY

Time Base Plug-in	Trigger Frequency*	Required Vertical Deflection
1820C, 1824A	dc - 50 MHz	1/2 div
1825A, 1840A, 1841A	dc - 100 MHz	1 div
1820B, 1822A	dc - 50 MHz	1/2 div
	dc - 100 MHz	2 div
1820A, 1821A	dc - 50 MHz	1 div

*All display modes except Chop, dc to 100 kHz in Chop.

OFFSET

±200 div of offset. Allows offset of dc or ac signals up to the dynamic range and maximum input.

VERTICAL SIGNAL OUTPUT (selected by trigger source switch)

Bandwidth: >50 MHz into 50 ohms.

Amplitude: >50 mV for each division of display into 50 ohms with usable amplitudes up to 500 mV p-p.

Source Impedance: approx 50 ohms.

GENERAL

OPERATING ENVIRONMENT

Temperature: 0 to +55°C.

Humidity: to 95% relative humidity at +40°C.

Altitude: to 4600 m (15 000 ft).

Vibration: vibrated in three planes for 15 min. each with 0.254 mm (0.010 in.) excursion, 10 to 55 Hz.

WEIGHT: net, 2.3 kg (5 lb); shipping 3.6 kg (8 lb).

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for installing and interfacing the 1805A. Included are initial inspection procedures, installation instructions, and procedures for repacking the instrument for shipment.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be free of mars or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged, file a claim with the carrier. Check for supplied accessories (listed in Section I) and test the electrical performance of the instrument using the performance test procedures outlined in Section V. If there is a deficiency, refer to the warranty in the front of this manual.

2-5. PREPARATION FOR USE.

WARNING

Read the safety summary at the front of the manual before installing or operating the instrument.

2-6. The 1805A and the horizontal plug-in must be locked together before installing into a 180-series oscilloscope mainframe. This procedure is explained below. Power for the 1805A is supplied by the oscilloscope through the horizontal plug-in.

NOTE

To adapt Model 1805A to time bases Model 1840A (serial prefix 1123A and lower) and to Model 1841A (serial prefix 1150A and lower), order modification kit HP Part Number 01840-69503 for Model 1840A and modification kit HP Part Number 01841-69506 for Model 1841A.

2-7. Install plug-ins as follows:

a. Move locking bar to rear (figure 2-1).

b. Fit plug into jack, making certain bulkhead connectors and guide lugs are aligned, and press plug-ins firmly together.

c. After ensuring that front and rear panels are aligned, push locking bar forward.

d. Lift up on latch release and rotate latch downward. Insert plug-ins into oscilloscope.

e. Rotate latch upward and push forward to lock.

2-8. REPACKING FOR SHIPMENT.

2-9. If the instrument is to be shipped to a Hewlett-Packard Sales/Service Office for service or rapair, attach a tag showing owner (with address), complete instrument serial number, and a description of the service required.

2-10. Use the original shipping carton and packing material. If the original packing material is not available, the Hewlett-Packard Sales/Service Office will provide information and recommendations on materials to be used.

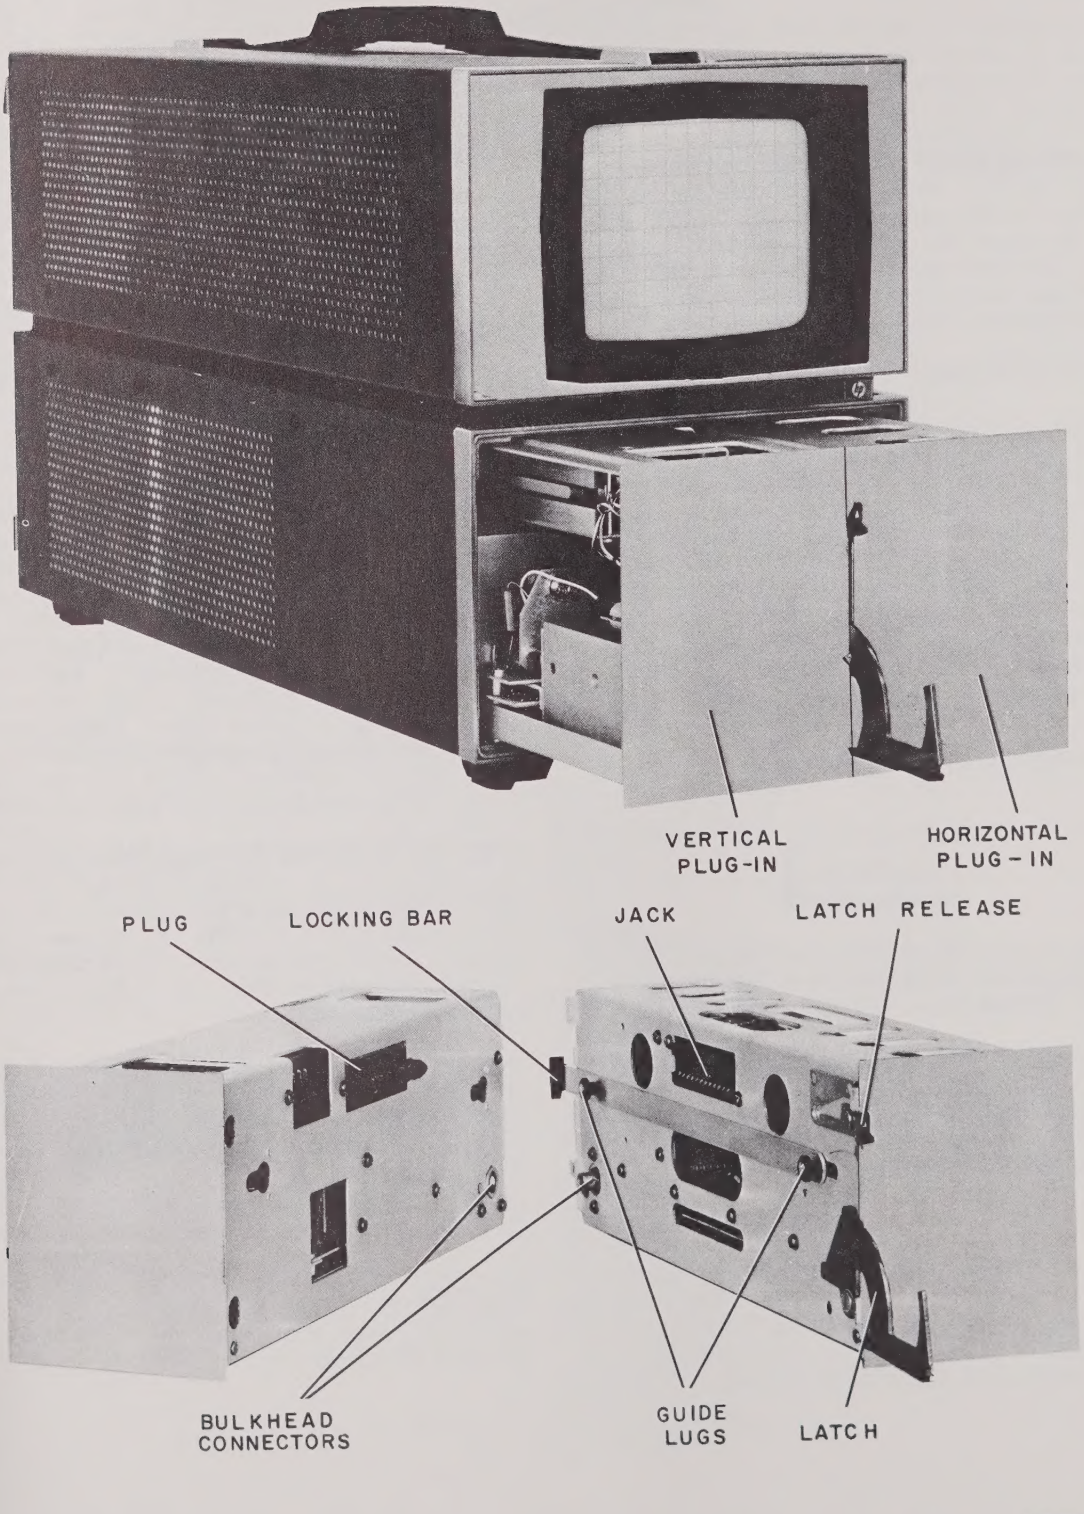

Figure 2-1. Plug-in Mating

SECTION III

OPERATION

3-1. INTRODUCTION.

3-2. This section provides general operating instructions and applications information for Model 1805A. Included are power and warmup information, functional identification of all controls and connectors and applications information.

3-3. INSTRUMENT CAPABILITIES.

3-4. The instrument contains dual vertical amplifiers for dual-channel operation. Each channel offers a choice of ac, high Z dc, or 50-ohm input coupling. With the dual trace feature, displays can be obtained on either channel A or channel B or on both channels. Simultaneous display of two signals is possible in either chop or alternate type of display. A+B and A—B mode of operation are also available.

3-5. Ten calibrated switch settings on each vertical amplifier provide a deflection factor range from 5 mV/div to 5 V/div in 1, 2, 5 sequence. The vertical verniers permit continuous adjustment between calibrated steps and extends the least sensitive deflection factor (5 V/div) to at least 12.5 V/Div.

3-6. GENERAL OPERATING INSTRUCTIONS.

3-7. CONTROLS AND CONNECTORS. Figure 3-1 provides functional descriptions of the operating controls, indicators, and connectors. Where the controls for channel A and channel B are identical, only one description is given for that control.

3-8. INITIAL TURN-ON PROCEDURE. To place the 1805A into operation, perform the following steps:

a. Install 1805A and time base plug-in unit into oscilloscope mainframe (refer to Section II).

b. Set mainframe INTENSITY control fully counterclockwise.

c. Set mainframe DISPLAY control to internal position.

d. Set time base plug-in AUTO/NORM control for AUTO operation.

e. Set time base plug-in TIME/DIV switch to 0.2 μs position.

f. Set 1805A controls as follows (both channel A and channel B where applicable):

POSITION	midrange
DC OFFSET	OFF
Coupling	GND
VOLTS/DIV	2
VERNIER	CAL
DISPLAY	A

g. Apply power to oscilloscope mainframe.

h. After warmup, adjust mainframe INTENSITY and FOCUS controls for sharp, but barely visible trace.

i. Adjust time base plug-in controls for stable display (if signal is applied).

3-9. AMPLIFIER CALIBRATION. Amplifier gain of the 1805A should be adjusted when the plug-in is changed from one mainframe to another. To adjust the amplifier gain proceed as follows:

a. Accomplish paragraph 3-8.

b. Set 1805A channel A and channel B coupling to AC.

c. Set 1805A channel A and channel B VOLTS/DIV controls to .05 V/div.

d. Connect mainframe 250-mV calibrator signal to channel A INPUT connector.

e. Adjust 1805A CAL screwdriver adjustment for 5-division display.

f. Disconnect mainframe 250-mV calibrator signal from channel A INPUT connector.

3-10. APPLICATION PROCEDURES.

3-11. PEAK-TO-PEAK VOLTAGE MEASUREMENTS. To measure the peak-to-peak voltage of an input signal, proceed as follows:

a. Accomplish paragraphs 3-8 and 3-9.

b. Connect input signal to 1805A channel A INPUT connector.

c. Set channel A VOLTS/DIV control for signal amplitude display of at least three divisions.

d. Set time base TIME/DIV control so that display contains two or three cycles of input signal.

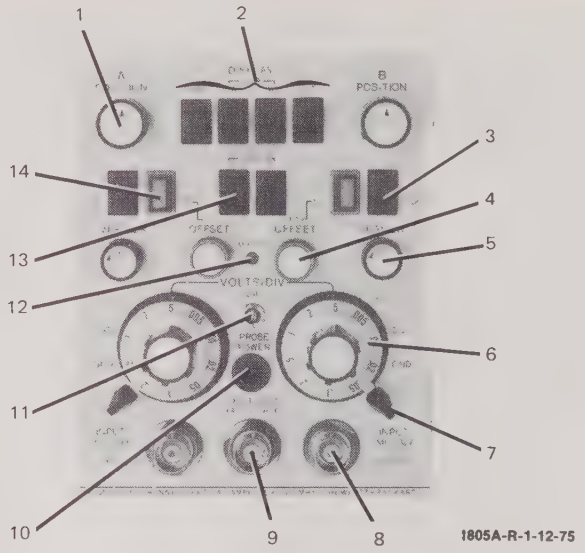

1. POSITION. Potentiometer changes trace position on vertical plane of CRT (functions same in channel A or B).

2. DISPLAY. Pushbutton switches allow selection of display presented: CHOP, channel A, channel B, ALT, or channels A + B.

3. polarity. Pushbutton switch selects normal display (+UP) or inverted display (—UP).

4. DC OFFSET. Potentiometer controls amount of dc voltage applied to null out unwanted dc signal at input.

5. VERNIER. Potentiometer with switch detent adjusts sensitivity between ranges selected on VOLTS/DIV switch.

6. VOLTS/DIV. Rotary switch selects vertical deflection factor for calibrated measurements (functions same in channel A or B).

7. coupling. Lever switch selects 50-ohm input impedance, direct coupling, capacitive coupling, or grounds amplifier input and disconnects signal.

8. INPUT. BNC connector for application of signal to be displayed (functions same in channel A or B).

9. VERT OUT. BNC connector supplies inverted signal corresponding to setting of TRIG SOURCE; A, B, or COMP.

10. PROBE POWER. Three-pin connector supplies operating power for accessories such as active probes.

11. CAL. Screwdriver adjustment corrects amplifier gains to VOLTS/DIV setting when changing from one mainframe to another.

12. UNCAL. Indicator lamp lights when VERNIERs are out of calibrated detent.

13. TRIG SOURCE. Pushbutton switches select channel A, channel B, or composite of channels A and B.

14. dc offset OFF-ON. Pushbutton switch connects or disconnects dc offset voltage.

Figure 3-1. Controls and Connectors

e. Adjust time base controls for stable display.

f. Using 1805A channel A POSITION control, position negative peaks of input signal on horizontal line near bottom of graticule.

g. Using mainframe horizontal POSITION control, position one positive peak of input signal on center vertical graticule line.

h. Count number of vertical divisions from most negative to most positive portion of waveform (estimate to nearest tenth of division).

i. Multiply number of divisions noted in step h by channel A VOLTS/ DIV control setting for peak-to-peak voltage of input signal.

NOTE

If input signal is applied through divider probe, multiply results obtained in step i by attenuation factor of probe.

3-12. DC VOLTAGE MEASUREMENTS. To determine the dc component of an input signal or a dc level point on an input signal, proceed as follows:

a. Accomplish paragraph 3-8.

b. Connect input signal to 1805A channel A INPUT connector.

c. With channel A input coupling in GND position, position trace on convenient horizontal graticule line using channel A POSITION control.

d. Set channel A VOLTS/DIV control so that point of input signal to be measured is as far as possible from zero-volt reference line selected in step c.

NOTE

Reference for positive dc voltages should be below center horizontal graticule line; reference for negative dc voltages should be above center horizontal graticule line. Once horizontal graticule line is selected as reference, do not change channel A POSITION control or VOLTS/ DIV control.

e. Set channel A input coupling switch to DC position.

f. Using mainframe horizontal POSITION control, move point on signal to be measured until it rests on center vertical graticule line.

g. Count number of vertical divisions between zero-volt reference graticule line and point on signal to be measured (estimate to nearest tenth of division).

h. Multiply number of divisions noted in step g by channel A VOLTS/DIV control setting for dc voltage measurement.

NOTE

If input signal is applied through divider probe, multiply results obtained in step h by attenuation factor of probe.

3-13. TIME-INTERVAL MEASUREMENTS. To measure the time interval between two events of interest, proceed as follows:

a. Accomplish paragraph 3-8.

b. Connect signal to be measured to 1805A channel A INPUT connector.

c. Set time base TIME/DIV control so that both events of interest are displayed on CRT.

d. Adjust time base controls for stable display.

e. Using mainframe horizontal POSITION control, position one measurement point on signal to convenient vertical graticule line.

f. Using 1805A channel A POSITION control, position other measurement point on center horizontal graticule line.

g. Count horizontal divisions between two measurement points (estimate to nearest tenth of division).

h. Multiply number of divisions noted in step g by time base TIME/DIV control setting for time interval between two events of interest.

3-14. FREQUENCY CALCULATION. To determine the approximate frequency of an input signal, proceed as follows:

a. Accomplish paragraph 3-13 using start and ending points of one cycle of input signal as events of interest.

b. Calculate input signal frequency using the following formula:

$$\frac{1}{\text{time in seconds noted in step a}}$$

3-15. PROBE COMPENSATION. To adjust divider probes having a compensation adjustment, proceed as follows:

a. Accomplish paragraph 3-8.

b. Connect divider probe cable to 1805A channel A INPUT connector.

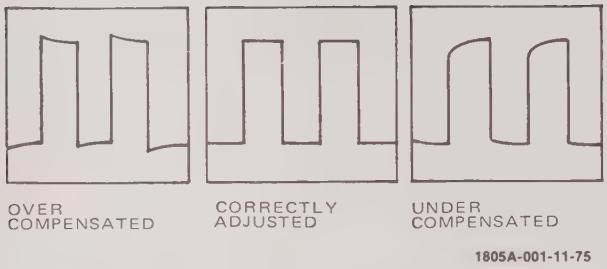

Figure 3-2. Divider Probe Adjustment Display

c. Connect probe tip to mainframe 250-mV CALIBRATOR terminal.

d. Set 1805A channel A VOLTS/DIV control for square-wave display having two or three divisions of vertical deflection.

e. Set time base TIME/DIV control for horizontal display of at least two full square waves.

f. Adjust divider probe compensation adjustment for correct display (see figure 3-2).

SECTION IV

PRINCIPLES OF OPERATION

4-1. INTRODUCTION.

4-2. This section contains functional descriptions keyed to an overall troubleshooting block diagram located in Section VIII. Detailed circuit descriptions are keyed to schematics that are also located in Section VIII.

4-3. BLOCK DIAGRAM.

4-4. Because operation of both channels are identical, the following discussion of channel A is also applicable to channel B.

4-5. ATTENUATOR. The input signal is applied to the attenuator through the front-panel INPUT connector. The attenuator controls the type of input coupling (50Ω, DC, GND, AC) and it establishes the vertical deflection factor (5 mV/div to 5 V/div) as selected by the front-panel VOLTS/DIV control.

4-6. IMPEDANCE CONVERTER. The attenuator output is applied to differential impedance converter A6Q1A/Q1B. Field-effect transistor (FET) A6Q1A converts the single-ended, high-impedance input signal to a low-impedance, single-ended output. FET A6Q1B provides the dc-offset and channel-balance capabilities.

4-7. PREAMPLIFIER. Differential amplifier A6Q2/Q3 converts the single-ended input signal to a differential signal. This stage also provides a means for adjusting the gain of channel A to equal that of channel B which is fixed.

4-8. CHANNEL A CONTROL. The main amplifier consists primarily of control chip A6U1. This integrated circuit (IC) accepts a differential input and provides two differential outputs: (1) the main signal which after amplification, will be displayed on the CRT, and (2) the output that is applied to sync amplifier A6Q9-A6Q12. The IC also provides all functions necessary for the front-panel controls of the vertical system.

4-9. SYNC AMPLIFIER. Channel A and channel B sync signals are combined at the outputs of A6U1 and A6U2. The summed output is applied to sync amplifier A6Q9-Q12. The sync amplifier stage provides a gain of at least 10.

4-10. The sync amplifier output is separated into two signals. One signal is fed into a complementary emitter follower (A6Q13/Q14) that provides a low impedance source for the time base plug-in. The other signal is fed into emitter follower A6Q15/Q16 which is used to compensate for dc drift. The output of A6Q15/Q16 is also applied to the front-panel VERT OUT connector. Output impedance of A6Q15/Q16 is 50 ohms.

4-11. DELAY LINE. The output from channel control A6U1 is applied through delay line drivers A6Q7/Q8 to the delay line. This line delays the input signal for 160 nanoseconds to allow the sweep to trigger before the signal reaches the CRT deflection plates.

4-12. MAIN AMPLIFIER. Main amplifier A7 consists primarily of integrated circuit A7U1. The remainder of the circuit provides high-frequency and gain adjustments. Gain is adjusted by two variable resistors, R6 and A7R8. In addition, the main amplifier provides current gain for output amplifiers Q1/Q2 and Q3/Q4.

4-13. OUTPUT AMPLIFIER. Integrated circuit A7U1 provides two outputs. One drives output amplifier Q1/Q2 and the other drives output amplifier Q3/Q4. Each amplifier is compensated by a feedback signal that is adjustable by A8C1. Outputs from Q1/Q2 and Q3/Q4 are applied to the CRT vertical deflection plates.

4-14. CONTROL CIRCUIT. Control circuit A3 selects the type of display to be presented on the CRT: channel A, channel B, channels A and B, ALT, or CHOP.

4-15. Pulse shaper A3U1A receives the ALT TRIGGER signal from the oscilloscope mainframe. The ALT TRIGGER signal indicates that the gate pulse has ended. The output of A3U1A is applied to J-K flip-flop A3U2 which changes state after the completion of each sweep. The flip-flop action causes the trace on the CRT to alternate between channel A and channel B. In ALT mode of operation, chop oscillator A3U1B is disabled.

4-16. In CHOP mode, the chop oscillator is enabled and the pulse shaper is disabled, inhibiting the ALT TRIGGER signal from the oscilloscope mainframe. The chop oscillator switches the trace between channels at a 400-kHz rate. The oscillator also drives chop blanking circuit A3Q1/Q2. This circuit blanks the CRT during transition between channels.

4-17. The J-K flip-flop is connected to two current switches. A3Q3/Q4 is the on-off control for the main signal path. A3Q5 through A3Q8 is the on-off control for the sync signal path. The current switches control on-off circuits in A6U1 and A6U2.

4-18. Channel control current switch A3Q3/Q4 always follows the J-K flip-flop, but can be overridden by TRIG SOURCE pushbutton A or B.

4-19. POWER SUPPLY. The 1805A power supply operates on 115-Vac line from the oscilloscope mainframe. The power supply rectifies and filters the line voltage into +20 Vdc. The +20 Vdc is added to +15 Vdc from the mainframe to provide the +35 Vdc operating power.

4-20. Transformer T1 is connected to the mainframe transformer which provides proper operating voltage to the 1805A whether the oscilloscope is being operated from either 115 Vac or 230 Vac.

4-21. DETAILED CIRCUITRY.

4-22. The following paragraphs provide detailed explanations of individual circuits in the 1805A. Circuits that are identical for both channels are explained for channel A.

4-23. ATTENUATORS A10 and A11. (See schematic 1.) The 1805A employs a two-section, cam-actuated attenuator consisting of 17 in-line cams. The first three cams form coupling switch A10S1. The other 14 cams form VOLTS/DIV switch A10S2. These cams actuate pushrods which close spring-switch contacts A10A1S1 through A10A1S17 on thick-film substrate A10A1.

4-24. The first three cams form coupling switch A10S1 and actuate spring-switch contacts A10A1S1 through A10A1S3. A table located on schematic 1 explains the switch closure sequence for each of the front-panel coupling switch positions.

4-25. The last 14 cams form VOLTS/DIV switch A10S2 and actuate spring-switch contacts A10A1S4 through A10A1S17. A table on schematic 1 explains the switch closure sequence for each front-panel VOLTS/DIV setting.

4-26. The VOLTS/DIV switch is a compensated RC type attenuator consisting of two sections. Each section contains a group of attenuation networks. The first section contains X1, X10, and X100 networks. The second section has X1, X2, X4, and X10 networks. Each switch position cascades a network from the first section with a network from the second section. Different network combinations provide attenuation ranges from 5 mV/div to 5 V/div vertical deflection.

4-27. Each attenuator network has input capacitance adjustments. The straight-through range, .005 V/div, is not adjustable. The input capacitance for each range is matched to the input capacitance of the straight-through range to achieve a uniform input capacitance over the entire range of inputs. The other attenuator adjustments provide for high-frequency compensation.

4-28. PREAMPLIFIER. (See schematic 2.) Dual FET A6Q1 is an impedance converter that provides a high-input impedance to the attenuator and a low-output impedance to differential amplifier A6Q2/Q3.

4-29. The impedance converter has two inputs. One input is from attenuator A10 and is applied to the gate of A6Q1A. The other input is the sum of the voltages from the front-panel OFFSET control and the internal channel A balance control. The dual input provides a ±1-volt offset shift.

4-30. Differential amplifier A6Q2/Q3 converts the single-ended input signal from the impedance converter to a differential output. Resistors A6R23/R24 cross couple the input signal from A6Q2 to A6Q3. Capacitor A6C23 provides high-frequency compensation. Channel B has a fixed gain and channel A gain is adjusted by A6R35 to equal channel B gain.

4-31. Channel A control A6U1 is a medium scale IC that controls all vertical functions necessary for oscilloscope operation. The differential output from A6Q2/Q3 is fed into A6U1 where it is converted into two differential outputs. One is the main signal which, after amplification, is displayed on the CRT; the second output drives the sync amplifier.

4-32. Channel A and channel B signals are combined at the outputs of A6U1 and A6U2. The signal displayed on the CRT (channel A, channel B, or channels A+B) is determined by the IC's that are turned on.

4-33. The summed outputs of A6U1/U2 is the input to delay-line drivers A6Q7/Q8. A6Q7/Q8 is a differential amplifier that is temperature compensated. Temperature variations within the 1805A cause a resistance change in thermistor A6RT1. The resulting voltage change causes the capacitance in varactors A6C66 and A6C67 to change. The change in capacitance on emitters of A6Q7/Q8 maintains constant frequency response throughout the 100-MHz range of the 1805A.

4-34. Delay-line drivers A6Q7/Q8 also incorporate the oscilloscope find beam function. When the find beam pushbutton is pressed, —12.6 V is removed from the junction of A6R94/R95 (through A6R96). The resulting change in bias voltage reduces the amplifier gain sufficiently to return the vertical display to the viewing area of the CRT.

4-35. DELAY LINE. (See schematic 4.) The delay line provides 160 nanoseconds of delay to the input signal to allow sufficient time for the sweep circuit to trigger.

4-36. MAIN AMPLIFIER. (See schematic 4.) Main amplifier A7 contains an integrated circuit that provides the current gain for the entire system. The gain of A7U1 is adjusted by A7R8 and front-panel CAL

control, R6. These adjustments are used to calibrate the 1805A for different mainframes.

4-37. OUTPUT AMPLIFIER. (See schematic 4.) Signals from the main amplifier drive shunt-output amplifiers Q1/Q2 and Q3/Q4 which provide the voltage gain to drive the CRT. Each amplifier feeds a portion of its output back to its input through a compensation network. Amplifier Q3/Q4 has a high-frequency corner adjustment HF1. The vertical deflection signal from the output amplifier is applied to the CRT deflection plates in the oscilloscope mainframe.

4-38. SYNC AMPLIFIER. (See schematic 3.) The sync signals from channel A and channel B are combined at the output of channel control A6U1. The combined signal is applied to amplifier A6Q9-Q12.

4-39. The sync amplifier consists of series feedback pair A6Q9/Q10 followed by a shunt-feedback pair A6Q11/Q12. Feedback amplifier A6Q11/Q12 is the last gain stage for the internal trigger signal.

4-40. The amplified signal is applied to two paths. One path is by way of complementary emitter followers A6Q13/Q14 to J2. At J2 there will be 400 mV/div of displayed signal (3 dB down at 100 MHz). The after path provides 50-mV/div of display signal to the front-panel vertical output connector by way of emitter follower A6Q15.

Table 5-1. Recommended Test Equipment

Instrument Type	Recommended Model	Required Characteristics	Required For
Oscilloscope Mainframe Time Base	HP 180C HP 1825A	Accommodate Model 1805A	Performance Checks, Adjustments, and Troubleshooting
Voltmeter Calibrator	HP 745A	400-Hz rep rate, 30-mV to 4 V amplitude, accuracy 0.2%	Deflection Factor Accuracy Check, Vernier Check, DC Offset Voltage. Volts/div Cal Adjust
Constant-amplitude Signal Generator		50-kHz to 100-MHz rep rate, 120-mV to 5 V, constant amplitude	Bandwidth Check, CMR Check, Vertical Output Amplitude, Vertical Output Bandwidth
Square-wave Generator	HP 211B	10-kHz rep rate, 30-mV amplitude	Attenuator Adjustment
Pulse Generator		Rise Time ≤1.0 ns, amplitude ≥0.5 V overshoot and ringing <2%, pulse width >1 usec, perturbation <1%	Rise Time Check, Pulse Response Adjustment
50-ohm BNC Tee Connector	HP 1250-0787	BNC connector	CMR Check, Vertical Output, Bandwidth
10:1 Divider Probe	HP 10014A	10:1 division ratio, 10 megohm shunted by approx 10 pF Input RC, 8 to 28 pF compensation range	Polarity Check
Plug-in Extender	HP 10407B	HP 180-system plug-in extender	Adjustments and Troubleshooting
VHF Oscillator	HP 3200B	100-MHz, 120-mW, 50-ohm output impedance	VSWR Check
Vector Voltmeter	HP 8405A	100-MHz, 300 μV to 1.0 V ranges, dual channel	VSWR Check
Coaxial Dual Directional Coupler	HP 778D	100-MHz frequency range	VSWR Check
10-dB Attenuator	8491A	10-dB attenuation, Type-N connectors	Bandwidth Check VSWR Check
50-ohm Tee (2)	HP 11536A	50-ohm Tee, Type-N input, Type-N output	VSWR Check
50-ohm Termination (2)	HP 908A	Type-N connector	Vertical Output Bandwidth, VSWR
RF Voltmeter	HP 3406A	10-kHz to 1.2 GHz, 1-mV to 3 V amplitude	Vertical Output Bandwidth Check
50-ohm Tee	HP 11063A	50-ohm Tee GR type connections	Vertical Output Bandwidth Check

SECTION V

PERFORMANCE CHECK AND ADJUSTMENTS

5-1. INTRODUCTION.

WARNING

Read the Safety Summary at the front of this manual before installing or operating the instrument.

5-2. This section contains procedures for checking instrument performance and for making all internal adjustments. Performance checks should be made in numerical sequence for best results. Also included are test setup illustrations and a list of recommended test equipment. Test points and adjustment locations are also illustrated.

5-3. EQUIPMENT REQUIRED.

5-4. A complete list of required test equipment and accessories is given in table 5-1. Test equipment equivalent to that recommended may be substituted, provided it meets the required characteristics listed in table 5-1. For best results, use recently calibrated test equipment.

5-5. PERFORMANCE CHECKS.

5-6. The performance checks given in this section are suitable for incoming inspections, preventive maintenance, and troubleshooting. The checks are designed to verify the published instrument specifications. Perform the checks in the order given, and record the measured information on the performance check record at the end of this section.

5-7. ADJUSTMENTS.

5-8. The adjustment procedures are arranged in a recommended sequence. While most adjustments may be made independently, it is recommended that adjustments be made sequentially as a number of adjustments are directly related to preceding or following adjustments.

5-9. PERFORMANCE CHECK RECORD.

5-10. Each measurement point in the performance check is repeated in the performance check record. The pages may be removed for filing. The first time the performance check is made, enter the results on the performance check record and file it for future reference.

5-11. FRONT-PANEL CONTROL SETTINGS.

5-12. The control settings listed below are to be used for each performance check and adjustment procedure. If a control is to be set to another position, it will be listed in the procedure. After the completion of each performance check or adjustment procedure, set the controls back to the original front-panel settings.

Table 5-1. Recommended Test Equipment (Cont'd)

Instrument Type	Recommended Model	Required Characteristics	Required For
LC Meter	HP 4332A	13 pF, ±3%	Attenuator Adjustment
Adapter	HP Part No. 1251-2277	Turn banana plug to BNC female adapter	Performance Checks
Voltmeter	HP 34740A with 34702A	50-mV, 10 volts, ±1%	Sync Level Adjustment Vert Out Level Adjustment
50-ohm Coaxial Cable (2)	HP 11086A	50-ohm coaxial cable BNC male connectors both ends 24 inches	VSWR
50-ohm Coaxial Cable (2)	HP 10502A	50-ohm coaxial cable BNC male connectors both ends 9 inches	VSWR

Control	Position
POSITION A and B	midrange
DISPLAY	A
TRIG SOURCE	A
Polarity A and B	+UP
VERNIER A and B	CAL
Coupling A and B	DC
VOLTS/DIV A and B	.005
DC OFFSET A and B	OFF

5-13. PERFORMANCE CHECK PROCEDURES.

5-14. INITIAL PERFORMANCE CHECK. Accomplish the initial performance check as follows:

a. Install 1805A with time base plug-in into oscilloscope mainframe and turn on mainframe power. Allow 15 minutes warmup time for stabilization.

NOTE

Set oscilloscope and time base controls for a stable trace on CRT.

b. Set DISPLAY to ALT. Two traces should appear on CRT screen.

c. Rotate channel A POSITION over its range. Channel A trace should move full vertical graticule range.

d. Rotate channel B POSITION over its range. Channel B trace should move full vertical graticule range.

e. Set DISPLAY to A + B (both pushbuttons engaged). Either channel POSITION control should move trace vertically.

f. If instrument fails to meet check, refer to Section VIII of this manual for troubleshooting information.

g. Set 1805A front-panel controls to initial settings.

5-15. POLARITY CHECK. Either channel may be inverted for ±A ±B operation.

Equipment Required:

10:1 divider probe

5-16. Perform polarity check as follows:

a. Set 1805A VOLTS/DIV control (both channels) to 0.5.

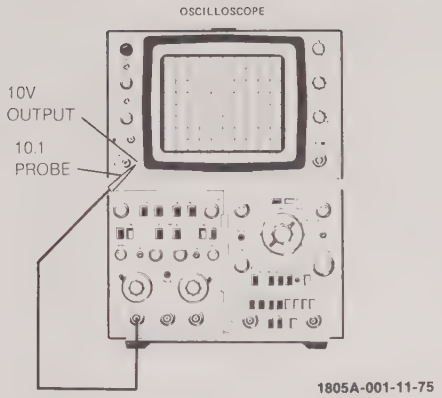

Figure 5-1. Polarity Check Test Setup

b. Center trace on CRT screen.

c. Connect equipment as shown in figure 5-1.

d. Observe square wave in lower half of CRT.

e. Switch polarity to —UP. Observe square wave in upper half of CRT.

f. Repeat steps c through e for channel B.

g. Disconnect calibrator signal.

h. Set 1805A front-panel controls to initial settings.

5-17. DEFLECTION FACTOR. The deflection factor is checked by applying a 400-Hz, voltage-calibrated signal to the input. The displayed signal is compared against the voltage standard.

Equipment Required:

Voltmeter calibrator
24-in. coaxial cable
Adapter

5-18. Perform deflection factor check as follows:

a. Connect equipment as shown in figure 5-2.

b. Set voltmeter calibrator for 400-Hz, 30-mV p-p output signal.

c. Set time base controls to display approximately four cycles.

d. Observe vertical deflection factors specified in table 5-2.

e. Set channel A VOLTS/DIV control to 5.

f. Set voltmeter calibrator output for 30 V.

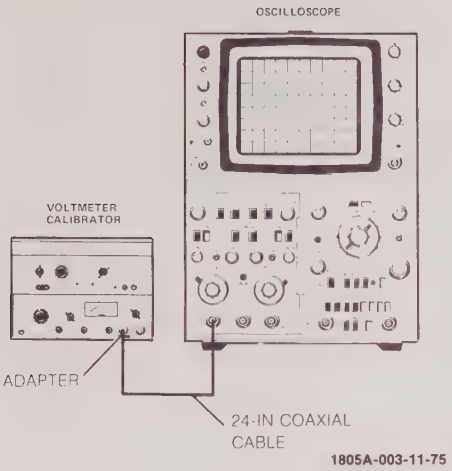

Figure 5-2. Deflection Factor Test Setup

g. Rotate channel A vernier fully counterclockwise. Vernier UNCAL lamp should light and display amplitude should decrease to less than 2.4 divisions.

h. Set channel A vernier to CAL detent.

i. Connect voltmeter calibrator to channel B INPUT connector.

j. Repeat steps b through h for channel B.

k. Disconnect test equipment.

l. Set 1805A front-panel controls to initial settings.

Table 5-2. Deflection Factor Accuracy

Voltmeter Calibrator Settings (Volts p-p)	VOLTS/DIV Settings	Vertical Display (div)
.03	.005	6 ±2% (±.12)
.05	.01	5 ±2% (±.1)
.1	.02	5 ±2% (±.1)
.3	.05	6 ±2% (±.12)
.5	.1	5 ±2% (±.1)
1	.2	5 ±2% (±.1)
3	.5	6 ±2% (±.12)
5	1	5 ±2% (±.1)
10	2	5 ±2% (±.1)
30	5	6 ±2% (±.12)

5-19. DC OFFSET VOLTAGE. The dc offset is checked by applying a dc voltage of sufficient value to drive trace off screen. The dc offset control is then adjusted to return trace to screen.

Equipment Required:

Voltmeter calibrator
24-in. coaxial cable
Adapter

5-20. Perform dc offset check as follows:

a. Connect equipment as shown in figure 5-2.

b. Set 1805A channel A and channel B DC OFFSET controls to ON.

c. Set voltmeter calibrator for +1-Vdc output.

d. Adjust channel A DC OFFSET control to position trace on screen.

e. Set voltmeter calibrator for —1-Vdc output.

f. Adjust channel A DC OFFSET control to position trace on screen.

g. Repeat steps a through f for channel B.

h. Disconnect test equipment.

i. Set 1805A front-panel controls to initial settings.

5-21. RISE TIME. A step with a rise time of less than 400 picoseconds is applied to the vertical input. The displayed rise time is then checked to see that it is less than 3.5 nanoseconds.

Equipment Required:

Fast-rise pulse generator
24-in. coaxial cable

5-22. Perform rise time check as follows:

a. Connect equipment as shown in figure 5-3.

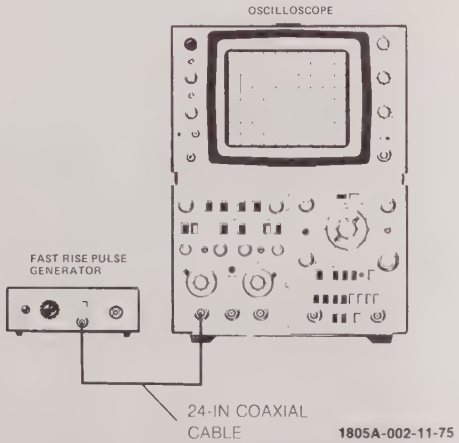

Figure 5-3. Rise Time Test Setup

b. Set 1805A front-panel controls as follows:

VOLTS/DIV (both channels)..... .01
Coupling (both channels)..... 50Ω

c. Set pulse generator for 100-kHz, 60-mV output.

d. Adjust oscilloscope horizontal POSITION control as necessary to measure rise time.

e. Observed rise time shall be less than 3.5 nanoseconds (10% to 90% points).

f. Repeat steps a through e for channel B.

g. Disconnect test equipment.

h. Set 1805A front-panel controls to initial settings.

5-23. BANDWIDTH CHECK. To check the bandwidth, a constant-amplitude signal generator is used to apply an 8-division, 1-MHz reference signal to the input of Model 1805A. The constant-amplitude signal generator frequency is increased to 100 MHz. Displayed amplitude on CRT must be equal to or greater than 5.6 divisions.

Equipment Required:

Constant-amplitude signal generator
10-dB attenuator
Two 24-in. coaxial cables

5-24. Perform bandwidth check as follows:

a. Connect equipment as shown in figure 5-4.

b. Set 1805A channel A and channel B coupling to 50Ω.

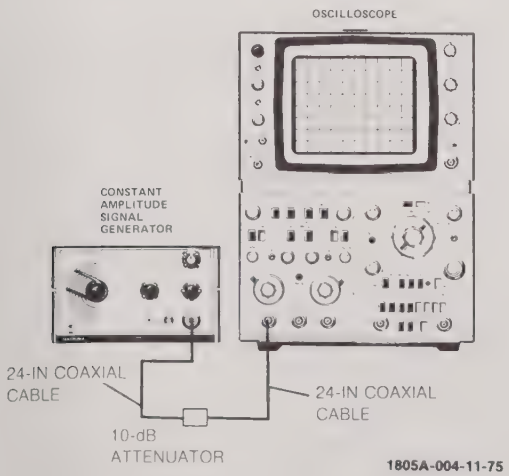

Figure 5-4. Bandwidth Test Setup

c. Set constant-amplitude signal generator for 50 kHz output.

d. Adjust signal generator for 8-division display.

e. Increase signal generator frequency to 100 MHz. Deflection shall be ≥5.6 divisions (3 dB down).

f. Reconnect signal generator and 10-dB attenuator to channel B INPUT.

g. Set DISPLAY and TRIG SOURCE to B.

h. Repeat steps c through e for channel B.

i. Disconnect test equipment.

j. Set 1805A front-panel controls to initial settings.

5-25. COMMON MODE REJECTION. Identical signals are applied to channels A and B with channel B set to the inverted mode. The displayed signal is the common mode signal.

Equipment Required:

Constant-amplitude signal generator
50-ohm BNC tee
24-in. coaxial cable
Two 9-in. coaxial cables

5-26. Perform common mode rejection check as follows:

a. Connect equipment as shown in figure 5-5.

NOTE

Coaxial cables to channel A and B INPUTS must be of equal electrical length.

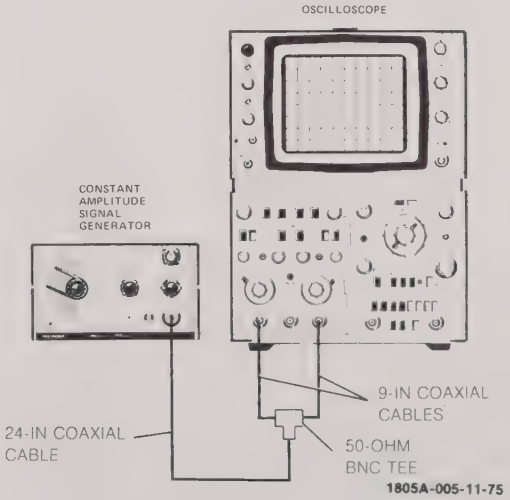

Figure 5-5. CMR Test Setup

b. Set 1805A front-panel controls as follows:

Polarity (channel B)	—UP
VOLTS/DIV (channel A)	.01
Coupling (both channels)	50Ω

c. Set signal generator output for 50-kHz, 8-division display.

d. Set channel A VOLTS/DIV to .005.

e. Set DISPLAY to A + B. Deflection shall be ≤0.16 division.

NOTE

Adjust either channel A or channel B vernier (whichever is most effective) to achieve deflection in steps e and h.

f. Set DISPLAY to A.

g. Set signal generator output to 50-MHz, 6-division display.

h. Set DISPLAY to A + B. Deflection shall be ≤0.6 division.

i. Disconnect test equipment.

j. Set 1805A front-panel controls to initial settings.

5-27. VERTICAL OUTPUT AMPLITUDE. The vertical output signal amplitude is checked against a known input standard.

Equipment Required:

Constant-amplitude signal generator
24-in. coaxial cable
9-in. coaxial cable

5-28. Perform the vertical output amplitude check as follows:

a. Connect equipment as shown in figure 5-6.

b. Set 1805A front-panel controls as follows:

VOLTS/DIV	.05
Coupling (both channels)	50Ω

c. Set signal generator output for 50-kHz, 5-division display.

d. Set DISPLAY to B. Deflection shall be ≥5 divisions.

e. Disconnect test equipment.

f. Set 1805A front-panel controls to initial settings.

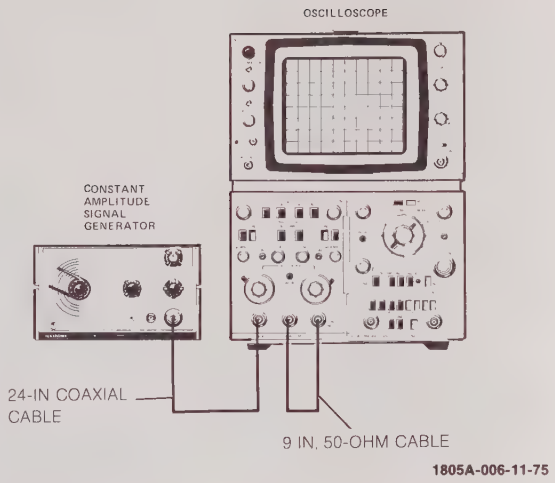

Figure 5-6. Vertical Output Amplitude Test Setup

5-29. VERTICAL OUTPUT BANDWIDTH. The bandwidth of the vertical output amplifier is checked against a known standard.

Equipment Required:

Constant-amplitude signal generator
RF voltmeter
50-ohm tee
50-ohm termination
Two 24-in. coaxial cables

5-30. Perform vertical output bandwidth check as follows:

a. Connect equipment as shown in figure 5-7.

b. Set 1805A input coupling control (both channels) to 50Ω.

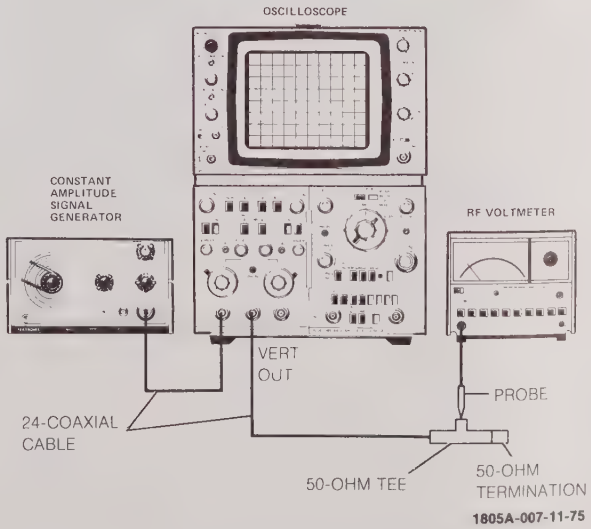

Figure 5-7. Vertical Output Bandwidth Test Setup

c. Set signal generator for 50-kHz, ≈6-division display.

d. Adjust signal generator output for 300-mV indication on RF voltmeter.

e. Increase frequency of signal generator to 50 MHz. RF voltmeter should indicate >212 mV p-p.

f. Repeat steps c through e for channel B.

g. Disconnect test equipment.

h. Set 1805A front-panel controls to initial settings.

5-31. TRIGGERING. Internal triggering is checked against certain vertical deflections on the CRT.

Equipment Required:

Constant-amplitude signal generator
24-in. coaxial cable

5-32. Perform triggering check as follows:

a. Connect signal generator to channel A INPUT connector.

b. Set 1805A channel A VOLTS/DIV control to 0.5.

c. Observe displays as specified in table 5-3.

Table 5-3. Triggering

Time Base Plug-in	Constant-amplitude Signal Generator	Vertical Deflection Required to Trigger
1820C, 1824A 1825A, 1840A	50 MHz	>0.5 division
1841A	100 MHz	>1 division
1820B, 1822A	50 MHz 100 MHz	>0.5 division >2 divisions
1820A, 1821A	50 MHz	>1 division

d. Disconnect test equipment.

e. Set 1805A front-panel controls to initial settings.

5-33. VSWR CHECK. The input standing-wave ratio is checked against known standards.

Equipment Required:

VHF oscillator
Vector voltmeter
Coaxial dual directional coupler
10-dB attenuator
Two 50-ohm tees
Two 50-ohm terminations
24-in. coaxial cable
9-in. coaxial cable

5-34. Perform voltage standing-wave ratio check as follows:

a. Connect equipment as shown in figure 5-8.

b. Set Model 1805A input coupling (both channels) to 50Ω.

c. Set VHF oscillator for 100-MHz output.

d. Set vector voltmeter to measure its channel A input.

e. Set channel A of vector voltmeter to —30-dB range.

f. Set VHF oscillator output to obtain 0-dB reading on vector voltmeter.

g. Set vector voltmeter to measure its channel B input.

h. Subtract channel B reading from channel A reading. Test result given in table 5-4.

i. Switch Model 1805A channel A VOLTS/DIV through remaining ranges and check test results as given in table 5-4.

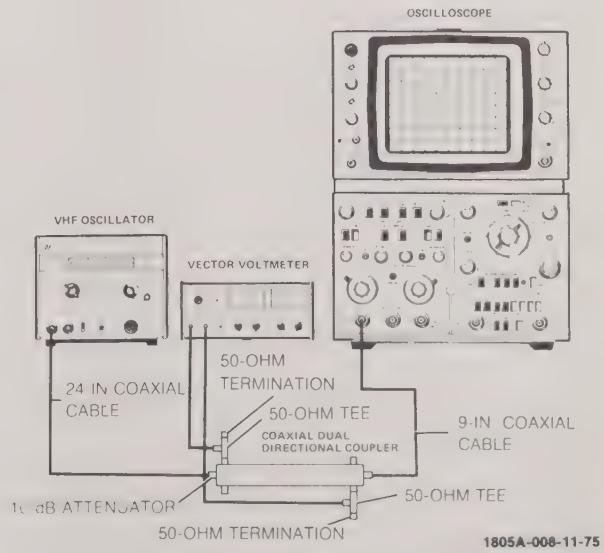

Figure 5-8. VSWR Test Setup

Table 5-4. VSWR

A — B (dB)	Reflection Coefficient	VSWR
>—21 dB	<0.09	<1.2:1

j. Repeat steps c through i for channel B.

k. Disconnect test equipment.

l. Set Model 1805A front-panel controls to initial settings.

5-35. ADJUSTMENTS.

WARNING

Read the Safety Summary at the front of this manual before performing adjustment procedures.

5-36. Adjustment locations are shown in figure 5-9 at the rear of this section. When making adjustments, use a non-metallic screwdriver and recently calibrated test equipment. After adjustments are completed, check the instrument performance by doing the performance checks listed at the beginning of this section.

5-37. DC BALANCE ADJUSTMENT. Perform dc balance adjustment as follows:

a. Set 1805A front-panel controls in accordance with paragraph 5-12, except as follows:

Coupling (both channels)..... GND
DC OFFSET (channel A)..... ON

b. Set oscilloscope time base for auto trigger.

c. Press oscilloscope FIND BEAM switch.

d. Adjust A7R13 until trace is symmetrical about CRT center line, while rotating channel A DC OFFSET control through full range.

e. Set channel A DC OFFSET to OFF.

f. Adjust A2R5 for zero trace shift while switching channel A polarity from +UP to —UP.

g. Set DISPLAY to B.

h. Set TRIG SOURCE to B.

i. Adjust A2R9 for zero trace shift while switching channel B polarity from +UP to —UP.

j. Set 1805A front-panel controls to initial settings.

5-38. SYNC BALANCE ADJUSTMENT. Perform sync balance adjustment as follows:

a. Set 1805A front-panel controls as follows:

Coupling (both channels)..... GND
TRIG SOURCE ..... COMP

b. Connect monitor oscilloscope to VERT OUT connector.

c. Set monitor oscilloscope input coupling to DC.

d. Set monitor oscilloscope input sensitivity to .005 V/div.

e. Adjust A6R56 for zero trace shift on monitor oscilloscope while switching 1805A channel A polarity from +UP to —UP.

f. Set DISPLAY to B.

g. Adjust A6R59 for zero trace shift on monitor oscilloscope while switching 1805A channel B polarity from +UP to —UP.

h. Disconnect monitor oscilloscope.

i. Set 1805A front-panel controls to initial settings.

5-39. SYNC LEVEL ADJUSTMENT. Perform sync level adjustment as follows:

a. Set 1805A input coupling (both channels) to GND.

b. Connect voltmeter to emitter of A6Q13.

c. Adjust A6R114 for —0.7-volt indication on voltmeter.

d. Disconnect voltmeter.

e. Set 1805A front-panel controls to initial settings.

5-40. VERT OUT LEVEL ADJUSTMENT. Perform VERT OUT level adjustment as follows:

a. Set 1805A input coupling (both channels) to GND.

b. Connect voltmeter to front-panel VERT OUT connector.

c. Adjust A6R121 for 0 volt ±50 mV.

d. Disconnect voltmeter.

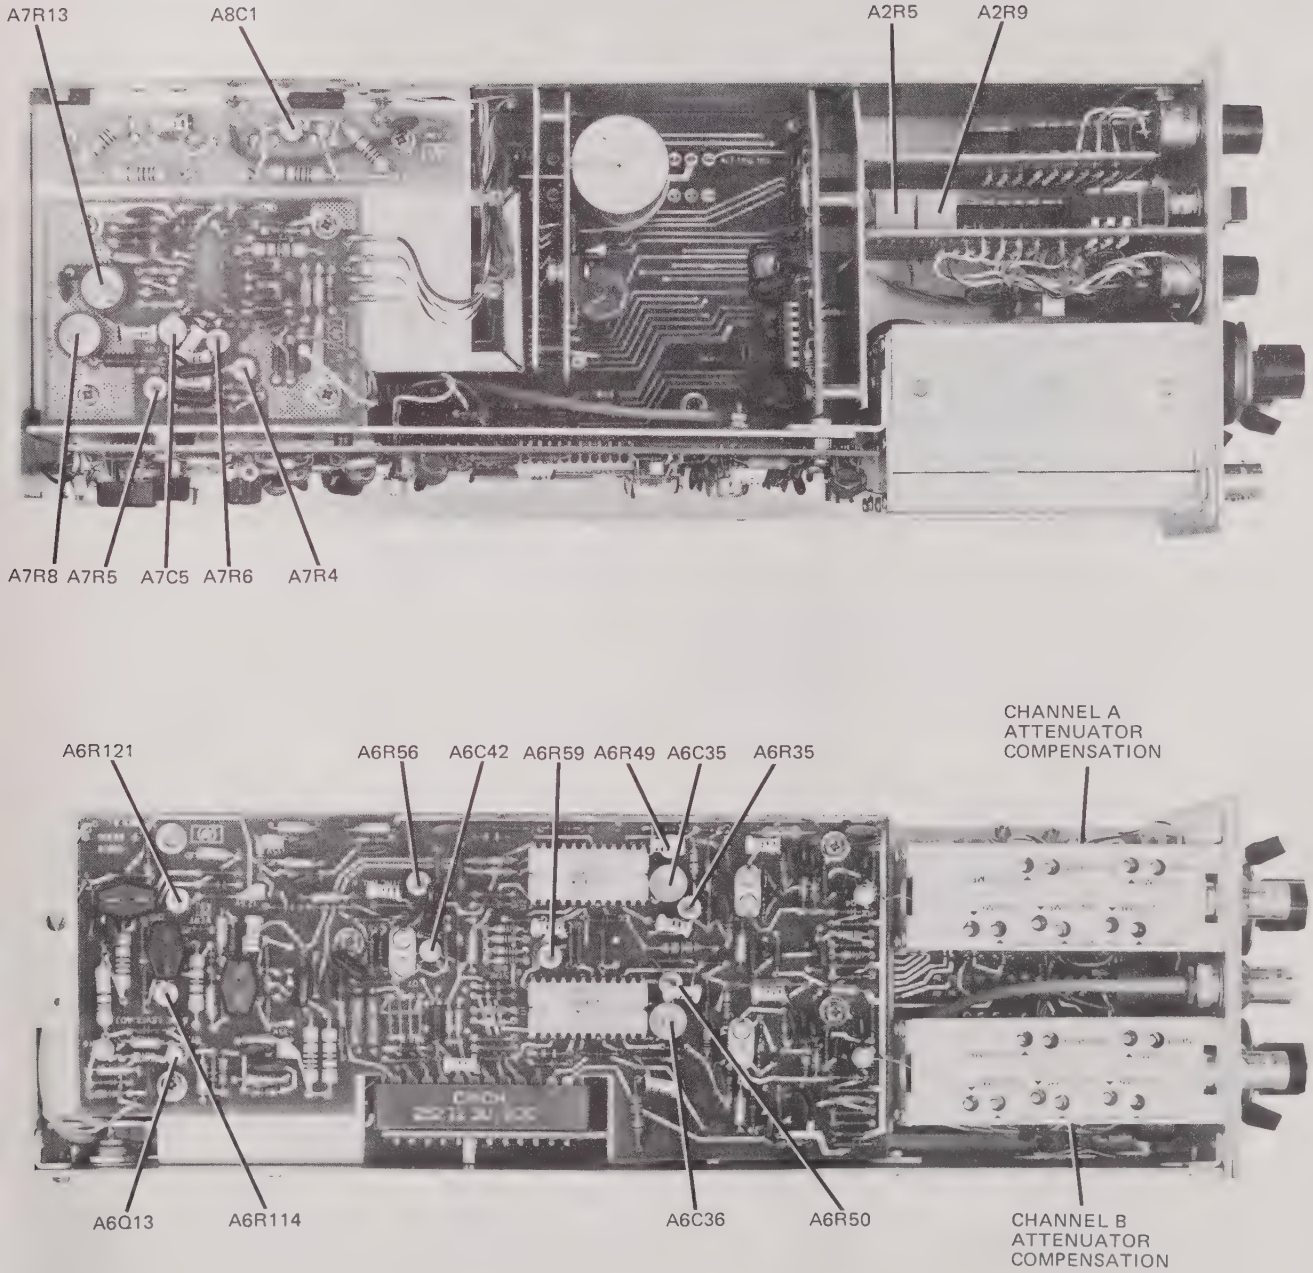

Figure 5-9. Adjustment Locations

e. Set 1805A front-panel controls to initial settings.

5-41. VOLTS/DIV CAL ADJUSTMENT. Calibrate the VOLTS/DIV control as follows:

a. Set 1805A front-panel controls as follows:

DISPLAY ..... B
TRIG SOURCE ..... B

b. Connect voltmeter calibrator output to channel B INPUT connector.

c. Set voltmeter calibrator for 400-Hz, 30-mV p-p output.

d. Adjust oscilloscope time base controls for stable display.

e. Adjust front-panel VOLTS/DIV CAL (R6) potentiometer to midrange.

f. Connect monitor oscilloscope to collector of Q1 (make connection at output board A8).

g. Adjust A7R8 for 9-volt display on monitor oscilloscope.

h. Disconnect monitor oscilloscope.

i. Adjust front-panel VOLTS/DIV CAL potentiometer for 6-division display.

j. Set DISPLAY to A.

k. Set TRIG SOURCE to A.

l. Connect voltmeter calibrator to channel A INPUT connector.

m. Set voltmeter calibrator for 400-Hz, 30-mV p-p output.

n. Adjust A6R35 for 6-division display.

o. Disconnect test equipment.

NOTE

Gain in the 50Ω position may differ from the gain in the AC and DC positions. This difference will be proportional to the amount of resistance in the input lead (1 ohm will cause a 2% variation). If a greater degree of accuracy in the 50Ω position is required perform the following steps:

p. Set 1805A input coupling (both channels) to 50Ω.

q. Connect accurate 30-mVdc signal to channel A INPUT connector.

NOTE

Ensure minimum resistance in input lead.

r. Adjust front-panel VOLTS/DIV CAL potentiometer for exactly 6-division trace displacement.

s. Disconnect test equipment.

t. Set 1805A front-panel controls to initial settings.

5-42. ATTENUATOR ADJUSTMENTS. Perform attenuator adjustments as follows:

a. Remove 1805A from oscilloscope mainframe.

b. Install plug-in extender (HP Model 10407B) in oscilloscope mainframe.

c. Install 1805A and time base plug-in into plug-in extender.

d. Set 1805A front-panel controls as follows:

Coupling (both channels) ..... AC
DISPLAY ..... ALT

e. Connect square-wave generator to channel A INPUT connector.

f. Set square-wave generator for 10-kHz, 6-division, square-wave output.

g. Set channel A VOLTS/DIV control as indicated in table 5-5 and make appropriate adjustments to give best square-wave response.

Table 5-5. Compensation Adjustments

Range	Compensation Adj
.01 V/div	.01 V COMP
.02 V/div	.02 V COMP
.05 V/div	.05 V COMP

h. Connect square-wave generator to channel B INPUT connector.

i. Set TRIG SOURCE to B.

j. Repeat step g for channel B.

k. Disconnect test equipment.

l. Connect LC meter to channel A INPUT connector.

m. Note input capacitance of .005 VOLTS/DIV range.

n. Set channel A VOLTS/DIV control as indicated in table 5-6 and make appropriate adjustments to obtain same input capacitance noted in step m.

Table 5-6. Attenuator Input Adjustments

Range	Input Adj
.01 V/div	.01 V INPUT
.02 V/div	.02 V INPUT
.05 V/div	.05 V INPUT

o. Repeat steps l through n for channel B.

p. Disconnect test equipment.

q. Connect square-wave generator to channel A INPUT connector.

r. Set square-wave generator for 10-kHz, 6-division, square-wave output.

s. Set channel A VOLTS/DIV control as indicated in table 5-7 and make appropriate adjustment to give best square-wave response.

Table 5-7. Compensation Adjustment

Range	Compensation Adj
.1 V/div	.1 V COMP
1 V/div	1 V COMP

t. Repeat steps q through s for channel B.

u. Disconnect test equipment.

v. Connect LC meter to channel A INPUT connector.

w. Note input capacitance on .005 VOLTS/DIV range.

x. Set channel A VOLTS/DIV control as indicated in table 5-8 and make appropriate adjustments to obtain same input capacitance noted in step w.

Table 5-8. Attenuator Input Adjustment

Range	Input Adj
.1 V/div	.1 V INPUT
1 V/div	1 V INPUT

y. Repeat steps v through x for channel B.

z. Disconnect test equipment.

aa. Set 1805A front-panel controls to initial settings.

5-43. PULSE RESPONSE ADJUSTMENTS. Perform pulse response adjustments as follows:

a. Connect pulse generator output to channel A INPUT connector.

b. Set 1805A input coupling (both channels) to 50Ω.

c. Set oscilloscope time base for 0.1 μs/div sweep.

d. Adjust pulse generator for 6-division amplitude pulse.

e. Make adjustments listed in table 5-9 for best pulse response on channel A.

NOTE

Change sweep time as necessary to display the best pulse.

f. Measure pulse rise time. Rise time shall be less than 3.5 ns.

g. Set DISPLAY to B.

h. Set TRIG SOURCE to B.

i. Make adjustments as listed in table 5-10 for best pulse response of channel B.

NOTE

It may be necessary to readjust channel A.

j. Measure rise time. Rise time shall be less than 3.5 ns.

Table 5-9. Channel A Pulse Response Adjustments

High Frequency Corner Adjustment	Designation	Time/division
A7HF3	A7R5	5 uSec
A7HF2	A7R4	.2 uSec
A7HF4	A7C5	.05 uSec
A7HF1	A7R6	.05 uSec
A8HF1	A8C1	.05 uSec
A6HF2	A6R49	.05 uSec
A6HF1	A6C35	.05 uSec
A6HF5	A6C42	.05 uSec

Table 5-10. Channel B Pulse Response Adjustments

High Frequency Corner Adjustment	Designation	Time/division
A6HF4	A6R50	.05 uSec
A6HF3	A6C36	.05 uSec

PERFORMANCE CHECK RECORD

Model 1805A

Instrument Serial Number _____ **Date** _____

Check	Specification	Measured
INITIAL CHECKS		
ALT	two traces	_____
TRIG SOURCE B	two traces	_____
A POSITION	full range	_____
B POSITION	full range	_____
A + B	full range either position control	_____
POLARITY		
+UP	square wave lower half of CRT	_____
—UP	square wave upper half of CRT	_____
DEFLECTION FACTOR ACCURACY		
VOLTS/DIV		A B
.005	6±0.12 div	_____ _____
.01	5±0.10 div	_____ _____
.02	5±0.10 div	_____ _____
.05	6±0.12 div	_____ _____
.1	5±0.10 div	_____ _____
.2	5±0.10 div	_____ _____
.5	6±0.12 div	_____ _____
1	5±0.10 div	_____ _____
2	5±0.10 div	_____ _____
5	6±0.12 div	_____ _____
VERNIER		A B
VOLTS/DIV Vernier ccw	≤2.4 div	_____ _____
DC OFFSET VOLTAGE	adjust DC OFFSET to position trace on screen	A B _____ _____
RISE TIME		A A
6-division display	≤3.5 ns	_____ _____
BANDWIDTH		A B
100 MHz	≥5.6 div	_____ _____

PERFORMANCE CHECK RECORD

Model 1805A

Instrument Serial Number _____ **Date** _____

Check	Specification	Measured
COMMON MODE REJECTION		A B
50 kHz	≤0.16 div	_____ _____
50 MHz	≤0.6 div	_____ _____
VERTICAL OUTPUT AMPLITUDE	≥5 div	A B _____ _____
VERTICAL BANDWIDTH	>212 mV p-p	A B _____ _____
TRIGGERING		
Time Base Plug-in		
1820C	>0.5 division	
1824A	>0.5 division	
1825A	>0.5 division	
1840A	>1.0 division	
1841A	>0.5 division	
1820B (50 MHz)	>0.5 division	
1822A (50 MHz)	>2.0 divisions	
1820B (100 MHz)	>2.0 divisions	
1822A (100 MHz)	>1.0 division	
1820A	>1.0 division	
1821A		
VSWR		A B
VOLTS/DIV		
.01	≥—21 dB	_____ _____
.02	≥—21 dB	_____ _____
.05	≥—21 dB	_____ _____
.1	≥—21 dB	_____ _____
.2	≥—21dB	_____ _____
.5	≥—21 dB	_____ _____
1	≥—21 dB	_____ _____
2	≥—21 dB	_____ _____
5	≥—21 dB	_____ _____

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. The abbreviations used in the parts list are described in table 6-1. Table 6-2 lists the parts in alphanumeric order by reference designation and includes the manufacturer and manufacturer's part number. Table 6-3 contains the list of manufacturers' codes.

6-3. ORDERING INFORMATION.

6-4. To obtain replacement parts from Hewlett-Packard, address order or inquiry to the nearest Hewlett-Packard Sales/Service Office and supply the following information:

a. Instrument model and serial number.

b. HP part number of item(s).

c. Quantity of part(s) desired.

d. Reference designation of part(s).

6-5. To order a part not listed in the table, provide the following information:

a. Instrument model and serial number.

b. Description of the part, including function and location in the instrument.

c. Quantity desired.

Table 6-1. Abbreviations for Replaceable Parts List

A	AMPERE(S)	H	HENRY(IES)	NPN	NEGATIVE-POSITIVE-NEGATIVE	RWV	REVERSE WORKING VOLTAGE
ASSY	ASSEMBLY	HG	MERCURY				
		HP	HEWLETT-PACKARD	NSR	NOT SEPARATELY REPLACEABLE	S-B	SLOW-BLOW
BD	BOARD(S)	HZ	HERTZ			SCR	SILICON CONTROLLED RECTIFIER
BH	BINDER HEAD						
BP	BANDPASS	IF	INTERMEDIATE FREQ.				
		IMPG	IMPREGNATED	OBD	ORDER BY DESCRIPTION	SE	SELENIUM
C	CENTI (10^{-2})	INCD	INCANDESCENT			SEC	SECOND(S)
CAR	CARBON	INCL	INCLUDE(S)	OH	OVAL HEAD	SECT	SECTION(S)
CCW	COUNTERCLOCKWISE	INS	INSULATION(ED)	OX	OXIDE	SI	SILICON
CER	CERAMIC	INT	INTERNAL			SIL	SILVER
CMO	CABINET MOUNT ONLY			P	PEAK	SL	SLIDE
COAX	COAXIAL	K	KILO (10^{3})	PC	PRINTED (ETCHED) CIRCUIT(S)	SP	SINGLE POLE
COEF	COEFFICIENT	KG	KILOGRAM			SPL	SPECIAL
COMP	COMPOSITION			PF	PICOFARADS	ST	SINGLE THROW
CONN	CONNECTOR(S)	LB	POUND(S)	PHL	PHILLIPS	STD	STANDARD
CRT	CATHODE-RAY TUBE	LH	LEFT HAND	PIV	PEAK INVERSE VOLTAGE(S)		
CW	CLOCKWISE	LIN	LINEAR TAPER			TA	TANTALUM
		LOG	LOGARITHMIC TAPER	PNP	POSITIVE-NEGATIVE-POSITIVE	TD	TIME DELAY
D	DECI (10^{-1})	LPF	LOW-PASS FILTER(S)			TFL	TEFLON
DEPC	DEPOSITED CARBON	LVR	LEVER	P/O	PART OF	TGL	TOGGLE
DP	DOUBLE POLE			PORC	PORCELAIN	THYR	THYRISTOR
DT	DOUBLE THROW	M	MILLI (10^{-3})	POS	POSITION(S)	TI	TITANIUM
		MEG	MEGA (10^{6})	POT	POTENTIOMETER(S)	TNLDIO	TUNNEL DIODE(S)
ELECT	ELECTROLYTIC	MET FILM	METAL FILM	P-P	PEAK-TO-PEAK	TOL	TOLERANCE
ENCAP	ENCAPSULATED	MET OX	METAL OXIDE	PRGM	PROGRAM	TRIM	TRIMMER
EXT	EXTERNAL	MFR	MANUFACTURER	PS	POLYSTYRENE		
		MINAT	MINIATURE	PWV	PEAK WORKING VOLTAGE	U	MICRO (10^{-6})
F	FARAD(S)	MOM	MOMENTARY				
FET	FIELD-EFFECT TRANSISTOR(S)	MTG	MOUNTING			V	VOLTS
		MY	MYLAR	RECT	RECTIFIER(S)	VAR	VARIABLE
FH	FLAT HEAD			RF	RADIO FREQUENCY	VDCW	DC WORKING VOLT(S)
FIL H	FILLISTER HEAD	N	NANO (10^{-9})	RFI	RADIO FREQUENCY INTERFERENCE		
FXD	FIXED	N/C	NORMALLY CLOSED			W	WATT(S)
		NE	NEON	RH	ROUND HEAD OR RIGHT HAND	W/	WITH
G	GIGA (10^{9})	N/O	NORMALLY OPEN			WIV	WORKING INVERSE VOLTAGE
GE	GERMANIUM	NOP	NEGATIVE POSITIVE ZERO (ZERO TEMPERATURE COEFFICIENT)	RMO	RACK MOUNT ONLY	W/O	WITHOUT
GL	GLASS			RMS	ROOT MEAN SQUARE	WW	WIREWOUND
GRD	GROUNDED						

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			CHASSIS PARTS		
A1	01805 66511	1	BOARD ASSY:TOP SWITCH	28480	01805-66511
A2	01805 66502	1	BOARD ASSY:BOTTOM SWITCH	28480	01805-66502
A3	01805-66503	1	BOARD ASSY:CHANNEL SYNC	28480	01805 66503
A4	01805 66504	1	BOARD ASSY:MOTHER	28480	01805-66504
A5	01805-66505	1	BOARD ASSY:+35 VOLT SUPPLY	28480	01805-66505
A6	01805-66509	1	BOARD ASSY:PREAMP/SYNC	28480	01805-66509
A7	01805-66510	1	BOARD ASSY:MAIN AMPLIFIER	28480	01805-66510
A8	01805-66512	1	BOARD ASSY:OUTPUT	28480	01805-66512
A9	01805-61609	1	CABLE ASSY:DELAY LINE	28480	01805-61609
A10	5081-3038	1	ATTENUATOR ASSY:CHANNEL A	28480	5081 3038
A11	5081-3037	1	ATTENUATOR ASSY:CHANNEL B	28480	5081 3037
DS1	2140-0352	1	LAMP:INCANDESCENT 5.0V 0.06A	71744	683
E2	5000-0543	4	HOLDER:TRANSISTOR	28480	5000-0543
E3	5020-0513	4	CONTACT:ELECTRICAL	28480	5020-0513
E4	00183-67701	1	BASE:PILOT LIGHT	28480	00183-67701
E5	5080-9670		TSTR:MATCHED PAIR	28480	5080 9670
H1	2190-0084	5	WASHER-LK INTL T NO. 1/4 .256-IN-ID .408-IN-OD	78189	1214-05
H2	0590-0043	1	NUT-HEX-DBL CHAM 1/4-32-THD .375 THK	28480	0590 0043
H3	2950-0072	6	NUT-HEX-DBL CHAM 1/4-32-THD .062 THK	82389	P-1975
H4	0360-0040	1	TERMINAL, SLDR LUG, 1/4-SCR, .25/.093	73734	1958
H5	2190-0016	1	WASHER-LK INTL T NO. 3/8 .377-IN-ID .507-IN-OD	78189	1920-02
H6	2950-0043	1	NUT-HEX-DBL CHAM 3/8-32-THD .094 THK	73734	2X28200
H7	2200-0103	18	SCREW-MACH 4-40 .25-IN-LG PAN HD	28480	2200-0103
H8	2950-0145	2	NUT-SPECIALTY 15/32-32-THD .15-THK	28480	2950-0145
H9	2200-0165	6	SCREW-MACH 4-40 .25-IN-LG 82 DEG FL HD	28480	2200-0165
H10	2200-0030	19	SCREW-MACH 4-40 .25-IN-LG PAN HD SLT-REC	28480	2200-0030
H11	2200-0109	2	SCREW-MACH 4-40 .438 IN-LG PAN HD	28480	2200-0109
J1			PART OF W1		
J2	1250-0897	1	CONNECTOR:PF BULKHEAD JACK RECEPTACLE	98291	52-149-0000
J3	5060-0467	1	CONNECTOR:PROBE POWER	28480	5060-0467
MP1	0340-0039	4	INSULATOR:BUSHING	28480	0340 0039
MP2	0340-0152	4	INSULATOR:TRANSISTOR	28480	0340 0152
MP3	5040-5996	2	LEVER:COUPLING	28480	5040 5996
MP4			DELETED		
MP5	0370-0938	2	BEZEL, PUSHBUTTON KNOB:GRAY	28480	0370 0938
MP6	1490-0968	1	BUSHING:POTENTIOMETER 1/4 32 EXT THRD	00000	OBD
MP7	5040-5994	1	SPACER:VOLTS/DIV CHANNEL B	28480	5040-5994
MP8	5040-5992	1	SPACER:VOLTS/DIV CHANNEL A	28480	5040-5992
MP9	00180-67402	2	KNOB:ASSY BLK ARROW		
MP10	00183-67406	6	PUSHBUTTON ASSY	28480	00183-67406
MP11	01803-67407	2	KNOB ASSY:CAL	28480	01803-67407
MP12	01805-00201	1	PANEL:FRONT	28480	01805-00201
MP13	01805-00206	1	PANEL:SUB	28480	01805-00206
MP14	01805-00203	1	PANEL:REAR	28480	01805-00203
MP15	01805-00602	1	SHIELD:SWITCH BOARD	28480	01805-00602
MP16	01805-01204	1	BRACKET:ATTENUATOR	28480	01805-01204
MP17	01805-01203	1	BRACKET:POWER SUPPLY	28480	01805-01203
MP18	01805-04701	1	SUPPORT:PLUG-IN	28480	01805-04701
MP19	01805-60102	1	CHASSIS ASSY	28480	01805 60102
MP20	01805-67401	2	KNOB ASSY:ATTENUATOR	28480	01805 67401
MP21	01805-67402	2	KNOB ASSY:BLANK	28480	01805 67402
MP22	01830-67402	2	PUSHBUTTON	28480	01830 67402
MP23	01841-67404	2	PUSHBUTTON ASSY	28480	01841-67404
MP24	01805 04103	1	COVER:PRE AMP	28480	01805 04103
Q1	1854-0567		TRANSISTOR NPN SI TO-39 PD=1W FT=800 MHZ	28480	1854-0567
Q2	1854-0567		TRANSISTOR NPN SI TO-39 PD=1W FT=800 MHZ	28480	1854-0567
Q3	1854 0567		TRANSISTOR NPN SI TO-39 PD=1W FT=800 MHZ	28480	1854 0567
Q4	1854-0567		TRANSISTOR NPN SI TO-39 PD=1W FT=800 MHZ	28480	1854 0567
R1	0811-0625		RESISTOR WW 140 OHM 1% 7.5W	28480	0811-0625
R2	0811-3150	2	R:FXD WW 560 OHM 1% 7W	28480	0811 3150
R3	0811-3150		R:FXD WW 560 OHM 1% 7W	28480	0811 3150
R4	2100 2066	2	R:VAR COMP 2K OHM 20% LIN 1/2W	28480	2100 2066
R5	2100 2066		R:VAR COMP 2K OHM 20% LIN 1/2W	28480	2100-2066
R6	2100-2062	1	R:VAR COMP 500 OHM 10% LIN 1/2W	28480	2100-2062
R7	2100-3277	2	RESISTOR VAR PREC 5K 20%	28480	2100-3277
R8	2100 3277		RESISTOR VAR PREC 5K 20%	28480	2100 3277
R9	2100-2588	2	R:VAR COMP 5K OHM 10% 10 CLOG 1/4W	28480	2100 2588
R10	2100 2588		R:VAR COMP 5K OHM 10% 10 CLOG 1/4W	28480	2100-2588
W1	01805-61602	1	CABLE ASSY:VERTICAL OUTPUT	28480	01805 61602
W2	01805-61603	1	CABLE ASSY:FRONT PANEL	28480	01805-61603
W3	01805 61607	1	CABLE ASSY:OUTPUT	28480	01805 61607

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	01805-66511	1	BOARD ASSY:TOP SWITCH	28480	01805-66511
A1CR1	1901-0040	8	DIODE:SILICON 30MA 30WV	07263	FDG1088
A1MP1	3131-0252	12	SPACER:STANDOFF	28480	3131-0252
A1R1	0684-1031	4	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R2	0698-3439	2	R:FXD MET FLM 178 OHM 1% 1/8W	28480	0698-3439
A1R3	0698-3439		R:FXD MET FLM 178 OHM 1% 1/8W	28480	0698-3439
A1S1	3101-0534	1	PUSHBUTTON SWITCH ASSY	28480	3101-0534
A1S2			PART OF A1S1		
A1S3			PART OF A1S1		
A1S4			PART OF A1S1		
A1TB1	01805-26511	1	BOARD:BLANK PC	28480	01805-26511
A2	01805-66502	1	BOARD ASSY:BOTTOM SWITCH	28480	01805-66502
A2MP1	3131-0252		SPACER:STANDOFF	28480	3131-0252
A2R1	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A2R2	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CV 1031
A2R3	0757-0464	2	R:FXD MET FLM 90.9K OHM 1% 1/8W	28480	0757-0464
A2R4	0757-0279	2	R:FXD MET FLM 3.16K OHM 1% 1/8W	28480	0757-0279
A2R5	2100-3203	2	R:VAR 5K OHM	28480	2100-3203
A2R6	0757-0430	2	R:FXD MET FLM 2.21K OHM 1% 1/8W	28480	0757-0430
A2R7	0757-0464		R:FXD MET FLM 90.9K OHM 1% 1/8W	28480	0757-0464
A2R8	0757-0279		R:FXD MET FLM 3.16K OHM 1% 1/8W	28480	0757-0279
A2R9	2100-3203		R:VAR 5K OHM	28480	2100-3203
A2R10	0757-0430		R:FXD MET FLM 2.21K OHM 1% 1/8W	28480	0757-0430
A2R11	0757-0415	4	R:FXD MET FLM 475 OHM 1% 1/8W	28480	0757-0415
A2R12	0757-0442	2	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A2R13	0757-0415		R:FXD MET FLM 475 OHM 1% 1/8W	28480	0757-0415
A2R14	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A2R15	0757-0159	2	RESISTOR 1K OHM 1% 1/2W	28480	0757 0159
A2R16	0757-0159		RESISTOR 1K OHM 1% 1/2W	28480	0757-0159
A2S1	3101-0533	1	PUSHBUTTON SWITCH ASSY	28480	3101-0533
A2S2			PART OF A2S1		
A2S3			PART OF A2S1		
A2S4			PART OF A2S1		
A2S5			PART OF A2S1		
A2S6			PART OF A2S1		
A2TB1	01805-26502	1	BOARD:BLANK PC	28480	01805-26502
A2VR1	1902-0041	1	DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A2VR2	1902-0041	1	DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A3	01805-66503	1	BOARD ASSY CHANNEL/SYNC	28480	01805-66503
A3C1	0160-3451	44	C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25 CDH
A3C2	0140-0149	1	C:FXD MICA 470 PF 5%	72136	DM15F471J3S
A3C3	0180-0291	7	C:FXD ELECT 1.0UF 10% 35VDCW	56289	150D105X9035A2 DYS
A3C4	0160-2215	2	C:FXD MICA 750 PF 5%	28480	0160-2215
A3C5	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A3C6	0160-2215		C:FXD MICA 750 PF 5%	28480	0160-2215
A3C7	0150-0059	1	C:FXD CER 3.3-0.25 PF 500VDCW	72982	301-000-C0J0-339C
A3C8	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25 CDH
A3C9	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A3C10	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A3C11	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2 DYS
A3C12	0140-0198	2	C:FXD MICA 200 PF 5%	72136	ROM15F201J3C
A3C13	0140-0198	1	CAPACITOR FXD 200 PF 5%	72136	RDM15F201J3C
A3CR1	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3Q1	1854-0071	11	TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q2	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q3	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q4	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q5	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q6	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q7	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3Q8	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A3R1	0757-0283	1	R:FXD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
A3R2	0757-0198	1	R:FXD MET FLM 100 OHM 1% 1/2W	28480	0757-0198
A3R3	0757-0444	4	R:FXD MET FLM 12.1K OHM 1% 1/8W	28480	0757-0444
A3R4	0757-0441	1	R:FXD MET FLM 8.25K OHM 1% 1/8W	28480	0757-0441
A3R5	0698-3150	1	R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A3R6	0757-0273	2	R:FXD MET FLM 3.01K OHM 1% 1/8W	28480	0757-0273
A3R7	0757-0407	12	R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A3R8	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A3R9	0757-0437	1	R:FXD MET FLM 4750 OHM 1% 1/8W	28480	0757-0437
A3R10	0757-0420	1	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A3R11	0757 0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A3R12	0698-0084	1	R:FXD MET FLM 2.15K OHM 1% 1/8W	28480	0698-0084
A3R13	0757-0427	2	R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3R14	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3U1	1820-0142	1	INTEGRATED CIRCUIT:4 INPUT, 2-OR/NOR	04713	MC1004P
A3U2	1820-0102	1	INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A3VR1	1902-3096	1	DIODE BREAKDOWN:5.23V 5% 400 MW	28480	1902-3096
A3XA1	1251-2034	2	CONNECTOR:PC EDGE (2 X 10) 20 CONTACT	71785	252-10-30-300
A3XA2	1251-2034		CONNECTOR:PC EDGE (2 X 10) 20 CONTACT	71785	252-10-30-300

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3XU1	1200-0441	2	SOCKET:IC 14 PIN MINIATURE	28480	1200-0441
A3XU2	1200-0441		SOCKET:IC 14 PIN MINIATURE	28480	1200-0441
A4	01805-66504	1	BOARD ASSY:MOTHER	28480	01805-66504
A4C1	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C2	0160-3451		C:FXD CER 0.01 UF +80 20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C3	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C4	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C5	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25 CDH
A4C6	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C7	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C8	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C9	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C10	0160-3451		C:FXD CER 0.01 UF +80 20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C11	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C12	0160-3451		C:FXD CER 0.01 UF +80 20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C13	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C14	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C15	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A4C16	0180-0094		C:FXD ELECT 100UF +75–10% 25VDCW	56289	30D107G025DD2-DSM
A4C17	0180-0094		C:FXD ELECT 100UF +75–10% 25VDCW	56289	30D107G025DD2-DSM
A4P1	01801-27601	1	P:MALE 24 PIN	28480	01801-27601
A4XA3	1251-2026	1	CONNECTOR:PC 36 CONTACTS	71785	252-18-30-300
A4XA5	1251-0472	1	CONNECTOR:PC 12 CONTACTS	71785	252-06-30-300
A4XA6	1251-1626		CONNECTOR:PC (2 X12) 24 CONTACT	71785	252-12-30-300
A5	01805-66505	1	BOARD ASSY: +35 VOLT SUPPLY	28480	01805-66505
A5C1	0160-3665	1	C:FXD CER 0.01 UF +80–20% 500VDCW	56289	C071A501K103ZS25-CDH
A5C2	0180-2351	1	C:FXD ELECT 2000 UF +75–10% 50VDCW	56289	39D243
A5C3	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25 CDH
A5C4	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A5C5	0180-0116	1	C:FXD ELECT 6.8 UF 10% 35VDCW	56289	150D685X9035B2-DYS
A5CR1	1901-0045	4	DIODE:SILICON 0.75A 100PIV	04713	SR1358 7
A5CR2	1901-0045		DIODE:SILICON 0.75A 100PIV	04713	SR1358-7
A5CR3	1901-0045		DIODE:SILICON 0.75A 100PIV	04713	SR1358-7
A5CR4	1901-0045		DIODE:SILICON 0.75A 100PIV	04713	SR1358-7
A5Q1	1854-0013	1	TSTR:SI NPN	80131	2N2218A
A5Q2	1854-0300	1	TSTR:SI NPN	28480	1854-0300
A5Q3	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A5Q4	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A5Q5	1854-0071		TSTR:SI NPN (SELECTED FROM 2N3704)	28480	1854-0071
A5R1	0757-0124	1	R:FXD MET FLM 39.2K OHM 1% 1/8W	28480	0757-0124
A5R2	0757-0444		R:FXD MET FLM 12.1K OHM 1% 1/8W	28480	0757-0444
A5R3	0811-1670	1	R:FXD WW 2.2 OHM 5% 2W	28480	0811-1670
A5R4	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A5R5	0684-6831	1	R:FXD COMP 68K OHM 10% 1/4W	01121	CB 6831
A5R6	0684-1031		RESISTOR 10K OHM 10% 1/4W	01121	CB 1031
A5TB1	01805-26505	1	BOARD:BLANK PC	28480	01805-26505
A6	01805-66509	1	BOARD ASSY: PREAMP/SYNC (A6U1 AND A6U2 NOT INCLUDED - ORDER SEPARATELY)	28480	01805-66509
A6C1	0160-3508	2	C:FXD CER 1.0 UF +80 -20% 50VDCW	72982	8131-050-651-105M
A6C2	0160-3508		C:FXD CER 1.0 UF +80 -20% 50VDCW	72982	8131-050-651-105M
A6C3	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C4	0160-3558	8	C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C5	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C6	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C7	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C8	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C9	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C10	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C11	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C12	0180-0230	15	C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C13	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2 DYS
A6C14	0180-0197	1	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C15	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C16	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C17	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C18	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C19	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
A6C20	0160-3558		C:FXD CER 0.1 UF 20% 50VDCW	72982	8121-050-651-104M
*A6C21	0160-3567	4	C:FXD CER 10.0 PF 5% 100VDCW (FACTORY SELECTED VALUE)	72982	8101-100-COG-100J
*A6C22	0160 3567		C:FXD CER 10.0 PF 5% 100VDCW (FACTORY SELECTED VALUE)	72982	8101-100-COG-100J
A6C23	0160-3652	2	C:FXD CER 4.7 PF 200VDCW	72982	8101-A200-COG-479K
A6C24	0160-3652		C:FXD CER 4.7 PF 200VDCW	72982	8101-A200-COG 479K
A6C25	0160-3447	4	C:FXD CER 470 PF 10% 1000VDCW	56289	C016B102F471KS25-CDH
A6C26	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C27	0160 3447		C:FXD CER 470 PF 10% 100VDCW	56289	C016B102F471KS25-CDH

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6C28	0160-3447		C:FXD CER 470 PF 10% 100VDCW	56289	C016B102F471KS25-CDH
A6C29	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C30	0160-3447		C:FXD CER 470 PF 10% 1000VDCW	56289	C016B102F471KS25-CDH
A6C31	0160-2257	6	C:FXD CER 10 PF 5% 500VDCW	72982	301-000-C0H0-100J
A6C32	0160-2257		C:FXD CER 10 PF 5% 500VDCW	72982	301-000-C0H0-100J
A6C33	0160-3565		C:FXD CER 6.8 PF 100VDCW	72982	8101-100-COG-689J
A6C34	0160 3565		C:FXD CER 6.8 PF 100VDCW	72982	8101-100-COG-689J
A6C35	0121-0061	2	C:VAR CER 5.5–18 PF NPO	72982	538-011A 5.5–18
A6C36	0121-0061		C:VAR CER 5.5 - 18 PF NPO	72982	538-011A 5.5–18
A6C37	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C38	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C39	0160-2257		C:FXD CER 10 PF 5% 500VDCW	72982	301-000-C0H0-100J
A6C40	0140-0190	2	C:FXD MICA 39 PF 5%	72136	RDM15E390J3C
A6C41	0140-0190		C:FXD MICA 39 PF 5%	72136	RDM15E390J3C
A6C42	0121 0467		C:VAR CER 3.0–9.0 PF 100VDCW	72982	511-000-3-9A
A6C43	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C44	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C45	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C46	0160-3451		C:FXD CER 0.01 CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C47	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C48	0160-0161		C:FXD MY 0.01 UF 10% 200VDCW	56289	192P10392-PTS
A6C49	0160-0161		C:FXD POLY .01UF +10% 200VDCW	56289	292P10392
A6C50	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F03ZS25-CDH
A6C51	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C52	0160-2257		C:FXD CER 10 PF 5% 500VDCW	72982	301-000-C0H0-100J
A6C53	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C54	0160-2201		C:FXD MY 51PF 300VDCW	72136	RDM15E430J3C
A6C55	0180-0230		C:FXD ELECT 1.0 UF 20% 50VDCW	56289	150D105X0050A2-DYS
A6C56	0160-3565		C:FXD CER 6.8 PF ±0.5 PF 100WVDC	28480	0160-3565
A6C57	0160-0174		C:FXD CER 0.47 UF +80% –20% 25VDCW	56289	5C11B75-CML
A6C58	0160-0174		C:FXD CER 0.47 UF +80% –20% 25VDCW	56289	5C11B75-CML
A6C59	0180-0230		C:FXD ELECT 1.0 UF 10% 50VDCW	56289	150D105X0050A2-DYS
A6C60	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C61	0160-3451		C:FXD CER 0.01 UF +80 -20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C62	0180-0228		C:FXD ELECT 22UF 10% 15VDCW	56289	150D226X901582
A6C63	1060-3451		C:FXD CER 0.01 UF +80% -20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C64	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A6C65	0160-2257		C:FXD CER 10 PF 5% 500VDCW	72982	3001-000-C0H0-100J
A6C66	0160-2257		C:FXD CER 10 PF 5% 500VDCW	72982	3001-000-C0H0-100J
A6C67	0122-0247		C:VAR CER 10 PF 10% 60WV	04713	1N5140
A6C68	0122-0247		C:VAR CER 10 PF 10% 60WV	04713	1N5140
*A6C69	0160-3652		C:FXD CER 4.7 PF ±0.5 PF 200WVDC (FACTORY SELECTED VALUE)	28480	0160-3652
*A6C70	0160-3652		C:FXD CER 4.7 PF ±0.5 PF 200WVDC (FACTORY SELECTED VALUE)	28480	0160-3652
*A6C71	0160-3652		C:FXD CER 4.7 PF ±0.5 PF 200WVDC (FACTORY SELECTED VALUE)	28480	0160-3652
*A6C72	0160-3652		C:FXD CER 4.7 PF ±0.5 PF 200WVDC (FACTORY SELECTED VALUE)	28480	0160-3652
A6CR1	1901-0179	4	DIODE:SILICON 15WV	28480	1901-0179
A6CR2	1901-0179		DIODE:SILICON 15WV	28480	1901-0179
A6CR3	1901-0179		DIODE:SILICON 15WV	28480	1901-0179
A6CR4	1901-0179		DIODE:SILICON 15WV	28480	1901-0179
A6CR5	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR6	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR7	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR8	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A6E1	1205-0204	3	HEAT DISSIPATOR:SEMICONDUCTOR	28480	1205-0204
A6E2	1205-0204		HEAT DISSIPATOR:SEMICONDUCTOR	28480	1205-0204
A6E3	1205-0204		HEAT DISSIPATOR:SEMICONDUCTOR	28480	1205-0204
A6L1	9100-2285	2	COIL/CHOKE 560 UH 10%	13019	09-A561K
A6L2	9100-2285		COIL/CHOKE 560 UH 10%	13019	09-A561K
A6L3	9100-2251	8	COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L4	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L5	9100-2267		COIL:FXD RF 18 UH	28480	9100-2267
A6L6	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L7	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L8	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L9	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A6L10	9170-0029		BEAD:FERRITE	02114	56-590-65A2/A4
A6L11	9170-0029		BEAD:FERRITE	02114	56-590-65A2/A4
A6L12	9170-0209		BEAD:FERRITE	02114	56-590-65A2/A4
A6L13	9170-0029		CORE:FERRITE BEAD (FACTORY SELECTED)	02114	56-590-65A2/4A
A6L14	9170-0029		CORE:FERRITE BEAD (FACTORY SELECTED)	02114	56-590-65A2/4A
A6MP1	0380-0321	2	SPACER:CAPTIVE	00866	0380-0321
A6MP2	0380-0321		SPACER:CAPTIVE	00866	0380-0321
A6Q1	1855-0383	2	TSTR:DUAL FET SI N-CHANNEL	28480	1855-0383
A6Q2	5080-9675		TSTR:MATCHED QUAD	28480	5080 9675

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6Q3			TSTR:MATCHED P/O A6Q2		
A6Q4	1855-0383		TSTR:DUAL FET SI N-CHANNEL	28480	1855-0383
A6Q5			TSTR:MATCHED P/O A6Q2		
A6Q6			TSTR:MATCHED P/O A6Q2		
A6Q7	5080-9674		TSTR:MATCHED PAIR	28480	5080-9674
A6Q8			TSTR:MATCHED P/O A6Q7		
A6Q9	1853-0203	3	TSTR:SI PNP	28480	1853-0203
A6Q10	1853-0203		TSTR:SI PNP	28480	1853-0203
A6Q11	1853-0061	2	TSTR:SI PNP	28480	1853-0061
A6Q12	1853-0061		TSTR:SI PNP	28480	1853-0061
A6Q13	1854-0019	3	TSTR:SI NPN	28480	1854-0019
A6Q14	1853-0203		TSTR:SI PNP	28480	1853-0203
A6Q15	1854-0019		TSTR:SI NPN	28480	1854-0019
A6Q16	1854-0019		TSTR:SI NPN	28480	1854-0019
A6R1	0757 0280	8	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R2	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R3	0757 0417	4	R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A6R4	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A6R5	0757 0436	4	R:FXD MET FLM 4.32K OHM 1% 1/8W	28480	0757-0436
A6R6	0757-0436		R:FXD MET FLM 4.32K OHM 1% 1/8W	28480	0757-0436
A6R7	0757-0436		R:FXD MET FLM 4.32K OHM 1% 1/8W	28480	0757-0436
A6R8	0757-0436		R:FXD MET FLM 4.32K OHM 1% 1/8W	28480	0757 0436
A6R9	0698 3429	2	R:FXD MET FLM 19.6 OHM 1% 1/8W	28480	0698-3429
A6R10	0698-3429		R:FXD MET FLM 19.6 OHM 1% 1/8W	28480	0698 3429
A6R11	0757 0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757 0407
A6R12	0757 0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A6R13	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R14	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A6R15	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R16	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R17	0757-0180	2	R:FXD MET FLM 31.6 OHM 1% 1/8W	28480	0757-0180
A6R18	0757-0180		R:FXD MET FLM 31.6 OHM 1% 1/8W	28480	0757-0180
A6R19	0757 0274	5	R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A6R20	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A6R21	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A6R22	0757 0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A6R23	0698-7196	8	R:FXD FLM 21.5 OHM 2% 1/8W	28480	0698 7196
A6R24	0698-7196		R:FXD FLM 21.5 OHM 2% 1/8W	28480	0698-7196
A6R25	0698-7196		R:FXD FLM 21.5 OHM 2% 1/8W	28480	0698-7196
A6R26	0698-7196		R:FXD FLM 21.5 OHM 2% 1/8W	28480	0698-7196
A6R27	0757-0419	4	R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R28	0757 0419		R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R29	0757-0419		R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R30	0757-0419		R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R31	0757-0409	2	R:FXD MET FLM 274 OHM 1% 1/8W	28480	0757-0409
A6R32	0757-0409		R:FXD MET FLM 274 OHM 1% 1/8W	28480	0757-0409
A6R33	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R34	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R35	2100 2216	1	R:VAR MET FLM 5K OHM 10% LIN 1/8W	28480	2100-2216
A6R36	0757-0418	1	R:FXD MET FLM 619 OHM 1% 1/8W	28480	0757-0418
A6R37	0757-0733	2	R:FXD MET FLM 1100 OHM 1% 1/4W	28480	0757-0733
A6R38	0698-7931		RESISTOR 1.5K 10% .125W CC	01121	BB1521
A6R39	0757 0733		R:FXD MET FLM 1100 OHM 1% 1/4W	28480	0757-0733
A6R40	0698-7931		RESISTOR 1.5K 10% .125W CC	01121	BB1521
A6R41	0698-3378	4	R:FXD CARBON 51 OHM 5% 1/8W	28480	0698-3378
A6R42	0698-7203		R:FXD FLM 42.2 OHM 2% 1/8W	28480	0698 7203
A6R43	0698 7203		R:FXD FLM 42.2 OHM 2% 1/8W	28480	0698-7203
A6R44	0698-3378		R:FXD CARBON 51 OHM 5% 1/8W	28480	0698-3378
A6R45	0698-3378		R:FXD CARBON 51 OHM 5% 1/8W	28480	0698-3378
A6R46	0698-7203		R:FXD FLM 42.2 OHM 2% 1/8W	28480	0698-7203
A6R47	0698 7203		R:FXD FLM 42.2 OHM 2% 1/8W	28480	0698-7203
A6R48	0698-3378		R:FXD CARBON 51 OHM 5% 1/8W	28480	0698-3378
A6R49	2100-1984	4	R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-1984
A6R50	2100-1984		R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-1984
A6R51	0757-0281	4	R:FXD MET FLM 2.74K OHM 1% 1/8W	28480	0757-0281
A6R52	0757-0281		R:FXD MET FLM 2.74K OHM 1% 1/8W	28480	0757 0281
A6R53	0757-0281		R:FXD MET FLM 2.74K OHM 1% 1/8W	28480	0757-0281
A6R54	0757-0281		R:FXD MET FLM 2.74K OHM 1% 1/8W	28480	0757-0281
A6R55	0698-7025	2	R:FXD COMP 270 OHM 10% 1/8W	01121	BB 2711
A6R56	2100-1986		R:VAR CERMET 1000 OHM 10% LIN 1/2W	28480	2100-1986
A6R57	0757 0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R58	0698 7025		R:FXD COMP 270 OHM 10% 1/8W	01121	BB 2711
A6R59	2100-1986		R:VAR CERMET 1000 OHM 10% LIN 1/2W	28480	2100-1986
A6R60	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R61	0757-0720	2	R:FXD MET FLM 243 OHM 1% 1/4W	28480	0757-0720

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6R62	0757-0415		R:FXD MET FLM 475 OHM 1% 1/8W	28480	0757-0415
A6R63	0757-0720		R:FXD MET FLM 243 OHM 1% 1/4W	28480	0757-0720
A6R64	0757-0415		R:FXD MET FLM 475 OHM 1% 1/8W	28480	0757-0415
A6R65	0757-0426	2	R:FXD MET FLM 1.3K OHM 1% 1/8W	28480	0757-0426
A6R66	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R67	0757-0426		R:FXD MET FLM 1.3K OHM 1% 1/8W	28480	0757-0426
A6R68	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R69	0698 7931		RESISTOR 1.5K 10% .125W CC	01121	BB 1521
A6R70	0698 7931		RESISTOR 1.5K 10% .125W CC	01121	BB 1521
A6R71	0684-1221		RESISTOR 1.2K 10% .25W FC	01121	CB 1221
A6R72	0684-1221		RESISTOR 1.2K 10% .25W FC	01121	CB 1221
A6R73	0684-1221		RESISTOR 1.2K 10% .25W FC	01121	CB 1221
A6R74	0757-0444		R:FXD MET FLM 12.1K OHM 1% 1/8W	28480	0757-0444
A6R75	0684-1221		RESISTOR 1.2K 10% .25W FC	01121	CB 1221
A6R76	0757-0444		R:FXD MET FLM 12.1K OHM 1% 1/8W	28480	0757-0444
A6R77	0757-0413	2	R:FXD MET FLM 392 OHM 1% 1/8W	28480	0757-0413
A6R78	0757-0424		RESISTOR 1.1K 1% .125W F	24546	C4-1/8-T0-1101-F
A6R79	0757 0346	4	R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A6R80	0757-0413		R:FXD MET FLM 392 OHM 1% 1/8W	28480	0757-0413
A6R81	0757-0424		RESISTOR 1.1K 1% .125W F	24546	C4-1/8-T0-1101-F
A6R82	0757-0346		R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A6R83	0757-0424		RESISTOR 1.1K 1% .125W F	24546	C4-1/8-T0-1101-F
A6R84	0757-0346		R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A6R85	0757-0346		R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A6R86	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R87	0757-0424		RESISTOR 1.1K 1% .125W F	24546	C4-1/8-T0-1101-F
A6R88	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R89	0698-7205		RESISTOR 51.1 OHM 2% .05W F	24546	C4-1/8-T00-51R1-G
A6R90	0698-7205		RESISTOR 51.1 OHM 2% .05W F	24546	C4-1/8-T00-51R1-G
A6R91	0698-0085	2	R:FXD MET FLM 2.61K OHM 1% 1/8W	28480	0698-0085
A6R92	0698-0085		R:FXD MET FLM 2.61K OHM 1% 1/8W	28480	0698-0085
A6R93	0757-0449	1	R:FXD FLM 20K OHM 1% 1/8W	28480	0757-0449
A6R94	0698-7212		R:FXD FLM 100 OHM 2% 1/8W	28480	0698-7212
A6R95	0698-7212		R:FXD FLM 100 OHM 2% 1/8W	28480	0698-7212
A6R96	0757-0739	1	R:FXD MET FLM 2.00K OHM 1% 1/4W	28480	0757-0739
A6R97	0757-0290	1	R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757 0290
A6R98	0757 0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A6R99	0757-0273		R:FXD MET FLM 3.01K OHM 1% 1/8W	28480	0757-0273
A6R100	0757 0401	4	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A6R101	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A6R102	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R103	0698-0083	2	R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698 0083
A6R104	0698-0083		R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A6R105	0757-0284	2	R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A6R106	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A6R107	0757-0811	1	R:FXD MET FLM 392 OHM 1% 1/2W	28480	0757-0811
A6R108	0757-0159	5	R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A6R109	0698-4037	2	R:FXD MET FLM 46.4 OHM 1% 1/8W	28480	0698 4037
A6R110	0698-4037		R:FXD MET FLM 46.4 OHM 1% 1/8W	28480	0698-4037
A6R111	0757-0421	2	R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A6R112	0757-0421		R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A6R113	0698-7028	2	R:FXD COMP 27 OHM 10% 1/8W	01121	BB 2701
A6R114	2100-1984		R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-1984
A6R115	0698-7028		R:FXD COMP 27 OHM 10% 1/8W	01121	BB 2701
A6R116	0757-0806	2	R:FXD MET FLM 243 OHM 1% 1/8W	28480	0757-0806
A6R117	0757-0417	3	R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A6R118	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A6R119	0698-3404	1	R:FXD MET FLM 383 OHM 1% 1/2W	28480	0698-3404
A6R120	0757-0814		R:FXD MET FLM 511 OHM 1% 1/2W	28480	0757-0814
A6R121	2100-1984		R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-1984
A6R122	0757-0424		R:FXD MET FLM 1.10K OHM 1% 1/8W	28480	0757-0424
A6R123	0757-0424		R:FXD MET FLM 1.10K OHM 1% 1/8W	28480	0757-0424
A6R124	0757 0422	2	R:FXD MET FLM 909 OHM 1% 1/8W	28480	0757-0422
A6R125	0757-0406	1	R:FXD MET FLM 182 OHM 1% 1/8W	28480	0757-0406
A6R126	0757-0411	1	R:FXD MET FLM 332 OHM 1% 1/8W	28480	0757-0411
A6R127	0757-0426		R:FXD FLM 1.3K OHM 1% 1/8W	28480	0757-0426
A6R128	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R129	0757-0420		R:FXD MET FLM 750 OHMS 1% 1/8W	28480	0757-0420
A6R130	0757-0316		RESISTOR 42.2 OHM 1% .125W F	24546	C4 1/8-T0-42R2-F
A6R131	0698-4037		R:FXD MET FLM 46.4 OHM 1% 1/8W	28480	0698-4037
A6RT1	0837-0035	1	THERMISTOR:DISC TYPE	89473	1D1617
A6U1	5081 3018		IC:CONTROL	28480	5081-3018
A6U2	5081 3018		IC:CONTROL	28480	5081 3018
A6VR1	1902-3104	2	DIODE:BREAKDOWN 5.62V 5%	04713	SZ10939-110
A6VR2	1902-3104		DIODE:BREAKDOWN 5.62V 5%	04713	SZ10939-110
A6VR3	1902-0048	2	DIODE:BREAKDOWN 6.81V 5%	04713	SZ10939-134

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6VR4	1902-0048		DIODE:BREAKDOWN 6.81V 5%	04713	SZ10939-134
A6VR5	1902-0783	1	DIODE:BREAKDOWN 16.2V 5%	28480	1902-0783
A6VR6	1902-3048	1	DIODE:BREAKDOWN:SILICON 3.48V 5%	28480	1902-3048
A6XA	1251-1556	100	CONNECTOR:SINGLE CONTACT	00779	2-330808 8
A7	01805-66510	1	BD ASSY:MAIN AMPL (A7U1 NOT INCLUDED - ORDER SEPARATELY)	28480	01805-66510
A7C1	0160 3451	7	C:FXD CER .01 UF 100VDCW	56289	C023B101F103Z525-CD
A7C2	0160-3557	1	C:FXD CER 0.01 UF 20% 200VDCW	72982	8121 200-651-103M
A7C3	0160-2261	1	C:FXD CER 15 PF 5% 500VDCW	72982	301 NPO-15 PF
*A7C4	0160-2204		C:FXD 100PF 5% (FACTORY SELECTED - MAY BE OMITTED BY TEST)	72136	RDM15F-101J3C
A7C5	0121-0443	1	C:VAR CER 3-9 PF 160VDCW	28480	0121-0443
A7C6	0160-2679		C:FXD 30 PF ±5% 500VDCW CER	28480	0160-2679
*A7C7	0160-3567		C:FXD 10.0 PF 100VDCW (FACTORY SELECTED VALUE)	72982	8101-100-COG-100J
A7C8	0140-0208	1	C:FXD MICA 680 PF 5%	72136	RDM15F681J3C
A7C9	0160-2260		C:FXD CER 13 PF 5% 500VDCW	72982	301-000-COGO-130J
A7C10	NOT ASSIGNED				
A7C11	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C12	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A7C13	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C14	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C15	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A7C16	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A7C17	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C18	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C19	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A7C20	0160-3652		C:FXD CER 4.7 PF 200VDCW	28480	0160-3652
A7CR1	1901-0535	2	DIODE:HYBRID NOT CARRIER	28480	1901-0535
A7CR2	1901-0535		DIODE:HYBRID NOT CARRIER	28480	1901-0535
A7CR3	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR4	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR5	1901-0040		DIODE:SILICON 30WV	07263	FDG1088
A7CR6	1901-0040		DIODE:SILICON 30WV	07263	FDG1088
A7L1	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A7L2	9100-2251		COIL:FXD RF 0.22 UH 10%	28480	9100-2251
A7R1	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A7R2	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A7R3	0757-0446	1	R:FXD MET FLM 15.0K OHM 1% 1/8W	28480	0757-0446
A7R4	2100-2216	1	R:VAR FLM 5K OHM 10% LIN 1/2W	28480	2100-2216
A7R5	2100-2030	1	R:VAR FLM 20K OHM 10% LIN 1/2W	28480	2100-2030
A7R6	2100-2061	1	R:VAR FLM 200 OHM 10% LIN 1/2W	28480	2100-2061
A7R7	0757-0440	1	R:FXD MET FLM 7.50K OHM 1% 1/8W	28480	0757-0440
A7R8	2100-1772	2	R:VAR WW 500 OHM 5% TYPE H 1W	28480	2100-1772
A7R9	0757-0734	1	R:FXD MET FLM 1.21K OHM 1% 1/4W	28480	0757-0734
A7R10	0698-7209	2	R:FXD FLM 75 OHM 2% 1/8W	28480	0698 7209
A7R11	0698-7209		R:FXD FLM 75 OHM 2% 1/8W	28480	0698-7209
A7R12	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A7R13	2100-1772		R:VAR WW 500 OHM 5% TYPE H 1W	28480	2100-1772
A7R14	0698-3152	2	R:FXD MET FLM 3.48K OHM 1% 1/8W	28480	0698-3152
A7R15	0698-3152		R:FXD MET FLM 3.48K OHM 1% 1/8W	28480	0698-3152
A7R16	0757-0426		R:FXD FLM 1.3K OHM 1% 1/8W	28480	0757 0426
A7R17	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A7R18	0757-0806		R:FXD MET FLM 243 OHM 1% 1/8W	28480	0757-0806
A7R19	0698-3443	1	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A7R20	0757-0276	2	R:FXD MET FLM 61.9 OHM 1% 1/8W	28480	0757-0276
A7R21	0757-0276		R:FXD MET FLM 61.9 OHM 1% 1/8W	28480	0757-0276
A7U1	5081-3005	1	IC:SEALED PACKAGE	28480	5081-3005
A7VR1	1902-3139	1	DIODE:BREAKDOWN 8.25V 5%	04713	SZ10939 158
A7VR2	1902-3097	1	DIODE:BREAKDOWN 5.23V 2%	28480	1902-3097
A7XA	1251-1556		CONNECTOR:SINGLE CONTACT	00779	2-330808-8
A8	01805-66512	1	BOARD ASSY:OUTPUT	28480	01805-66512
A8C1	0121-0466	11	C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511 000-1 3A
A8C2	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
A8C3	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CDH
*A8C4	0160-2236	1	C:FXD 1.0 PF 500VDCW (FACTORY SELECTED VALUE)	72982	301-000-COKO-109C
A8C5	0160-3451		C:FXD CER 0.01 UF +80–20% 100VDCW	56289	C023B101F103ZS25-CD
A8R1	0757 0159		R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A8R2	0757-0159		R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757 0159
A8R3	0757-0159		R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A8R4	0757-0159		R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A9	01805-61609	1	CABLE ASSY:DELAY LINE	28480	01805-61609
A9T1	9100-3475	1	TRANSFORMER	28480	9100-3475
A10	5081-3038	1	ATTENUATOR ASSY:CHANNEL "A"	28480	5081-3038
A10J1	5020-0593	1	CONNECTOR:BNC	28480	5020-0593
A10E1	1250-0051	1	CONTACT:RF CONNECTOR BNC SERIES	02660	31-2109

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A10S1			NOT SEPARATELY REPLACEABLE		
A10S2			NOT SEPARATELY REPLACEABLE		
A10A1	5081-3036	2	ATTENUATOR SUBSTRATE ASSY	28480	5081-3036
A10A1C1	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A10A1C2	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A10A1C3	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A10A1C4	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A10A1C5	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A10A1C6	0121 0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A10A1C7	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A10A1C8	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A10A1C9	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A10A1C10	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A11	5081-3037	1	ATTENUATOR ASSY:CHANNEL "B"	28480	5081-3037
A11J1	5020-0593		CONNECTOR:BNC	28480	5020-0593
A11E1	1250 0051		CONTACT:RF CONNECTOR BNC SERIES	02660	31-2109
A11S1			NOT SEPARATELY REPLACEABLE		
A11S2			NOT SEPARATELY REPLACEABLE		
A11A1	5081-3036		ATTENUATOR SUBSTRATE ASSY	28480	5081-3036
A11A1C1	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A11A1C2	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A11A1C3	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A11A1C4	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A11A1C5	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A11A1C6	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A11A1C7	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A11A1C8	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A
A11A1C9	0121-0466		C:VAR CER 1.0 TO 3.0 PF 100VDCW	72982	511-000-1-3A
A11A1C10	0121-0467		C:VAR CER 3.0-9.0 PF 100VDCW	72982	511-000-3-9A

Table 6-3. List of Manufacturers' Codes

MFR. NO.	MANUFACTURE NAME	ADDRESS	ZIP CODE
00000	U. S. A. COMMON	ANY SUPPLIER OF U. S. A.	
00779	AMP, INC.	HARRISBURG, PA.	17605
01121	ALLEN BRADELY, CO.	MILWAUKEE, WI.	53212
04713	MOTOROLA, INC.	PHOENIX, AZ.	85008
07263	FAIRCHILD CAMERA & INST., CORP.	MOUNTAIN VIEW, CA.	94040
13019	AIRCO SUPPLY CO., INC.	WICHITA, KA.	67213
56289	SPRAGUE ELECTRIC, CO.	NORTH ADAMS, MA.	01247
71744	CHICAGO MINIATURE LAMP WORKS	CHICAGO, IL.	60640
71785	CINCH MFG., CO.	CHICAGO, IL.	60007
72136	ELECTRO MOTIVE MFG., CO.	WILLIMANTIC, CT.	06226
72982	ERIE TECHNOLOGICAL PRODUCTS, INC.	ERIE, PA.	16512
*80131	ELECTRONIC INDUSTRIES ASSOCIATION		
98291	SEALECTRO, CORP.	MAMARONECK, N. Y.	10544

SECTION VII

MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information required to backdate this manual for a specific instrument.

7-3. MANUAL CHANGES.

7-4. This manual applies directly to the instrument having the same serial prefix shown on the manual title page. If the serial prefix of the instrument is not the same as the one on the title page, find your serial prefix in table 7-1 and make the changes to the manual that are listed for that serial prefix (refer to paragraph 7-5). When making changes listed in table 7-1, make the change with the highest number first. Example: if backdating changes 1, 2, and 3 are required for your serial prefix, do change 3 first, then change 2, and finally change 1. If the serial prefix of the instrument is not listed either in the title page or in table 7-1, refer to an enclosed MANUAL CHANGES sheet for updating information. Also, if a MANUAL CHANGES sheet is supplied, make all indicated ERRATA corrections.

Table 7-1. Manual Changes

Serial Prefix	Make Changes
1205A	1, 2, 3, 4, 5, 6, 7, 8
1233A	2, 3, 4, 5, 6, 7, 8
1239A	3, 4, 5, 6, 7, 8
1244A	4, 5, 6, 7, 8
1306A	5, 6, 7, 8
1338A	6, 7, 8
1347A	7, 8
1409A	8

7-5. MANUAL CHANGE INSTRUCTIONS.

CHANGE 1

Table 6-2,
A9: Change to HP Part No. 01805-61601; Qty 1; CABLE ASSY: DELAY LINE; Mfr Code 28480, Mfr Part No. 01805-61601.

CHANGE 2

Table 6-2,
Delete: A3C13.
A6U1: Change to HP Part No. 5081-3018; Qty 2; IC: CONTROL; Mfr Code 28480, Mfr Part No. 5081-3018 (refer to HP Service Note 1805A-1).
A6U2: Change to HP Part No. 5081-3018; IC: CONTROL; Mfr Code 28480, Mfr Part No. 5081-3018 (refer to HP Service Note 1805A-1).
Figure 8-19, schematic 7,
Delete: A3C13.

CHANGE 3

Table 6-2,
Delete: A1MP1.
A1S1: Change to HP Part No. 3101-1695; Qty 1; PUSHBUTTON SWITCH ASSY; Mfr Code 28480, Mfr Part No. 3101-1695.
Delete: A2MP1.
A2S1: Change to HP Part No. 3101-1696; Qty 1; PUSHBUTTON SWITCH ASSY: Mfr Code 28480, Mfr Part No. 3101-1696.

CHANGE 4

Table 6-2,
Delete: A2R16.
Delete: A2VR2.
Figure 8-17, schematic 6,
Delete: A2R16 and A2VR2.

CHANGE 5

Table 6-2,
A8: Change to HP Part No. 01805-66508; Qty 1; BOARD ASSY: OUTPUT; Mfr Code 28480, Mfr Part No. 01805-66508.
A9: Change to HP Part No. 01805-61605; Qty 1; CABLE ASSY: DELAY LINE; Mfr Code 28480, Mfr Part No. 01805-61605.
MP13: Change to HP Part No. 01805-00202; Qty 1; PANEL: SUB; Mfr Code 28480, Mfr Part No. 01805-00202.
R1: Change to HP Part No. 0811-3151; Qty 1; R: FXD WW 140 OHM 1% 3W; Mfr Code 28480, Mfr Part No. 0811-3151.
Delete: W2 and W3.
Delete: A8C5.
Figure 8-13, schematic 4,
Delete: A8C5.

CHANGE 6

Table 6-2,
MP19: Change to HP Part No. 01805-60101; Qty 1; CHASSIS ASSY; Mfr Code 28480, Mfr Part No. 01805-60101.
MP24: Change to HP Part No. 01805-04102; Qty 1; COVER: PREAMPL; Mfr Code 28480, Mfr Part No. 01805-04102.

CHANGE 7

Table 6-2,
A6C33: Change to HP Part No. 0160-3567; C: FXD CER 10.0 PF 5% 100 VDCW; Mfr Code 72982, Mfr Part No. 8101-100-C0G-100J.
A6C34: Change to HP Part No. 0160-3567; C: FXD CER 10.0 PF 5% 100 VDCW; Mfr Code 72982, Mfr Part No. 8101-100-C0G-100J.
Delete: A6L13 and A6L14.
A7C7: Change to HP Part No. 0160-3647; Qty 1; C: FXD CER 22 PF 5% 100 VDCW (FACTORY SELECTED); Mfr Code 72982, Mfr Part No. 8111-A112-C0G-220J.
A8C4: Change to HP Part No. 0160-2240; Qty 1; C: FXD 2.0 PF 500 VDCW (FACTORY SELECTED); Mfr Code 72982, Mfr Part No. 301-000-C0K0- 209C.

Figure 8-9, schematic 2,
A6C33: Change value to 10.0 PF.
A6C34: Change value to 10.0 PF.
Delete: A6L13 and A6L14.
Figure 8-13, schematic 4,
A7C7: Change value to 22 PF.
A8C4: Change value to 2 PF.

CHANGE 8

Table 6-2,
A9: Change to HP Part No. 01805-61606; Qty 1; CABLE ASSY: DELAY LINE; Mfr Code 28480, Mfr Part No. 01805-61606.
A9T1: Change to HP Part No. 9100-3268; Qty 1; TRANSFORMER; Mfr Code 28480, Mfr Part No. 9100-3268.

SECTION VIII

SCHEMATICS AND TROUBLESHOOTING

8-1. INTRODUCTION.

8-2. This section contains schematics, repair and replacement information, component-identification illustrations, test conditions, and troubleshooting information.

8-3. SCHEMATICS.

8-4. The schematics are drawn to show the electronic function of the circuits. Any one schematic may include all or part of several different physical assemblies.

8-5. The schematics are numbered in sequence at the lower right-hand corner of each page. These numbers are used to cross reference signal connections between the schematics. At each circuit breaking point, a notation is made of either a signal number or signal name and the schematic number (in bold type) indicating the signals source or destination. To find the source or destination of the signal, turn to the indicated schematic and locate the name or number of the signal in question.

8-6. A table on each schematic lists all components shown on the schematic by reference designation. Reference designators that have been deleted are listed below the table.

8-7. Reference designations used in this manual are in accordance with the provisions of USA Standard Y32.16, Reference Designations for Electrical and Electronics Parts and Equipments. Minor variations from the standard, due to design and manufacturing practices, may be noted.

8-8. REPAIR AND REPLACEMENT.

8-9. The following paragraphs provide procedures for removal and replacement of assemblies, subassemblies, and components. Special servicing instructions for the printed circuit boards are covered later in this section. Section VI provides a detailed parts list for use in ordering replacement parts.

8-10. OUTPUT TRANSISTOR REMOVAL. Output transistors Q1 through Q4 are mounted on stand-off insulators and held in place by spring clips. The transistor leads pass through the stand-off insulators and are soldered directly to the back side of output amplifier assembly A8. To remove the output transistors, proceed as follows:

a. Disconnect spring clip holding transistor.

b. Unsolder transistor leads and clean holes with desoldering tool.

c. Remove transistor.

8-11. ATTENUATOR REMOVAL. (See figure 8-2.) The following steps provide procedures for removal and replacement of attenuators.

a. Remove preamplifier shield.

b. Remove support strut.

c. Unsolder attenuator output leads from A6Q1 and A6Q4.

d. Remove two screws securing input end of preamplifier board A6.

e. Remove two screws securing top of front panel assembly.

f. Remove screw securing side of front panel assembly.

g. Remove VERT OUT connector J1 from front panel.

h. Remove front-panel assembly by pulling forward on front panel and working switch boards, A1 and A2, from control board A3.

i. Remove VOLTS/DIV knob (MP20, MP8, and MP7).

j. Remove INPUT connectors A10J1 and A11J1.

k. Remove attenuators from front-panel assembly.

8-12. ATTENUATOR REPAIR. Attenuator assemblies A10 and A11 use a thick-film substrate with cam-actuated spring-switch contacts. The following paragraphs provide instructions for disassembly, assembly, and care while handling.

CAUTION

Always wear protective cotton gloves (such as HP Part Number 8650-0030) when handling the thick-film substrate. The substrate is extremely susceptible to conduction paths caused by finger prints.

8-13. The only repair that should be attempted is replacement of the thick-film substrate. No other components are replaceable.

8-14. Attenuator Disassembly.

a. Set coupling switch to GND.

b. Set VOLTS/DIV to .005.

c. Remove adjustment cover.

d. Unsolder output wire from board assembly A6 and input wire from BNC connector.

e. Release substrate by pulling spring retaining clip toward back of attenuator.

f. Tilt substrate about 45 degrees (so contacts clear pushrods).

g. Remove substrate from srping-mounting clips by sliding substrate toward attenuator output.

8-15. Attenuator Assembly.

a. Hold substrate with contacts down and input facing BNC connector.

b. Tilt substrate about 45 degrees while sliding it under ground spring and feeding input wire into BNC connector.

c. Verify grounding springs are seated inside adjustment cover channels (figure 8-1).

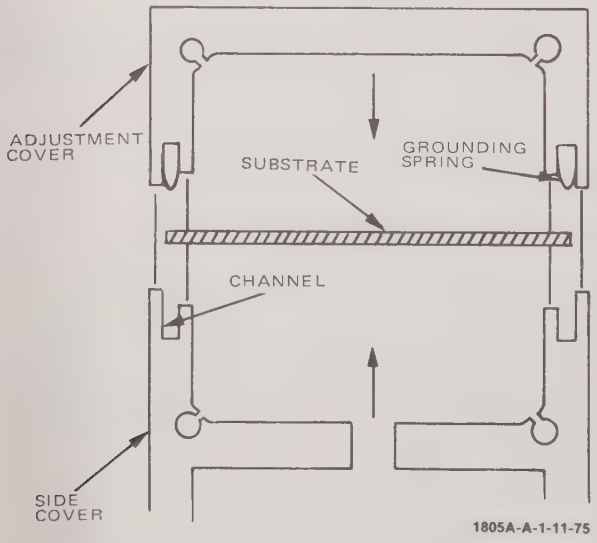

Figure 8-1. Attenuator Assembly

d. Verify substrate is centered in and flush with side cover channels.

e. Solder input wire to BNC connector and output wire to board assembly A6.

f. Install adjustment cover.

NOTE

Slight pressure applied to the adjustment cover may be necessary to align mounting holes.

8-16. CIRCUIT BOARDS.

8-17. BOARD CONNECTIONS. Square-pin connectors are identified on circuit boards by the color code of the connecting wires. Connector pins on plugs and jacks are identified by numbers and/or letters. The letters G, I, O, and Q are omitted.

8-18. CIRCUIT BOARD REMOVAL. All circuit boards in this instrument are easily removed for servicing. The 1805A has both the plug-in type and the mounted type circuit boards. The following paragraphs describe the removal procedure for each type of circuit board.

8-19. Mounted Circuit Board Removal. There are three mounted circuit boards in Model 1805A: mother board A4, main amplifier A7, and output amplifier A8.

8-20. To remove mother board A4, proceed as follows:

a. Perform steps a through h of paragraph 8-11.

b. Remove two screws holding switch board shield MP15.

c. Remove screw holding power supply bracket MP17.

d. Remove two screws holding connector A4P1.

e. Remove two screws holding mother board A4.

f. Disconnect wires from square-pin connectors on circuit board.

g. Unsolder wires (+115 Vac) from A4P1.

h. Remove mother board A4 from Model 1805A chassis.

8-21. To remove main amplifier circuit board A7 and output amplifier circuit board A8, proceed as follows:

a. Disconnect wires from square pins.

b. Unsolder wires connecting A7 to circuit board A8.

c. Remove screws holding circuit board to bracket.

d. Remove circuit board.

NOTE

When installing circuit board A8, align transistor leads on back side of A8 with Q1 through Q4 transistor leads. Gently push board onto transistor leads until board standoffs contact bracket; then fasten.

8-22. Plug-in Circuit Board Removal. There are five plug-in circuit boards in the 1805A: top switch board A1, bottom switch board A2, control board A3, power supply board A5, and preamplifier board A6.

8-23. To remove top switch board A1 and bottom switch board A2, proceed as follows:

a. Perform steps a through h of paragraph 8-11.

b. Unsolder wires from circuit board.

8-24. To remove control board A3, proceed as follows:

a. Perform steps a through h of paragraph 8-11.

b. Remove two screws holding switch board shield MP15.

c. Remove control board A3 from mother board socket XA3.

8-25. To remove power supply board A5, proceed as follows:

a. Remove two screws holding power supply bracket MP17.

b. Remove power supply board A5 from mother board socket XA5.

8-26. To remove preamplifier board A6, proceed as follows:

a. Remove preamplifier shield.

b. Remove support strut.

c. Unsolder attenuator output leads from A6Q1 and A6Q4.

d. Remove four screws holding preamplifier board A6.

e. Disconnect wires from square pins.

f. Remove preamplifier board A6 from mother board socket A4XA6.

8-27. SEMICONDUCTOR REPLACEMENT. When removing a semiconductor, use long-nosed pliers as a heat sink between the device and the soldering iron. When replacing a semiconductor, ensure sufficient lead length to dissipate the soldering heat by using the same length of exposed lead as was used for the original part.

8-28. INTEGRATED CIRCUIT REPLACEMENT. The integrated circuits in this instrument are of the plug-in type. Remove a plug-in IC with a straight pull away from the board. When replacing an IC, note the mark or notch (on one end of the IC) used for orientation.

8-29. TROUBLESHOOTING.

WARNING

Read the Safety Summary at the front of this manual before troubleshooting the instrument.

8-30. The most important prerequisite for successful troubleshooting is understanding how the instrument is designed to operate and correct use of front-panel controls. Suspected malfunctions may be caused by improper control settings or circuit connections such as no vertical display when coupling switch is set to GND. Before doing the test and/or troubleshooting procedures, read Section III (Operation) for an explanation of controls and connectors and general operating considerations, and Section IV (Principles of Operation) for an explanation of circuit theory.

8-31. If trouble is suspected, visually inspect the instrument. Look for loose or burned components that might suggest a source of trouble. Check to see that all circuit board connections are making good contact and are not shorting to an adjacent circuit. If no obvious trouble is found, check the power supply voltages in the unit. Prior to any extensive troubleshooting, check the external power sources also. Figure 8-3 is a troubleshooting block diagram.

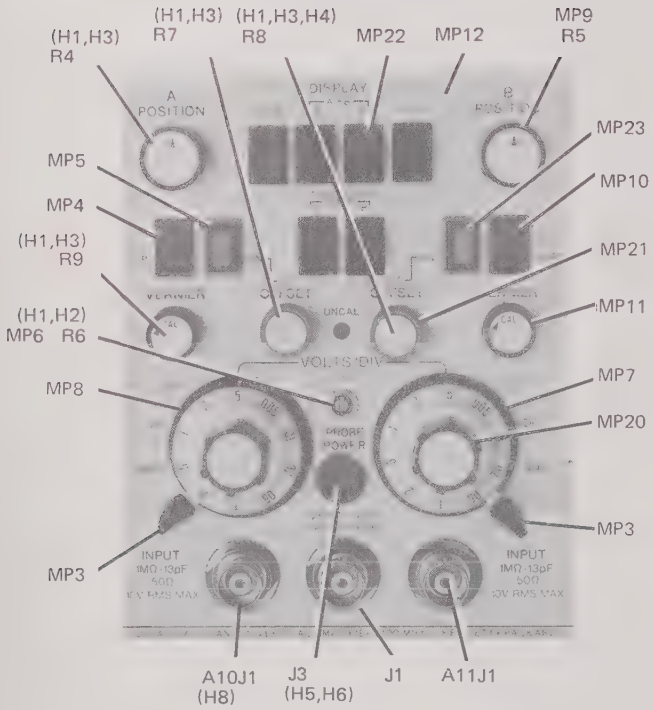

NOTE:
(H-) denotes mounting hardware

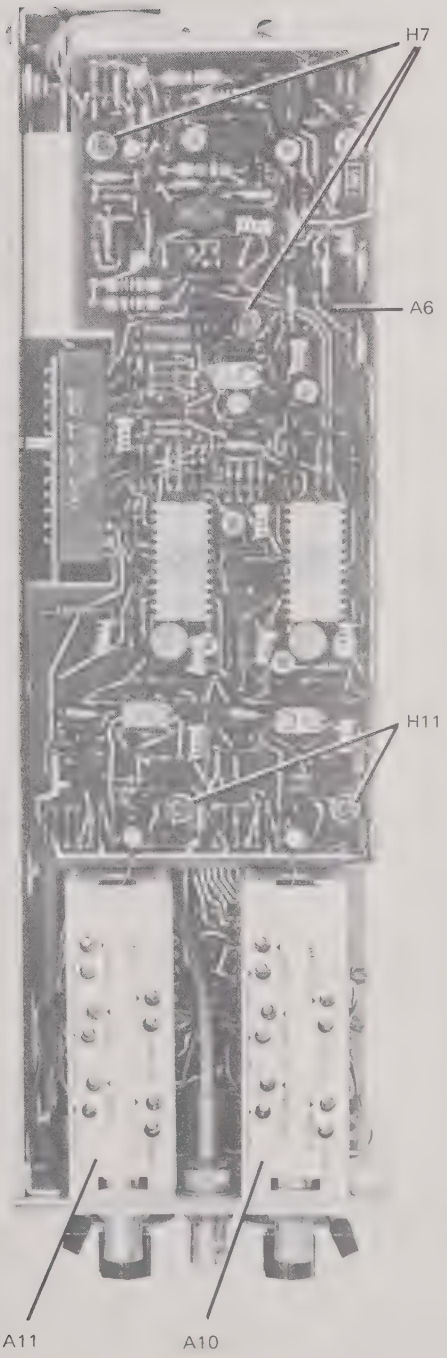

1805A-R-16-01-11-75

Figure 8-2. Chassis Component and Assembly Locations (Sheet 1 of 2)

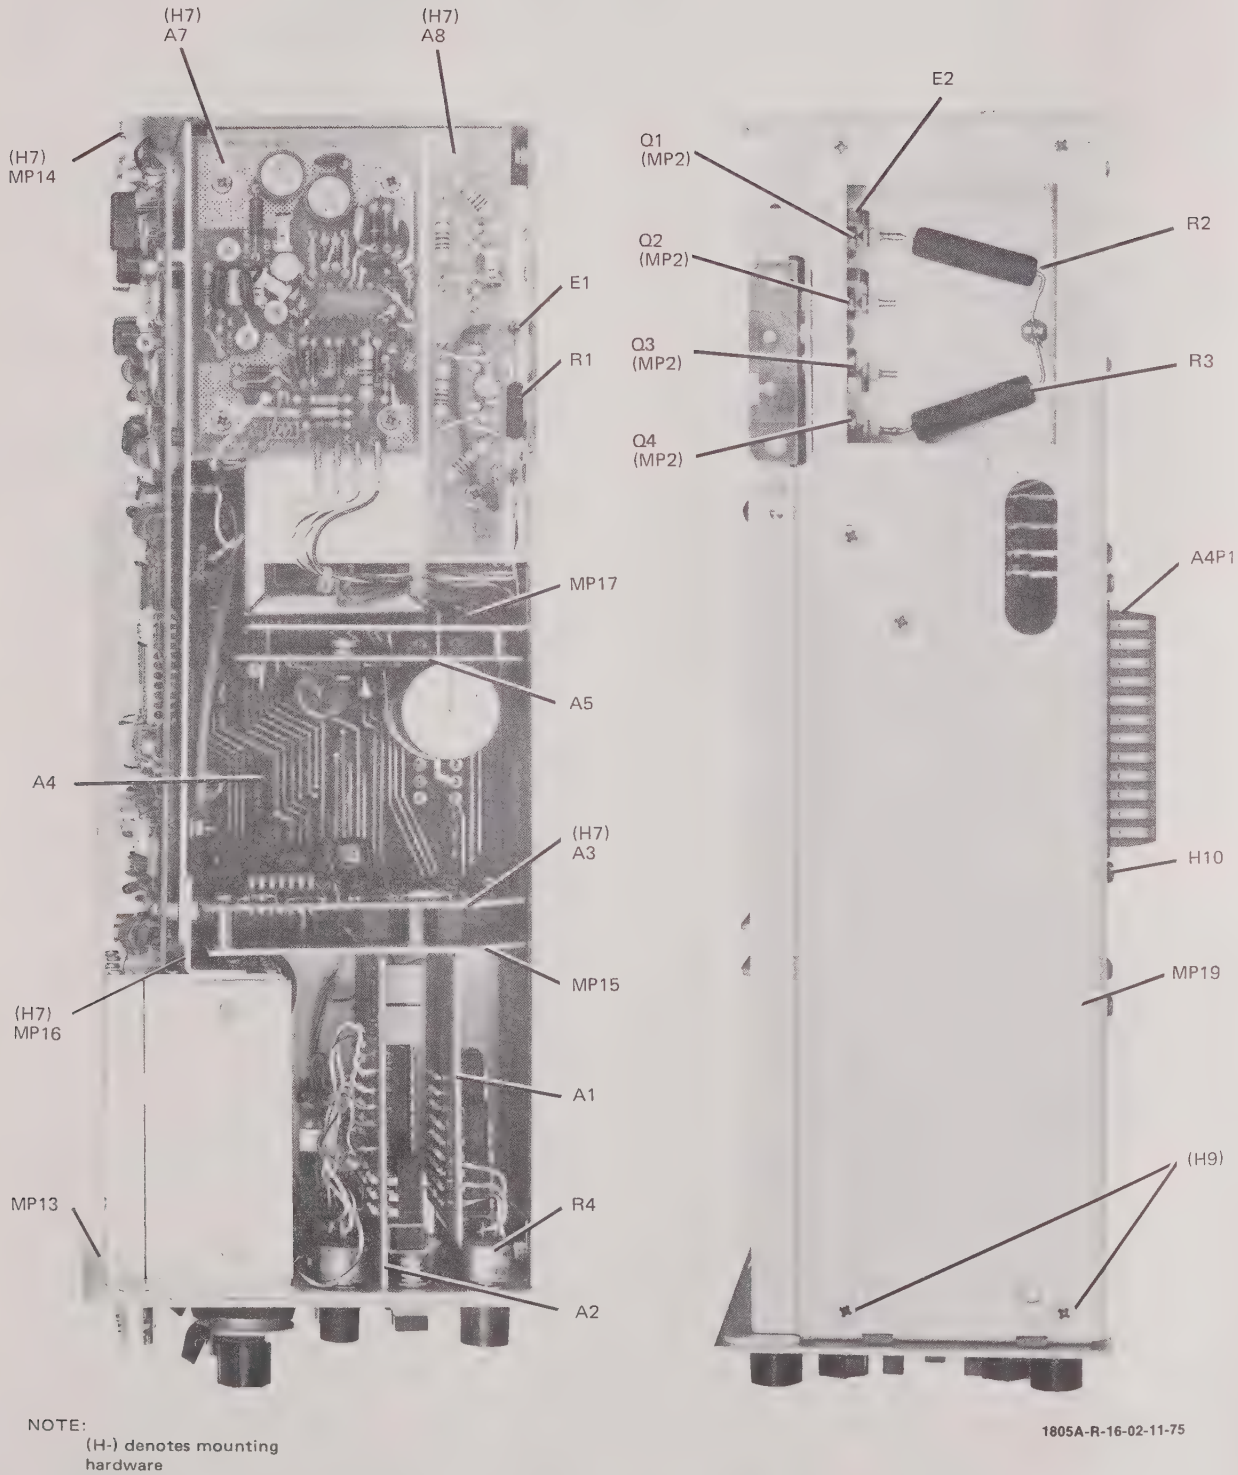

Figure 8-2. Chassis Component and Assembly Locations (Sheet 2 of 2)

VOLTAGE MEASUREMENT CONDITIONS
Figure 8-3.

OSCILLOSCOPE

Focus	as necessary
Intensity	as necessary
Horizontal position	as necessary
Mag	X1
Display	Internal

TIME BASE

Time/division	0.5 m/sec
Trigger	Internal
Mode	Auto

MODEL 1805A

DISPLAY	A
TRIG SOURCE	A
Polarity	+ UP
VOLTS/DIV	.005
VERNIER	CAL
POSITION	as necessary
Coupling	GND

Figure 8-3. Troubleshooting Block Diagram (Sheet 1 of 2)

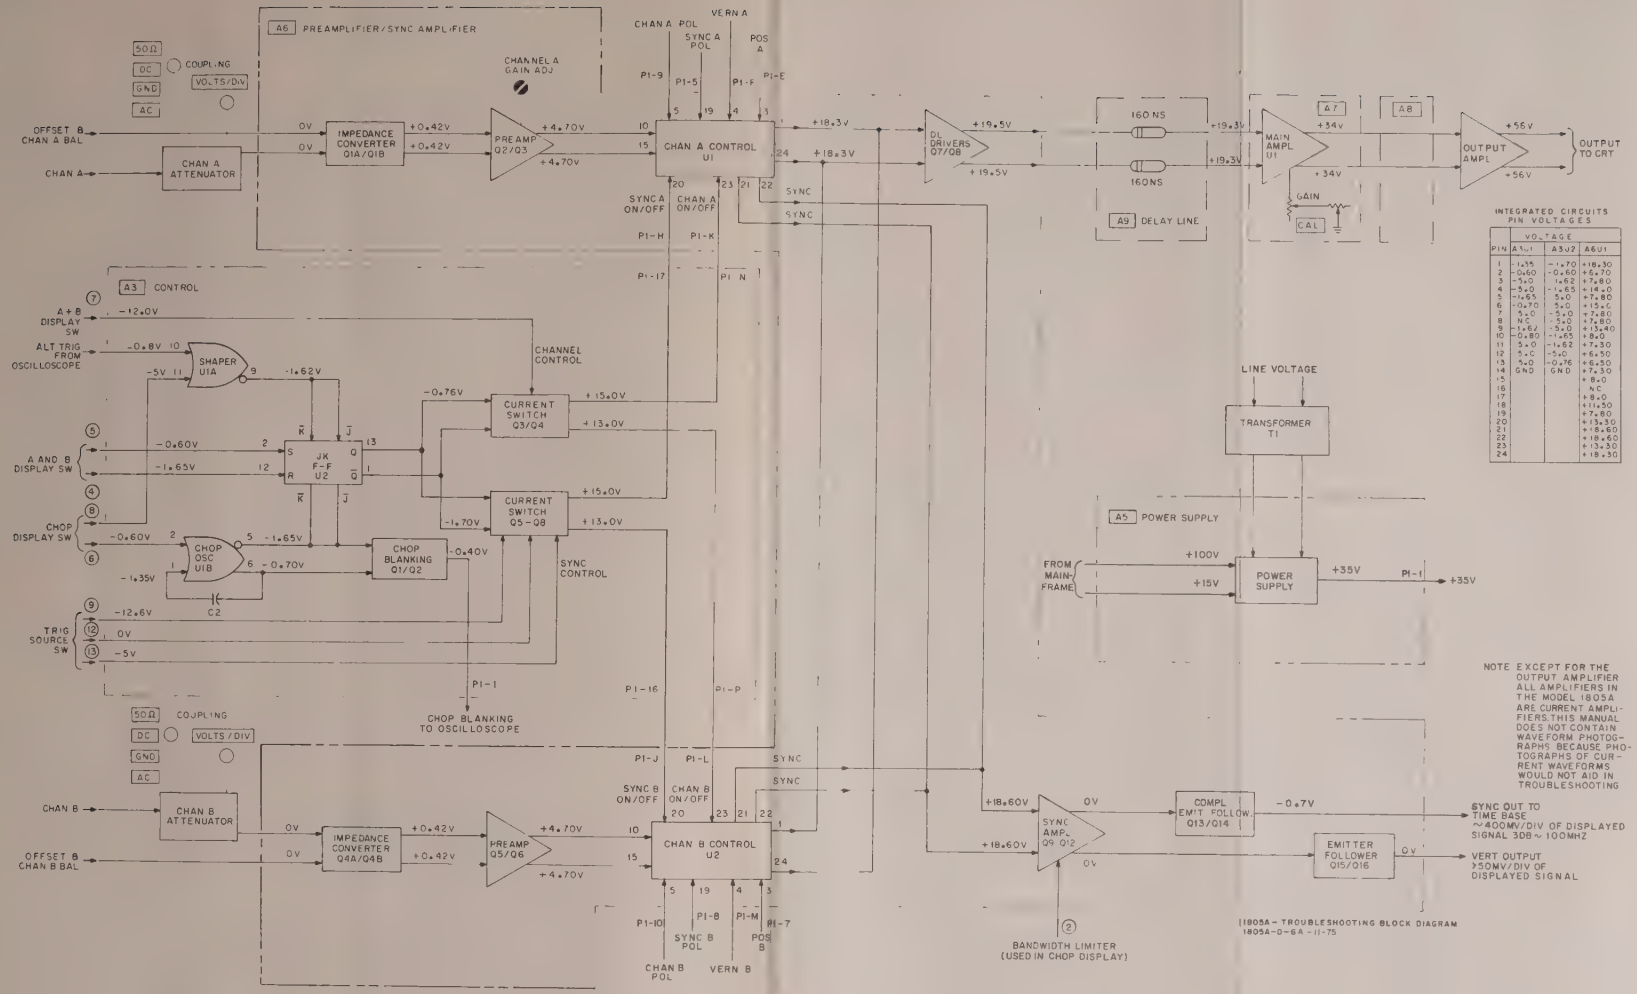

PIN	VOLTAGE A3U1	A3U2	A6U1
1	-1.35	-1.70	+18.30
2	-0.60	-0.60	+6.70
3	-5.0	-1.62	+7.80
4	-5.0	-1.65	+14.40
5	-1.65	-5.0	+7.80
6	-0.70	-5.0	+15.6
7	-5.0	-5.0	+7.80
8	NC	-5.0	+7.80
9	-1.62	-5.0	+13.40
10	-0.80	-1.65	+8.0
11	-5.0	-1.62	+7.30
12	-5.0	-5.0	+6.50
13	-5.0	-0.76	+6.50
14	GND	GND	+7.30
15			+8.0
16			NC
17			+8.0
18			+11.50
19			+7.80
20			+13.30
21			+18.60
22			+18.60
23			+13.30
24			+18.30

Figure 8-3.
Troubleshooting Block Diagram (Sheet 2 of 2)

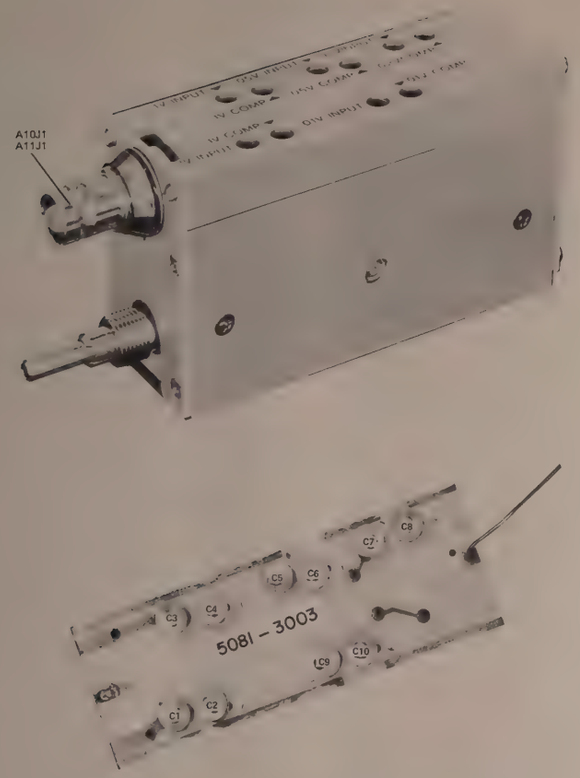

Figure 8-4. Attenuator Component Identification

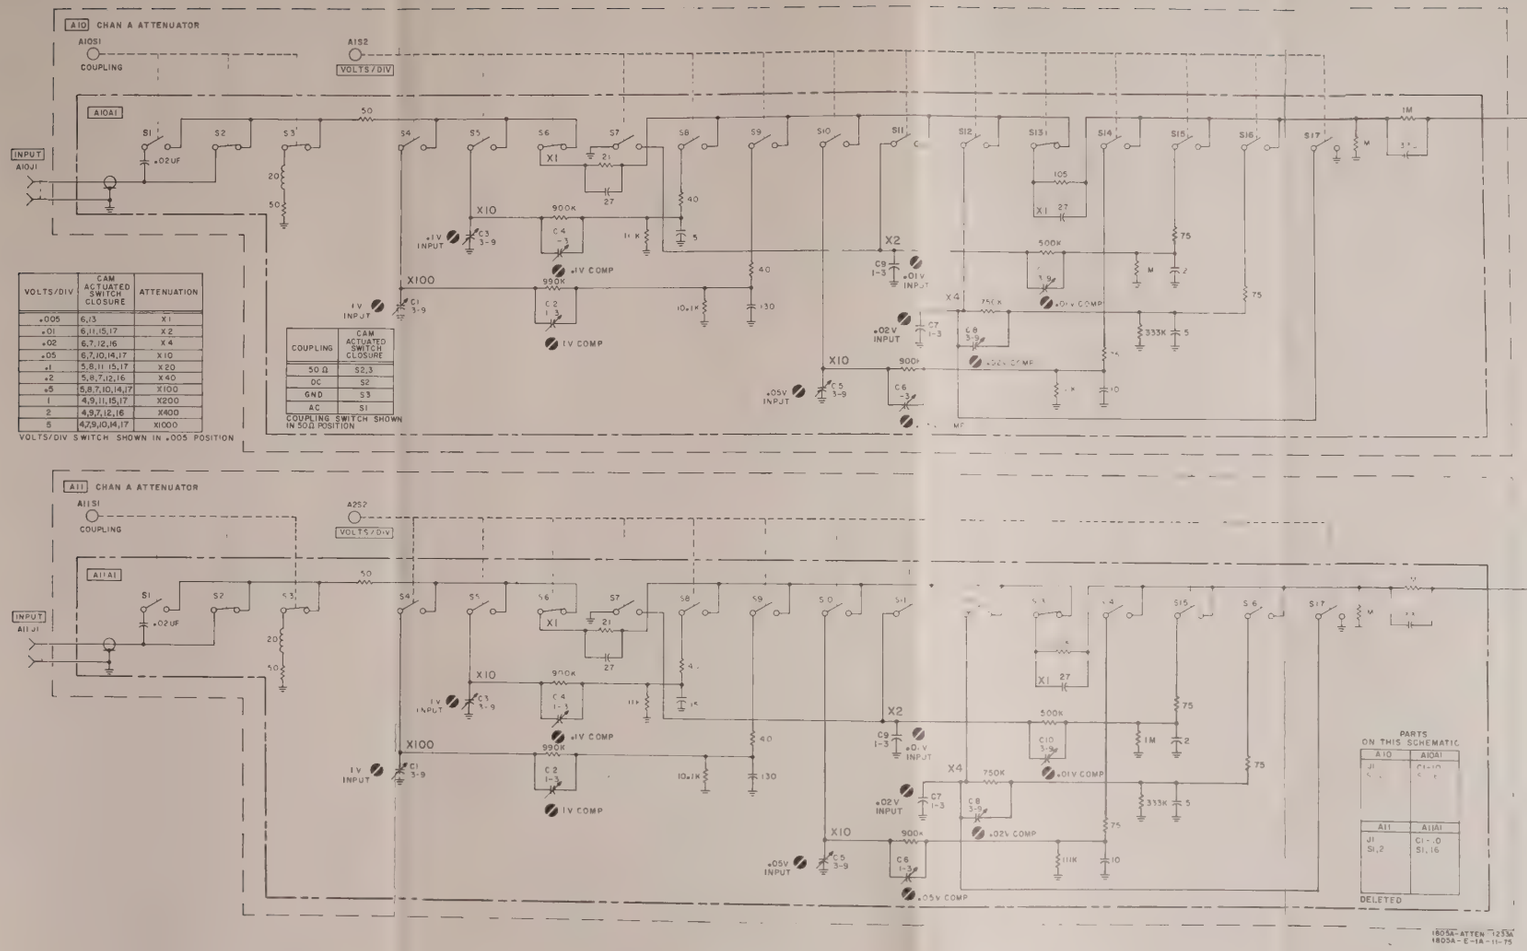

Figure 8-5. Attenuator Schematic

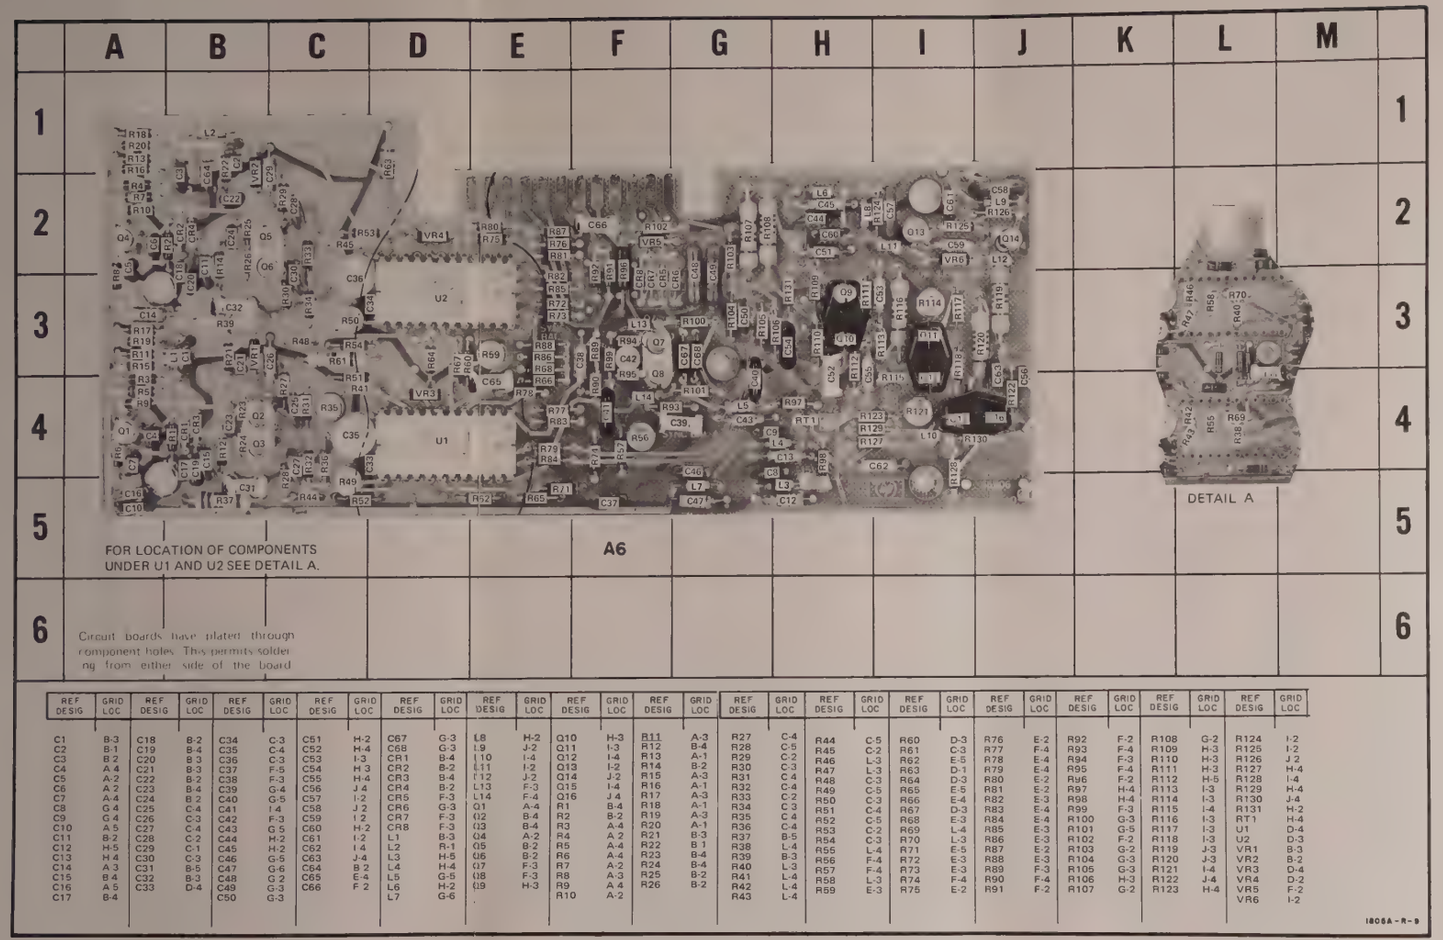

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-3	C18	B-2	C34	C-3	C51	H-2	C67	G-3	L8	H-2	Q10	H-3	R11	A-3
C2	B-1	C19	B-4	C35	C-4	C52	H-4	C68	G-3	L9	J-2	Q11	I-3	R12	B-4
C3	B-2	C20	B-3	C36	C-3	C53	I-3	CR1	B-4	L10	I-4	Q12	I-4	R13	A-1
C4	A-4	C21	B-3	C37	F-5	C54	H-3	CR2	B-2	L11	I-2	Q13	I-2	R14	B-2
C5	A-2	C22	B-2	C38	F-3	C55	H-4	CR3	B-4	L12	J-2	Q14	J-2	R15	A-3
C6	A-2	C23	B-4	C39	G-4	C56	J-4	CR4	B-2	L13	F-3	Q15	I-4	R16	A-1
C7	A-4	C24	B-2	C40	G-5	C57	I-2	CR5	F-3	L14	F-4	Q16	J-4	R17	A-3
C8	G-4	C25	C-4	C41	I-4	C58	J-2	CR6	G-3	Q1	A-4	R1	B-4	R18	A-1
C9	G-4	C26	C-3	C42	F-3	C59	I-2	CR7	F-3	Q2	B-4	R2	B-2	R19	A-3
C10	A-5	C27	C-4	C43	G-5	C60	H-2	CR8	F-3	Q3	B-4	R3	A-4	R20	A-1
C11	B-2	C28	C-2	C44	H-2	C61	I-2	L1	B-3	Q4	A-2	R4	A-2	R21	B-3
C12	H-5	C29	C-1	C45	H-2	C62	I-4	L2	R-1	Q5	A-4	R5	A-4	R22	B 1
C13	H-4	C30	C-3	C46	G-5	C63	J-4	L3	H-5	Q6	B-2	R6	A-4	R23	B-4
C14	A-3	C31	B-5	C47	G-6	C64	B 2	L4	H-4	Q7	F-3	R7	A-2	R24	B-4
C15	B-4	C32	B-3	C48	G 2	C65	E-4	L5	G-5	Q8	F-3	R8	A-3	R25	B-2
C16	A-5	C33	D-4	C49	G-3	C66	F 2	L6	H-2	Q9	H-3	R9	A-4	R26	B-2
C17	B-4			C50	G-3			L7	G-6			R10	A-2		

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
R27	C-4	R44	C-5	R60	D-3	R76	E-2	R92	F-2	R108	G-2	R124	I-2
R28	C-5	R45	C-2	R61	C-3	R77	F-4	R93	F-4	R109	H-3	R125	I-2
R29	C-2	R46	L-3	R62	E-5	R78	E-4	R94	F-3	R110	H-3	R126	J 2
R30	C-3	R47	L-3	R63	D-1	R79	E-4	R95	F-4	R111	H-3	R127	H-4
R31	C-4	R48	C-3	R64	D-3	R80	E-2	R96	F-2	R112	H-5	R128	I-4
R32	C-4	R49	C-5	R65	E-5	R81	E-2	R97	H-4	R113	I-3	R129	H-4
R33	C-2	R50	C-3	R66	E-4	R82	E-3	R98	H-4	R114	I-3	R130	J-4
R34	C-3	R51	C-4	R67	D-3	R83	E-4	R99	F-3	R115	I-4	R131	H-2
R35	C-4	R52	C-5	R68	E-3	R84	E-4	R100	G-3	R116	I-3	RT1	H-4
R36	C-4	R53	C-2	R69	L-4	R85	E-3	R101	G-5	R117	I-3	U1	D-4
R37	B-5	R54	C-3	R70	L-3	R86	E-3	R102	F-2	R118	I-3	U2	D-3
R38	L-4	R55	L-4	R71	E-5	R87	E-2	R103	G-2	R119	J-3	VR1	B-3
R39	B-3	R56	F-4	R72	E-3	R88	E-3	R104	G-3	R120	J-3	VR2	B-2
R40	L-3	R57	F-4	R73	E-3	R89	F-3	R105	G-3	R121	I-4	VR3	D-4
R41	L-4	R58	L-3	R74	F-4	R90	F-4	R106	H-3	R122	J-4	VR4	D-2
R42	L-4	R59	E-3	R75	E-2	R91	F-2	R107	G-2	R123	H-4	VR5	F-2
R43	L-4											VR6	I-2

1805A-R-9

Figure 8-6. Preamplifier and Sync Amplifier Board A6, Component Identification

VOLTAGE MEASUREMENT CONDITIONS SCHEMATIC 2

OSCILLOSCOPE

Focus	as necessary
Intensity	as necessary
Horizontal position	as necessary
Mag	X1
Display	Internal

TIME BASE

Time/division	0.5 m/sec
Trigger	Internal
Mode	Auto

MODEL 1805A

DISPLAY	A
TRIG SOURCE	A
Polarity	+ UP
VOLTS DIV	.005
VERNIER	CAL
POSITION	as necessary
Coupling	GND

Figure 8-7. Preamplifier and Sync Amplifier Schematic (Sheet 1 of 2)

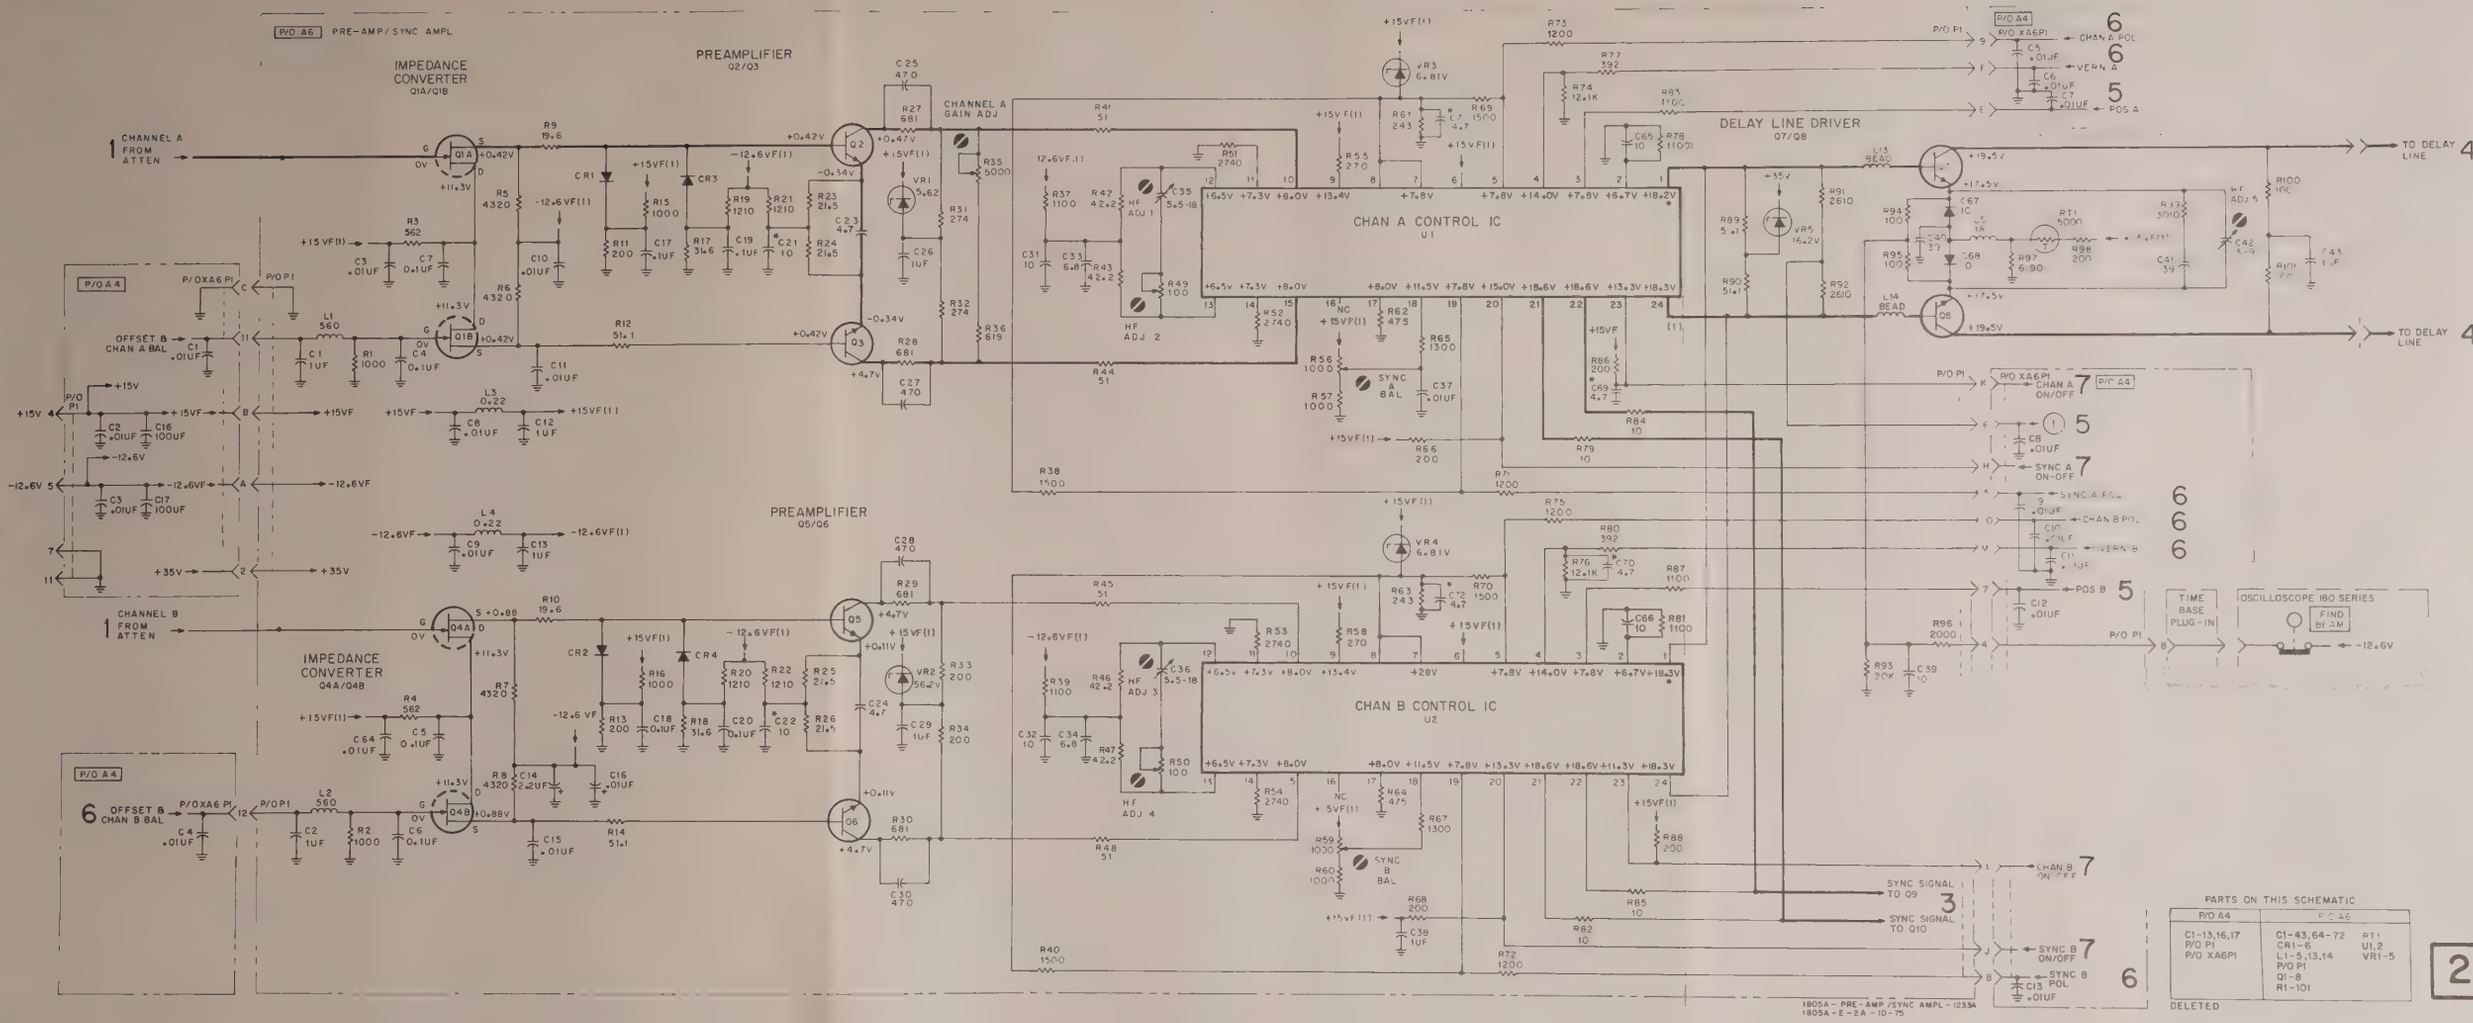

Figure 8-7.
Preamplifier and Sync Amplifier Schematic (Sheet 2 of 2)

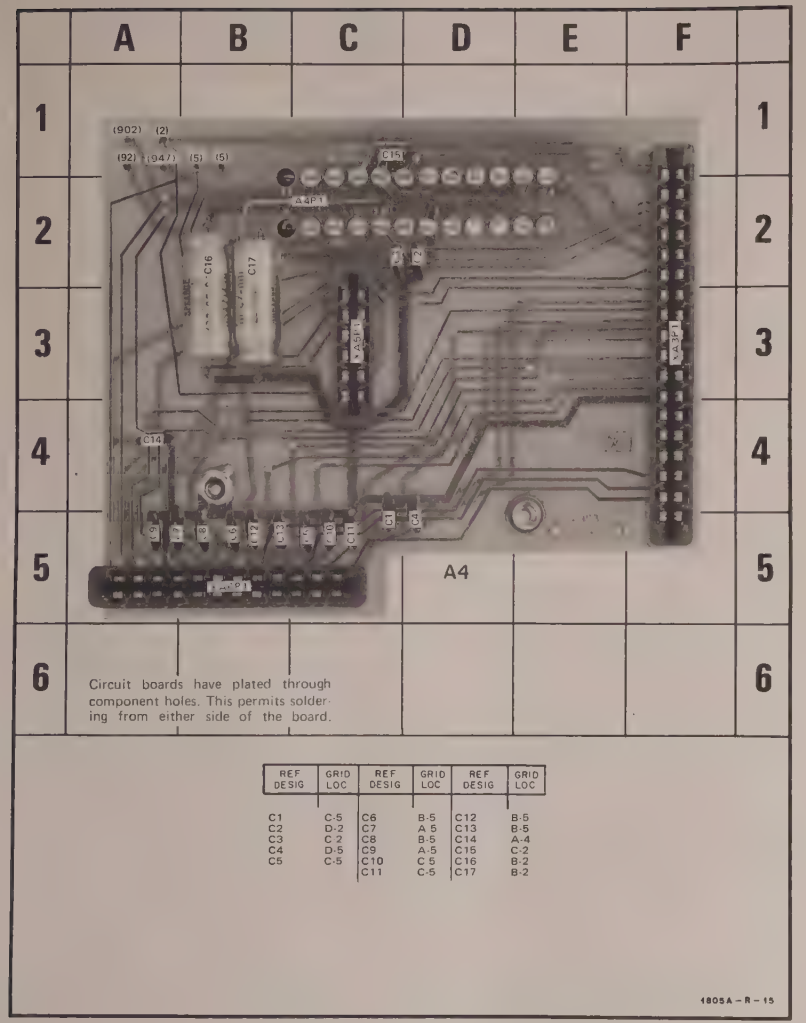

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	C-5	C6	B-5	C12	B-5
C2	D-2	C7	A-5	C13	B-5
C3	C-2	C8	B-5	C14	A-4
C4	D-5	C9	A-5	C15	C-2
C5	C-5	C10	C-5	C16	B-2
		C11	C-5	C17	B-2

Figure 8-8. Interconnecting Board A4, Component Identification

VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 3

OSCILLOSCOPE

Focus	as necessary
Intensity	as necessary
Horizontal position	as necessary
Mag	X1
Display	Internal

TIME BASE

Time/division	0.5 m/sec
Trigger	Internal
Mode	Auto

MODEL 1805A

DISPLAY	A
TRIG SOURCE	A
Polarity	+ UP
VOLTS/DIV	.005
VERNIER	CAL
POSITION	as necessary
Coupling	GND

Figure 8-9. Preamplifier and Sync Amplifier Schematic (Sheet 1 of 2)

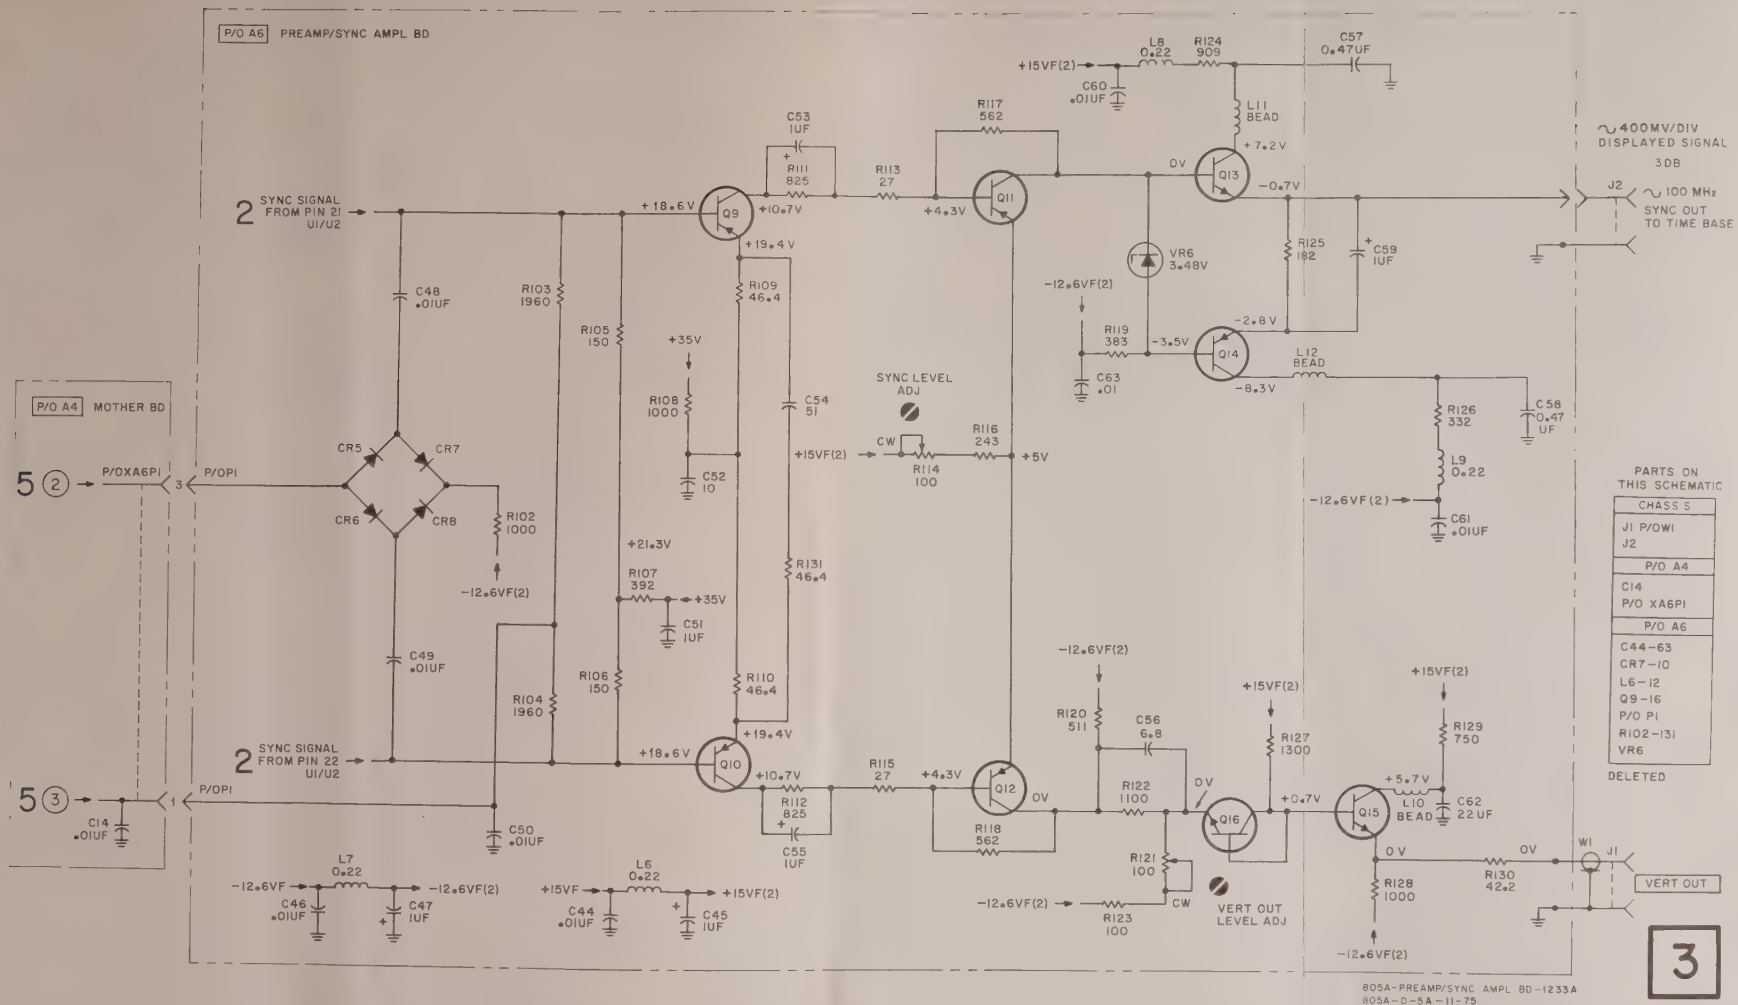

Figure 8-9.
Preamplifier and Sync Amplifier Schematic (Sheet 2 of 2)

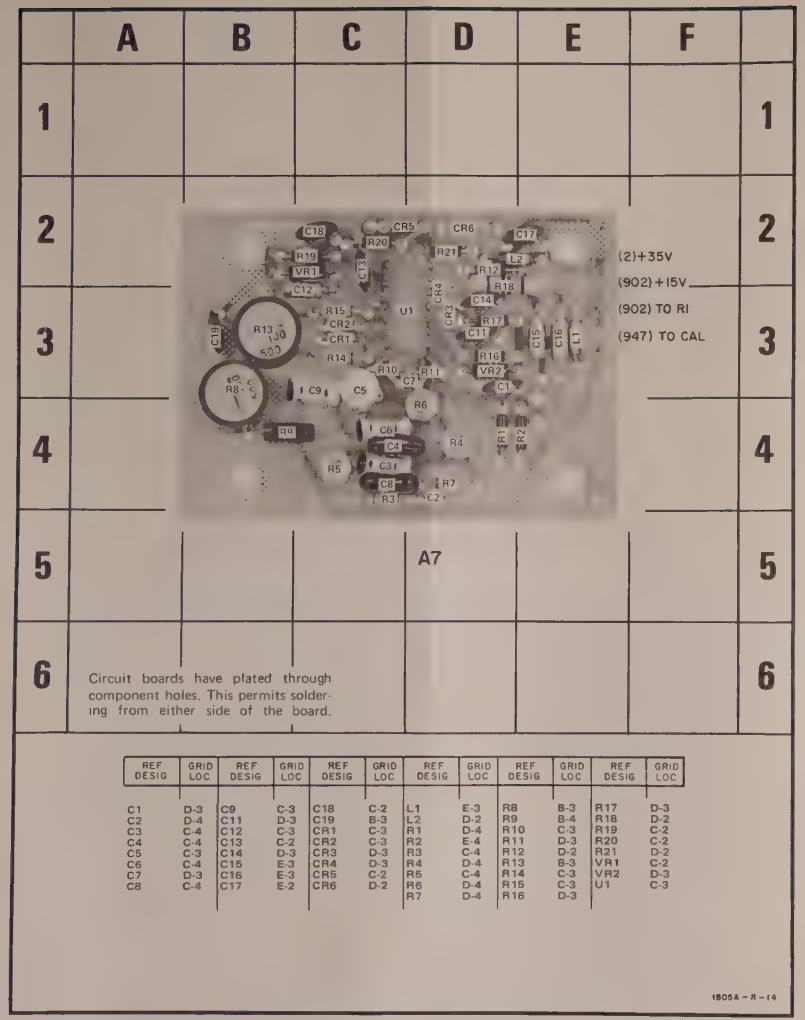
A B C D E F
1 2 3 4 5 6
(2)+35V
(902)+15V
(902) TO RI
(947) TO CAL
A7
Circuit boards have plated through component holes. This permits soldering from either side of the board.
1805A-R-14

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	D-3	C9	C-3	C18	C-2	L1	E-3	R8	B-3	R17	D-3
C2	D-4	C11	D-3	C19	B-3	L2	D-2	R9	B-4	R18	D-2
C3	C-4	C12	C-3	CR1	C-3	R1	D-4	R10	C-3	R19	C-2
C4	C-4	C13	C-2	CR2	C-3	R2	E-4	R11	D-3	R20	C-2
C5	C-3	C14	D-3	CR3	D-3	R3	C-4	R12	D-2	R21	D-2
C6	C-4	C15	E-3	CR4	D-3	R4	D-4	R13	B-3	VR1	C-2
C7	D-3	C16	E-3	CR5	C-2	R5	C-4	R14	C-3	VR2	D-3
C8	C-4	C17	E-2	CR6	D-2	R6	D-4	R15	C-3	U1	C-3
						R7	D-4	R16	D-3		

Figure 8-10. Main Amplifier Board A7, Component Identification



A8

Figure 8-11. Output Amplifier Board A8, Component Identification

VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 4

OSCILLOSCOPE

Focus	as necessary
Intensity	as necessary
Horizontal position	as necessary
Mag	X1
Display	Internal

TIME BASE

Time/division	0.5 m sec
Trigger	Internal
Mode	Auto

MODEL 1805A

DISPLAY	A
TRIG SOURCE	A
Polarity	+ UP
VOLTS DIV	.005
VERNIER	CAL
POSITION	as necessary
Coupling	GND

Figure 8-12. Output Amplifier Schematic (Sheet 1 of 2)

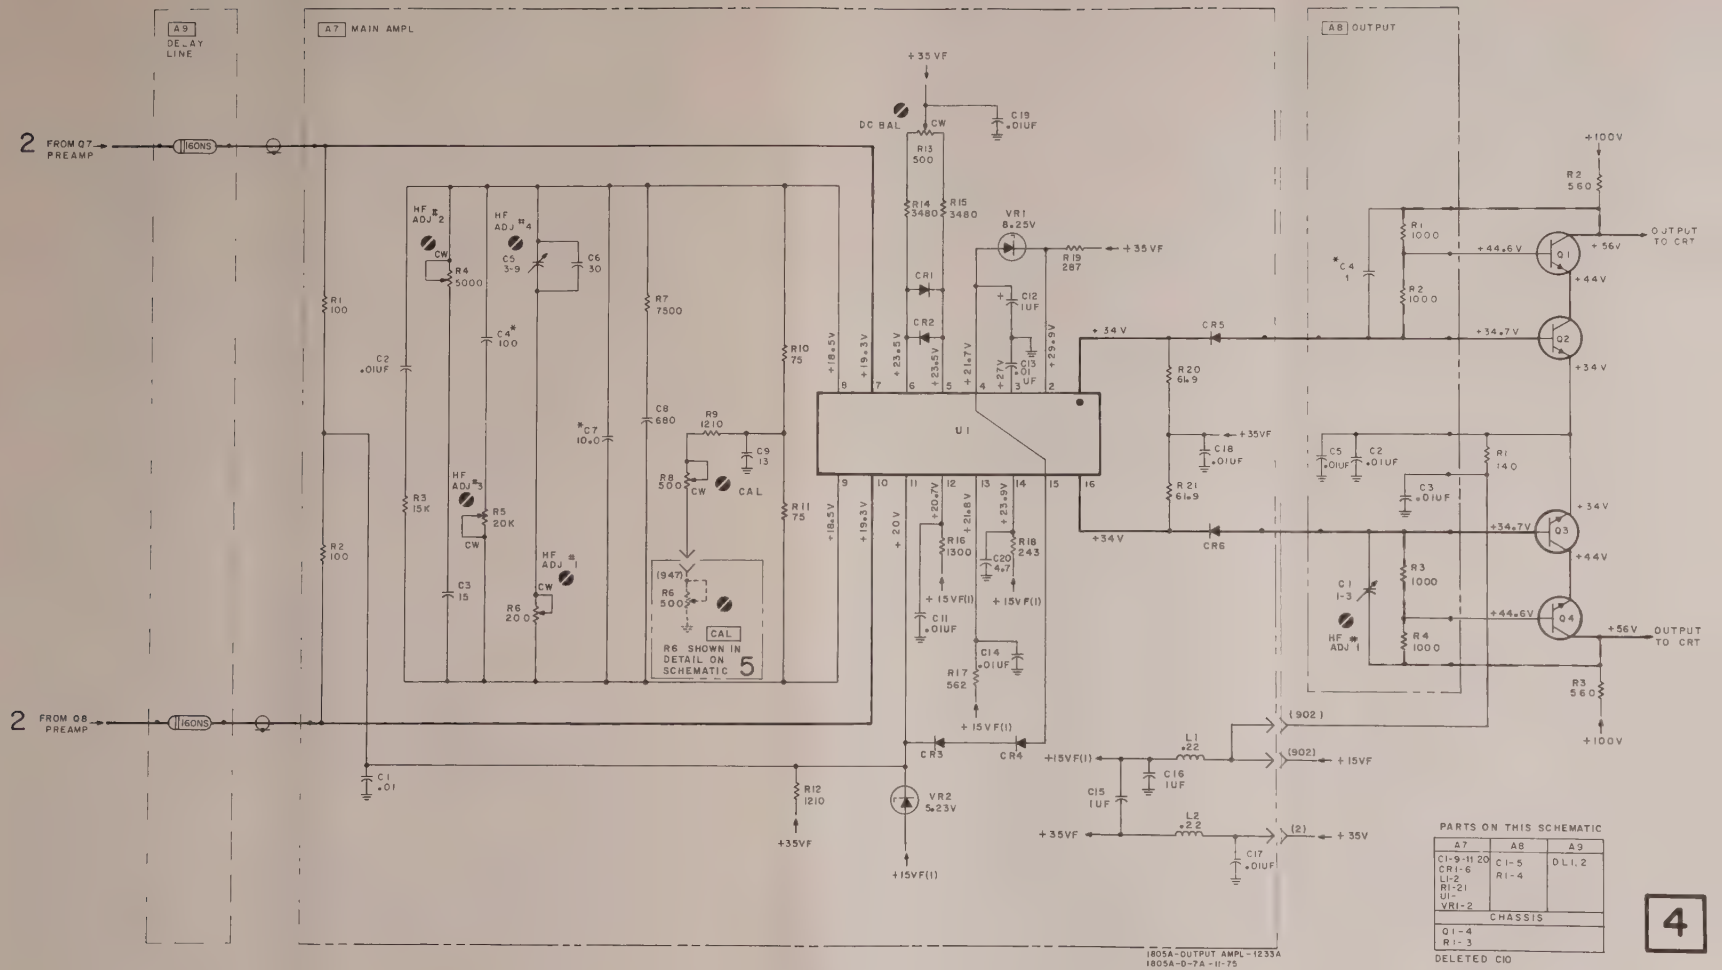

Figure 8-12.
Output Amplifier Schematic (Sheet 2 of 2)

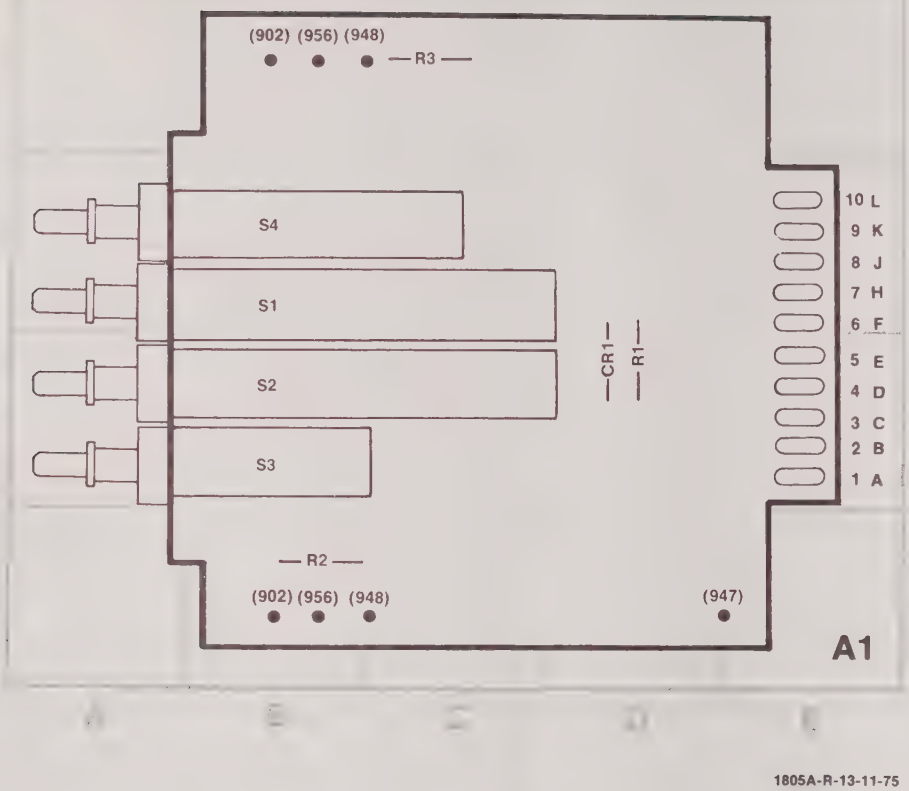

REF DESIG	GRID LOC	REF DESIG	GRID LOC
CR1	D-3	S1	B-2
R1	D-3	S2	B-3
R2	B-4	S3	B-3
R3	C-1	S4	B-2

Figure 8-13. Top Switch Board A1, Component Identification

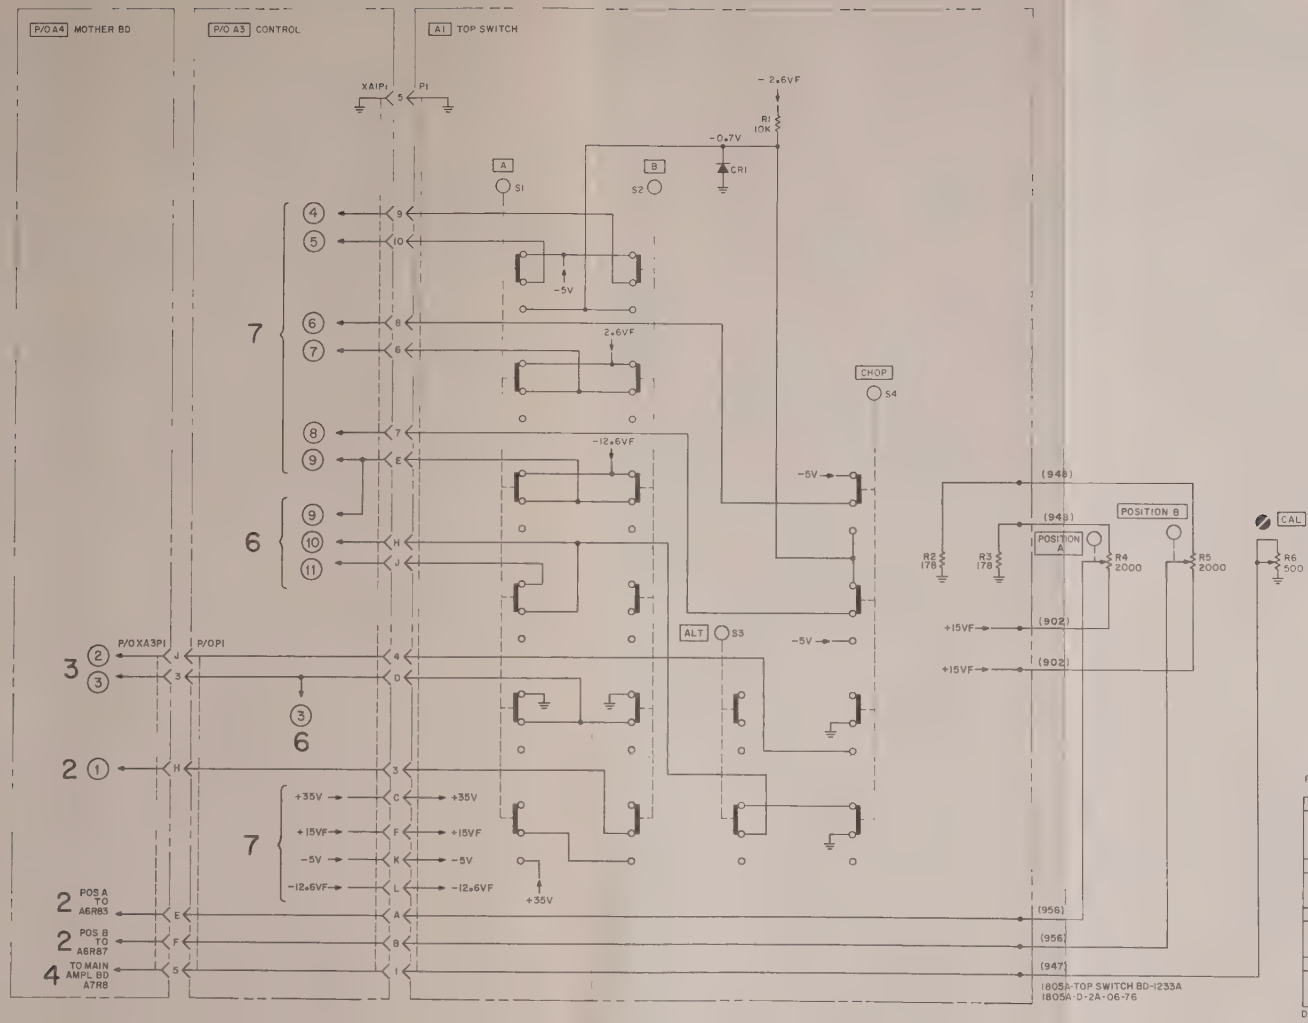

5

Figure 8-14.
Top Switch Board Schematic

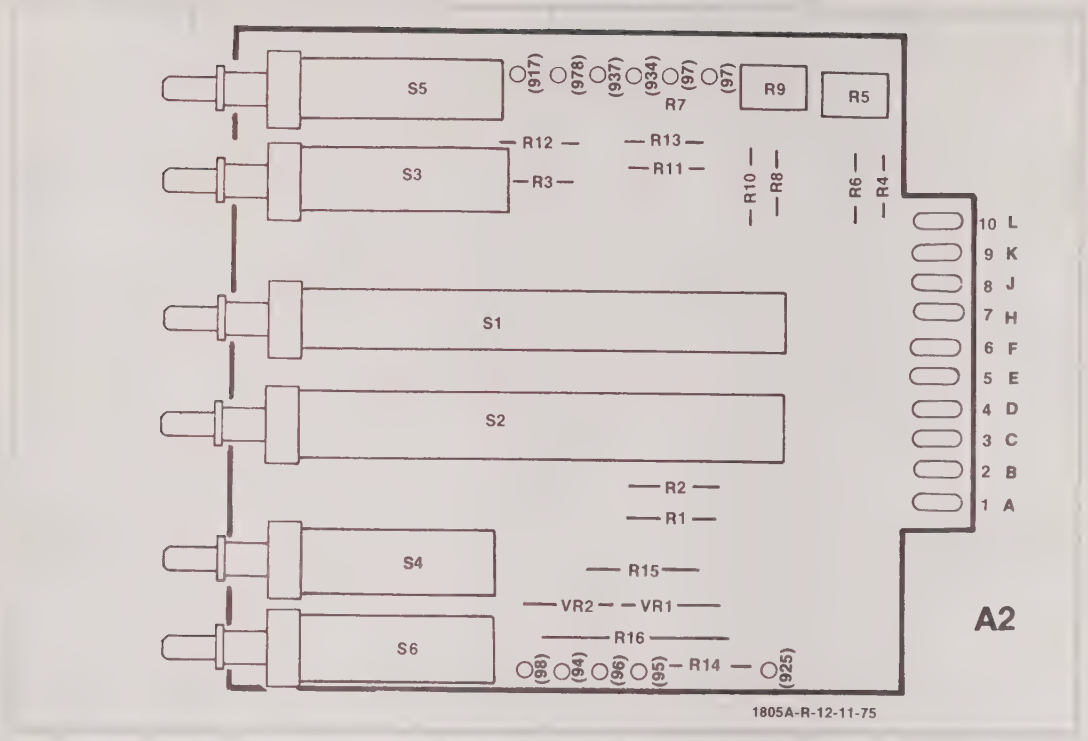

REF DESIG	GRID LOC	REF DESIG	GRID LOC
R1	D-3	R13	D-1
R2	D-3	R14	D-4
R3	C-1	R15	D-4
R4	E-1	R16	D-4
R5	E-1	S1	C-2
R6	E-1	S2	C-3
R7	D-1	S3	C-1
R8	E-1	S4	C-4
R9	E-1	S5	C-1
R10	E-1	S6	C-4
R11	D-1	VR1	D-4
R12	C-1	CR2	D-4

Figure 8-15. Bottom Switch Board A2, Component Identification

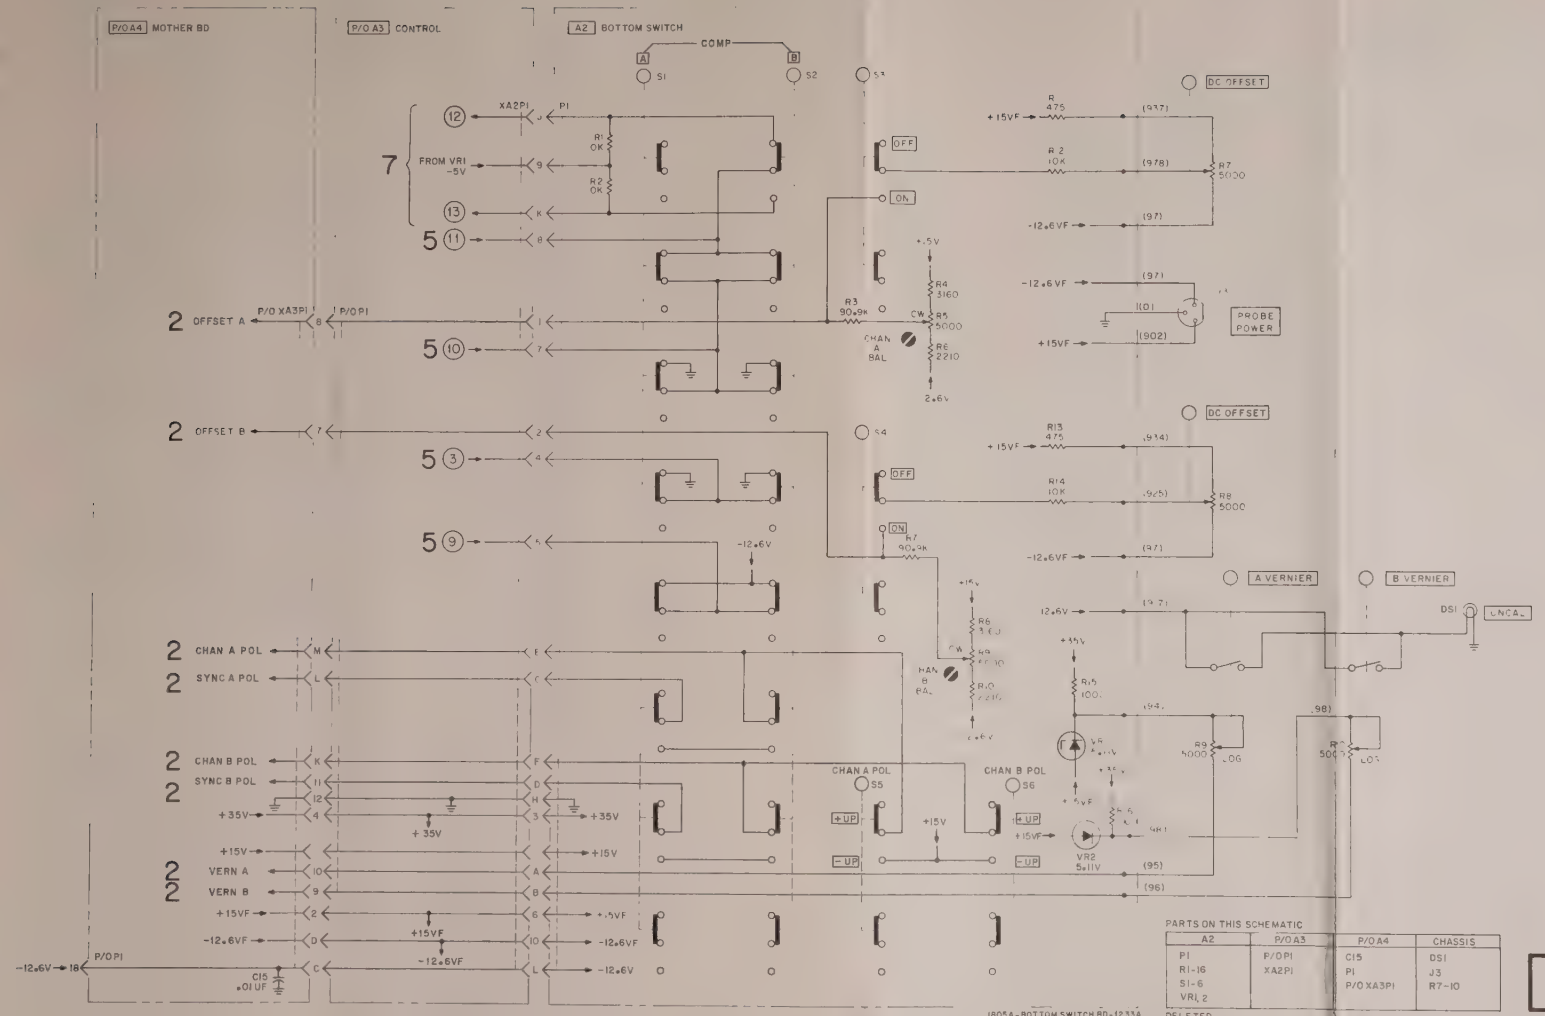

PARTS ON THIS SCHEMATIC

A2	P/O A3	P/O A4	CHASSIS
P1	P/O P1	C15	DS1
R1-16	XA2P1	P1	J3
S1-6		P/O XA3P1	R7-10
VR1, 2			

DELETED

6

Figure 8-16.
Bottom Switch Board Schematic

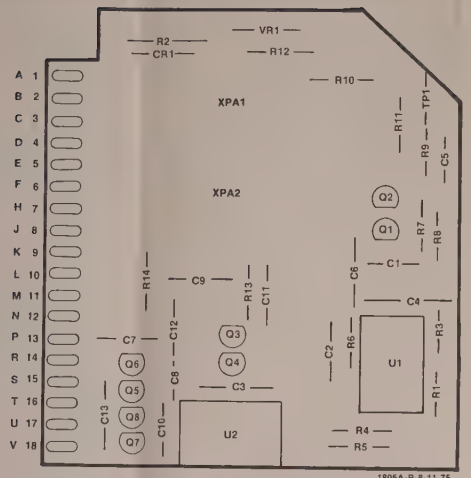

A3

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	E-3	C12	C-4	Q8	C-4	R10	D-1
C2	D-4	C13	B-4	R1	E-4	R11	E-2
C3	D-4	CR1	C-1	R2	C-1	R12	D-1
C4	E-3	Q1	E-3	R3	E-4	R13	D-3
C5	E-2	Q2	E-2	R4	E-5	R14	C-3
C6	E-3	Q3	D-4	R5	E-5	U1	E-4
C7	C-4	Q4	D-4	R6	E-4	U2	D-5
C8	C-4	Q5	C-4	R7	E-3	VR1	D-1
C9	C-3	Q6	C-4	R8	E-3	XPA1	C-2
C10	C-4	Q7	C-5	R9	E-2	XPA2	C-2
C11	D-3						

Figure 8-17. Control Board A3, Component Identification

VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 7

OSCILLOSCOPE

Focus	as necessary
Intensity	as necessary
Horizontal position	as necessary
Mag	X1
Display	Internal

TIME BASE

Time/division	0.5 m sec
Trigger	Internal
Mode	Auto

MODEL 1805A

DISPLAY	A
TRIG SOURCE	A
Polarity	+ UP
VOLTS/DIV	.005
VERNIER	CAL
POSITION	as necessary
Coupling	GND

Figure 8-18. Control Board Schematic (Sheet 1 of 2)

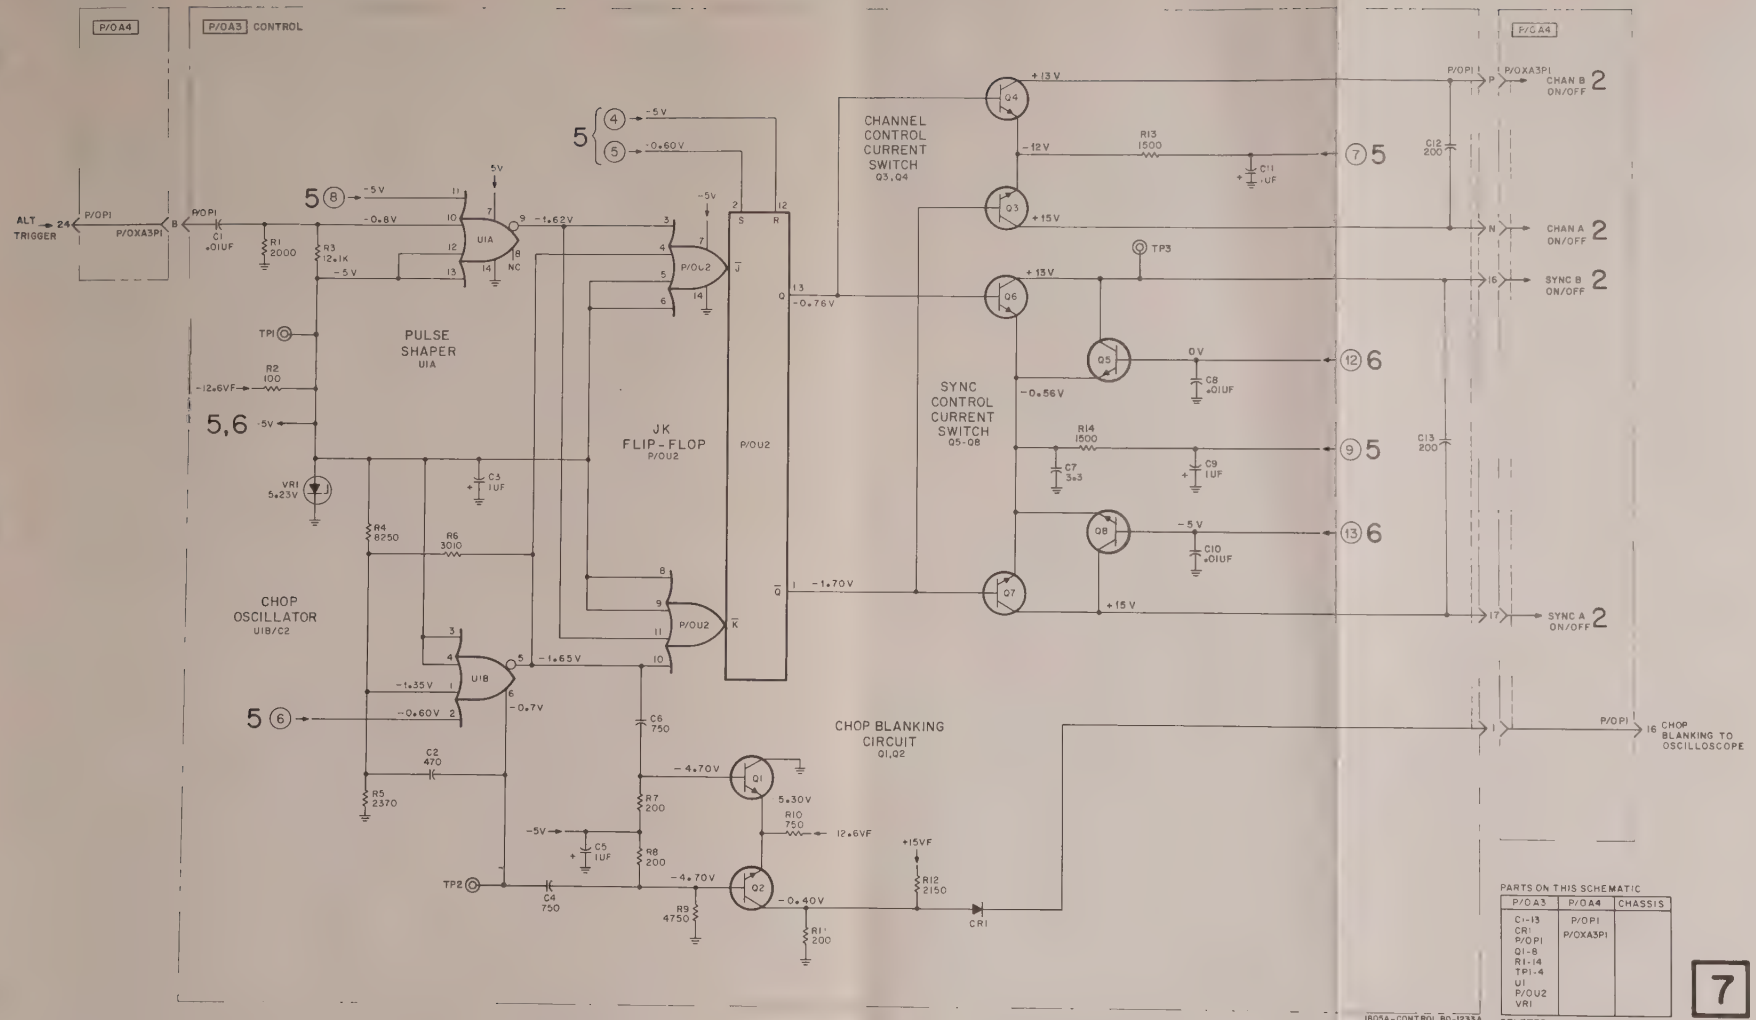

PARTS ON THIS SCHEMATIC

P/OA3	P/OA4	CHASSIS
C1-13 CR1 P/OP1 Q1-8 R1-14 TP1-4 U1 P/OU2 VR1	P/OP1 P/OXA3P1	

DELETED.

7

Figure 8-18.
Control Board Schematic (Sheet 2 of 2)

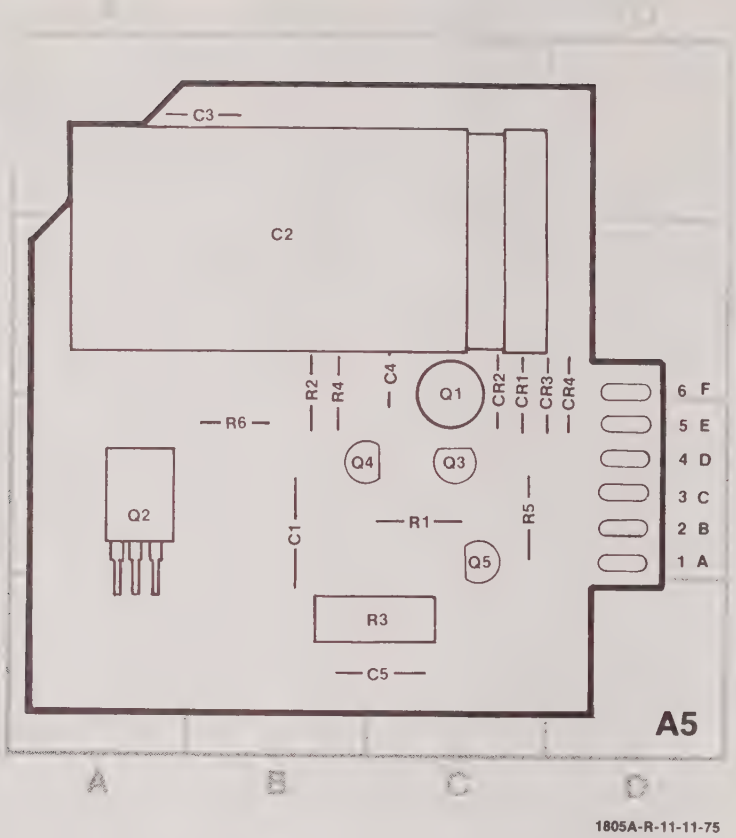

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-3	CR1	C-2	Q2	A-3	R2	B-2
C2	B-2	CR2	C-2	Q3	C-3	R3	C-4
C3	B-1	CR3	D-2	Q4	C-4	R4	B-2
C4	C-2	CR4	D-2	Q5	B-3	R5	C-3
C5	C-4	Q1	C-2	R1	C-3	R6	B-3

Figure 8-19. Power Supply Board A5, Component Identification

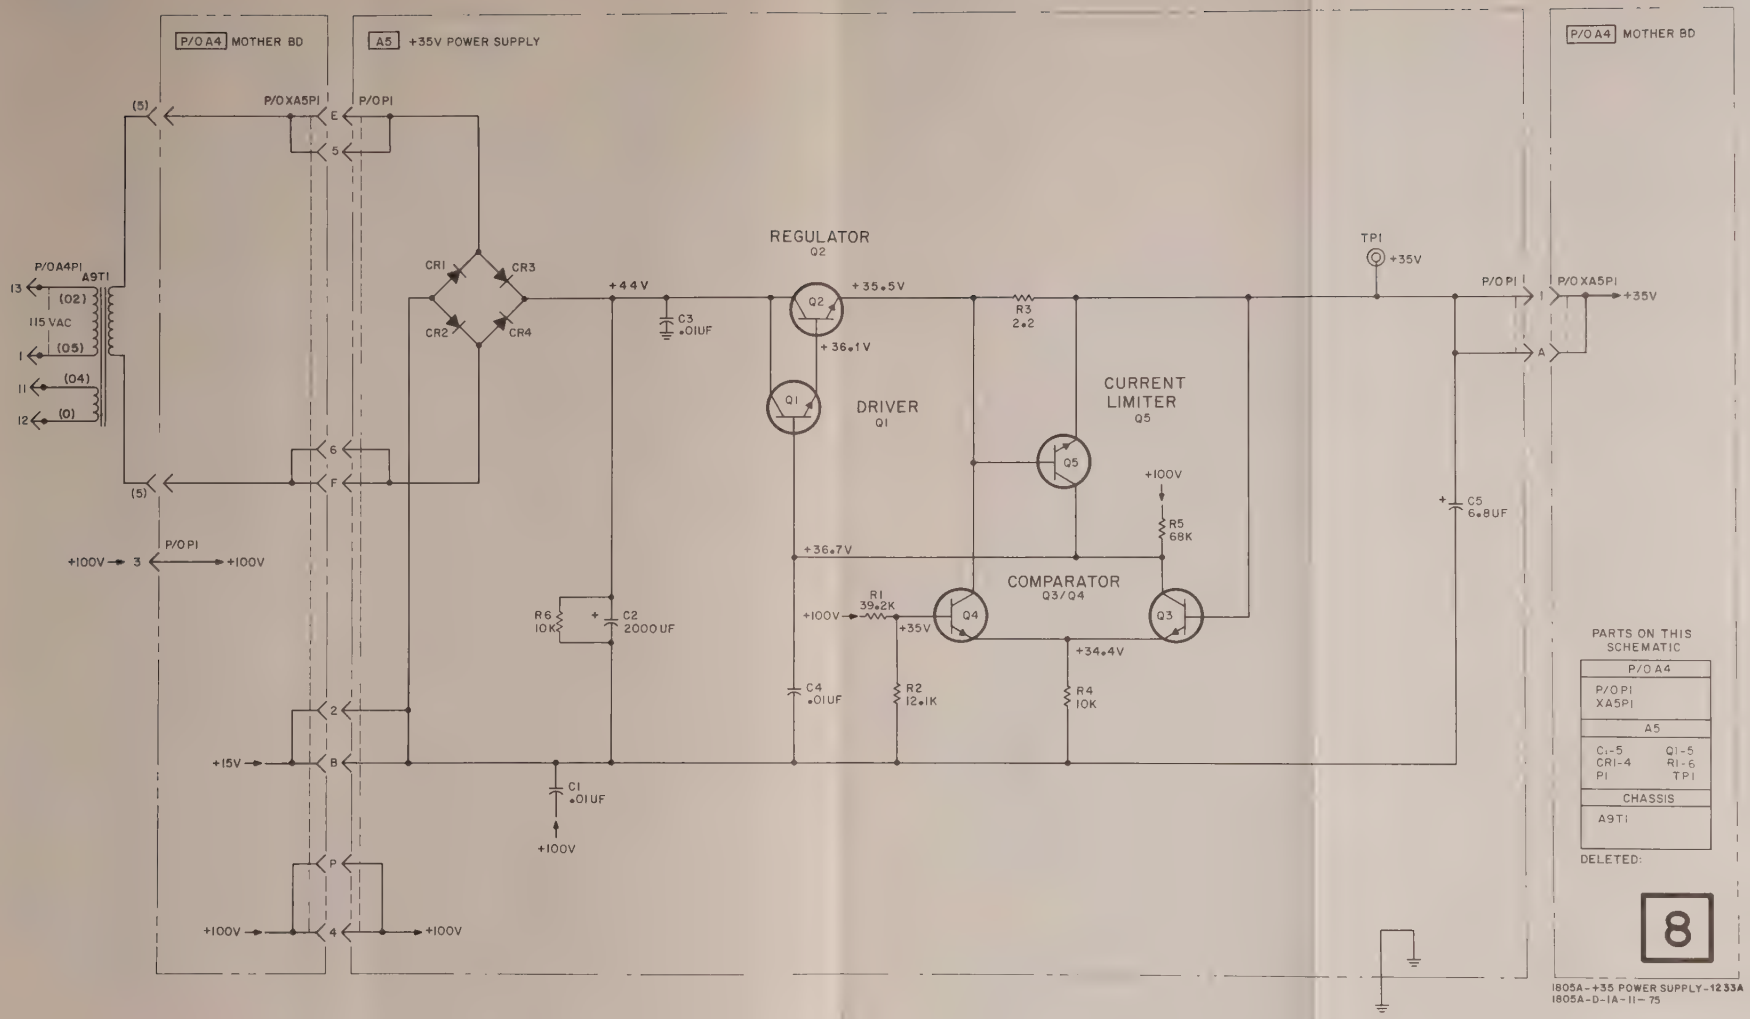

Figure 8-20.
Power Supply Schematic

HEWLETT hp PACKARD

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
8290 Whitesburg Dr , S E
P O Box 4207
Huntsville 35802
Tel (205) 881-4591
TWX 810-726-2204

Medical Only
228 W Valley Ave
Room 220
Birmingham 35209
Tel (205) 942-2081

ARIZONA
2336 E Magnolia St
Phoenix 85034
Tel (602) 244-1361

2424 East Aragon Rd
Tucson 85706
Tel (602) 294-3148

***ARKANSAS**
Medical Service Only
P O Box 5646
Brady Station
Little Rock 72205
Tel (501) 664-8773

CALIFORNIA
1430 East Orangethorpe Ave
Fullerton 92631
Tel (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel (213) 877-1282
TWX 910-499-2170

6305 Arizona Place
Los Angeles 90045
Tel (213) 649-2511
TWX 910-328-6147

***Los Angeles**
Tel (213) 776-7500

3003 Scott Boulevard
Santa Clara 95050
Tel (408) 249-7000
TWX 910-338-0518

***Ridgecrest**
Tel (714) 446-6165

2220 Watt Ave
Sacramento 95825
Tel (916) 482-1463

9606 Aero Drive
P O Box 23333
San Diego 92123
Tel (714) 279-3200

COLORADO
5600 South Ulster Parkway
Englewood 80110
Tel (303) 771-3455

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel (203) 389-6551
TWX 710-465 2029

FLORIDA
P O Box 24210
2806 W Oakland Park Blvd
Ft. Lauderdale 33307
Tel (305) 731-2020
TWX 510-955-4099

***Jacksonville**
Medical Service only
Tel (904) 725-6333

P O Box 13910
6177 Lake Ellenor Dr
Orlando 32809
Tel (305) 859-2900
TWX 810-850-0311

P O Box 12826
Pensacola 32575
Tel (904) 434-3081

GEORGIA
P O Box 105005
Atlanta 30348
Tel (404) 434-4000
TWX 810-766-4890

Medical Service Only
***Augusta** 30903
Tel (404) 736-0592

HAWAII
2875 So King Street
Honolulu 96814
Tel (808) 955-4455

ILLINOIS
5500 Howard Street
Skokie 60076
Tel (312) 677-0400
TWX 910-223-3613

***St. Joseph**
Tel (217) 469-2133

INDIANA
7301 North Shaderand Ave
Indianapolis 46250
Tel (317) 842-1000
TWX 810-260-1796

IOWA
1902 Broadway
Iowa City 52240
Tel (319) 338-9466
Night (319) 338-9467

***KANSAS**
Derby
Tel (316) 267-3655

KENTUCKY
Medical/Calculator Only
Atkinson Square
3901 Atkinson Dr ,
Suite 207
Louisville 40218
Tel (502) 456-1573

LOUISIANA
P O Box 840
3239 Williams Boulevard
Kenner 70062
Tel (504) 721-6201
TWX 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel (301) 944-5400
TWX 710-862-9157

2 Choke Cherry Road
Rockville 20850
Tel (301) 948-6370
TWX 710-828-9684

MASSACHUSETTS
32 Hartwell Ave
Lexington 02173
Tel (617) 861-8960
TWX 710-326-6904

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel (313) 476-6400
TWX 810-242-2900

MINNESOTA
2400 N Prior Ave
Roseville 55113
Tel (612) 636-0700
TWX 910-563-3734

MISSISSIPPI
***Jackson**
Medical Service only
Tel (601) 982-9363

MISSOURI
11131 Colorado Ave
Kansas City 64137
Tel (816) 763-8000
TWX 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel (314) 567-1455
TWX 910-764-0830

NEBRASKA
Medical Only
7171 Mercy Road
Suite 110
Omaha 68106
Tel (402) 392-0948

NEW JERSEY
W 120 Century Rd
Paramus 07652
Tel (201) 265-5000
TWX 710-990-4951

NEW MEXICO
P O Box 11634
Station E
11300 Lomas Blvd. N E
Albuquerque 87123
Tel (505) 292-1330
TWX 910-989-1185

156 Wyatt Drive
Las Cruces 88001
Tel (505) 526-2485
TWX 910-983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel (518) 458-1550
TWX 710-441-8270

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel (201) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel (516) 921-0300

201 South Avenue
Poughkeepsie 12601
Tel (914) 454-7330
TWX 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel (716) 473-9500
TWX 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel (315) 455-2486
TWX 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel (516) 921-0300
TWX 710-990-4951

NORTH CAROLINA
P O Box 5188
1923 North Main Street
High Point 27262
Tel (919) 885-8101
TWX 510-926-1516

OHIO
16500 Sprague Road
Cleveland 44130
Tel (216) 243-7300
TWX 810-423-9431

330 Progress Rd
Dayton 45449
Tel (513) 859-8202
TWX 810-474-2818

1041 Kingsmill Parkway
Columbus 43229
Tel (614) 436-1041

OKLAHOMA
P O Box 32008
Oklahoma City 73132
Tel (405) 721-0200
TWX 910-830-6862

OREGON
17890 SW Lower Boones
Ferry Road
Tualatin 97062
Tel (503) 620-3350

PENNSYLVANIA
111 Zeta Drive
Pittsburgh 15238
Tel (412) 782-0400
Night 782-0401
TWX 710-795-3124

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel (215) 265-7000
TWX 510-660 2670

SOUTH CAROLINA
6941-0 N Trenholm Road
Columbia 29260
Tel (803) 782-6493

TENNESSEE
***Memphis**
Medical Service only
Tel (901) 274-7472

***Nashville**
Medical Service only
Tel (615) 244-5448

TEXAS
P O Box 1270
201 E Arapaho Rd
Richardson 75080
Tel (214) 231-6101
TWX 910-867-4723

P O Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel (713) 781-6000
TWX 910-881-2645

205 Billy Mitchell Road
San Antonio 78226
Tel (512) 434-8241
TWX 910-871-1170

UTAH
2160 South 3270 West Street
Salt Lake City 84119
Tel (801) 487-0715

VIRGINIA
Medical Only
P O Box 12778
No 7 Koger Exec Center
Suite 212
Norfolk 23502
Tel (804) 497-1026/7

P O Box 9854
2914 Hungary Springs Road
Richmond 23228
Tel (804) 285-3431
TWX 710-956-0157

WASHINGTON
Bellefield Office Pk
1203-114th Ave S E
Bellevue 98004
Tel (206) 454-3971
TWX 910-443-2446

***WEST VIRGINIA**
Medical/Analytical Only
Charleston
Tel (304) 345-1640

WISCONSIN
9004 West Lincoln Ave
West Allis 53227
Tel (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia; North Hollywood, California; Rockville, Maryland; Skokie, Illinois. Their complete addresses are listed above.

***Service Only**

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd
11748 Kingsway Ave
Edmonton T5G 0X5
Tel (403) 452-3670
TWX 610-831-2431 EDTH

Hewlett-Packard (Canada) Ltd
915-42 Avenue S E Suite 102
Calgary T2G 1Z1
Tel (403) 287-1672
TWX 610-821-6141

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd
837 E Cordova Street
Vancouver V6A 3R2
Tel (604) 254-0531
TWX 610-922-5059 VCR

MANITOBA
Hewlett-Packard (Canada) Ltd
513 Century St
St James
Winnipeg R3H 0L8
Tel (204) 786-7581
TWX 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd
800 Windmill Road
P O Box 931
Dartmouth B2Y 3Z6
Tel (902) 469-7820
TWX 610-271-4482 HFX

ONTARIO
Hewlett-Packard (Canada) Ltd
1785 Woodward Dr
Ottawa K2C 0P9
Tel (613) 225-6530
TWX 610-562 8968

Hewlett-Packard (Canada) Ltd
6877 Goreway Drive
Mississauga L4V 1L9
Tel (416) 678-9430
TWX 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd
275 Hymus Blvd
Pointe Claire H9R 1G7
Tel (514) 697-4232
TWX 610-422-3022
TLX 05-821521 HPCL

Hewlett-Packard (Canada) Ltd
2376 Galvani Street
Ste-Foy G1N 4G4
Tel (418) 688-8710
TWX 610-57-5525

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd in Mississauga

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S A C e I
Lavalle 1171-3° Piso
Buenos Aires
Tel 35-0436 35-0627 35-0341
Telex Publi C Booth No 9
Cable HEWPACK ARG

BOLIVIA
Stambuk & Mark (Bolivia) Ltda
Av Mariscal Santa Cruz 1342
La Paz
Tel 40626 53163 52421
Telex 3560014
Cable BUKMAR

BRAZIL
Hewlett-Packard Do Brasil
I E C Ltda
Rua Frei Caneca 1140-52 Bela Vista
01307-**São Paulo**-SP
Tel 288-71-11, 287-81-20
287 61-93
Telex 391-1122602 HPBR BR
Cable HEWPACK São Paulo

Hewlett-Packard Do Brasil
I E C Ltda
Praca Dom Feliciano 78-8°
andar (Sala 806/8)
90000 **Pôrto Alegre**-RS
Tel 25-84 70-DDD (0512)
Cable HEWPACK Pôrto Alegre

Hewlett-Packard Do Brasil
I E C Ltda
Rua Siqueira Campos 53 4°
andar-Copacabana
20000-**Rio de Janeiro**-GB
Tel 257-80-94-DDD (021)
Telex 391-212-1905 HEWP BR
Cable HEWPACK
Rio de Janeiro

CHILE
Calcagni y Metcalfe Ltda
Alameda 580-Of 807
Casilla 2118
Santiago, 1
Tel 398613
Telex 350001 CALMET
Cable CALMET Santiago

Medical Only
General Machinery Co , Ltda
Paraguay 494
Casilla 13910
Santiago
Tel 31123, 31124
Cable GEMCO Santiago

COLOMBIA
Instrumentación
Henrix A Langebaex & Kier S A
Carrera 7 No 48-75
Apartado Aéreo 6287
Bogotá, D E
Tel 69-88-77
Cable AARIS Bogota
Telex 044 400

COSTA RICA
Cientifica Costarricense S A
Calle Central, Avenidas 1 y 3
Apartado 10159
San José
Tel 21-86-13
Cable GALGUR San José

ECUADOR
Medical Only
A F Viscaino Compañía Ltda
Av Rio Amazonas No 239
P O Box 2925
Quito
Tel 527-088,527-804
Cable ASTOR Quito

Calculators Only
Computadoras y Equipos
Electrónicos
P O Box 2695
Avda 12 De Octubre No 2207
Quito
Tel 233869 236783
Telex 02-2113 Sagita Ed
Cable Sagitra Quito

EL SALVADOR
IPESA
Bulevar de los Heroes II-48
San Salvador
Tel 252787

GUATEMALA
IPESA
Avenida La Reforma 3-48
Zona 9
Guatemala City
Tel 63627 64786
Telex 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana,
S A de C V
Torres Adalid No 21, 11° Piso
Col del Valle
Mexico 12, D F
Tel (905) 543-42-32
Telex 017-74-507

Hewlett-Packard Mexicana
S A de C V
Ave Construcción No 2184
Monterrey, N L
Tel 48-71-32, 48-71-84
Telex 038-843

NICARAGUA
Roberto Terán G
Apartado Postal 689
Edificio Terán
Managua
Tel 25114, 23412, 23454
Cable ROTERAN Managua

PANAMA
Electrónico Balboa S A
P O Box 4929
Calle Samuel Lewis
Ciudad de Panama
Tel 64-2700
Telex 3431103 Curunda
Canal Zone
Cable ELECTRON Panama

PARAGUAY
C J Melamed S R L
División Aparatos y Equipos
Médicos
División Aparatos y Equipos
Científicos y de Investigación
P O Box 676
Chile-482, Edificio Victoria
Asuncion
Tel 4-5069, 4 6272
Cable RAMEL

PERU
Compañía Electro Médica S A
Los Flamencos 145
San Isidro Casilla 1030
Lima 1
Tel 413485
Cable ELMED Lima

PUERTO RICO
Hewlett-Packard Inter-Americas
Puerto Rico Branch Office
P O Box 2908I
65th Inf Station
San Juan 00929
Calle 272 Urb Country Club
Carolina 00639
Tel (809) 762 7355,7455,7655
Telex 3450514

URUGUAY
Pablo Ferrando S A
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel 40-3102
Cable RADIUM Montevideo

VENEZUELA
Hewlett Packard de Venezuela
C A
Apartado 50933 Caracas 105
Edificio Segre
Tercera Transversal
Los Ruices Norte
Caracas 107
Tel 35-00-07 35-00-84
35-00-65 35-00-31
Telex 25146 HEWPACK
Cable HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT
Hewlett Packard
Inter Americas
3200 Hillview Ave
Palo Alto California 94304
Tel (415) 493-1501
TWX 910-373-1260
Cable HEWPACK Palo Alto
Telex 034 8300 034 8493

HEWLETT hp PACKARD

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra
Empresa Técnica de Equipamentos Eléctricos, S.A.R.L.
R. Barbosa Rodrigues, 42-1°DT.°
Caixa Postal, 6487
Luanda
Tel: 35515/6
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 895351
Telex: 31-024
Cable: HEWPARD Melbourne

Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble
New South Wales, 2073
Tel: 4496566
Telex: 21561
Cable: HEWPARD Sydney

Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, S.A., 5063
Tel: 2725911
Telex: 82536
Cable: HEWPARD Adelaide

Hewlett-Packard Australia Pty. Ltd.
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 804244
Telex: 62650
Cable: HEWPARD Canberra

Hewlett Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, Queensland 4000
Tel: 2291544
Cable: HEWPARD Brisbane

BANGLADESH
The General Electric Co. of Bangladesh Ltd.
Magnet House 72
Dilkusha Commercial Area
Motijheel, Dacca 2
Tel: 252415, 252419
Telex: 734
Cable: GECDAC Dacca

ETHIOPIA
Abdella Abdulmalik
P.O. Box 2635
Addis Abeba
Tel: 11 93 40

GUAM
Medical Only
Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8947
Tamuning 96911
Tel: 646-4513
Cable: EARMED Guam

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
Hong Kong
Tel: 5-455644
Telex: 74766 SCHMC HX

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 400 020
Tel: 29 50 21
Telex: 011-2156
Cable: BLUEFROST

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093
Cable: FROSTBLUE

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751
Cable: BLUESTAR

Blue Star Ltd.
Bhavdeep
Stadium Road
Ahmedabad 380 014
Tel: 42880
Telex: 234
Cable: BLUEFROST

Blue Star Ltd.
7 Hare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 021-7655
Cable: BLUESTAR

Blue Star Ltd.
Bhandari House
7th. & 8th Floor
91 Nehru Place
New Delhi 110 024
Tel: 634770 & 635166
Telex: 031-2463
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House
11/11A Magarath Road
Bangalore 560 025
Tel: 55668
Telex: 043-430
Cable: BLUESTAR

Blue Star Ltd.
Meeakshi Mandiram
xxx/1678 Mahatma Gandhi Rd.
Cochin 682 016
Tel: 32069,32161,32282
Telex: 0885-514
Cable: BLUESTAR

Blue Star Ltd.
1-1-117/1
Sarojini Devi Road
Secunderabad 500 003
Tel: 70126, 70127
Telex: 015-459
Cable: BLUEFROST

Blue Star Ltd.
2/34 Kodambakkam High Road
Madras 600 034
Tel: 82056
Telex: 041-379
Cable: BLUESTAR

INDONESIA
BERCA Indonesia P.T.
P.O. Box 496/Jkt.
Jln. Abdul Muis 62
Jakarta
Tel: 349255, 349886
Telex: 46748 BERSIL IA
Cable: BERSAL

BERCA Indonesia P.T.
P.O. Box 174/Sby.
23 Jln. Jimerto
Surabaya
Tel: 42027
Cable: BErcacon

ISRAEL
Electronics Engineering Div.
of Motorola Israel Ltd.
16, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Telex: 33569, 34164
Cable: BASTEL Tel-Aviv

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, Osaka-shi
Osaka 532
Tel: 06-304-6021
Telex: 523-3624

Yokogawa-Hewlett-Packard Ltd.
29-21, Takaido-Higashi 3-chome
Suginami-ku, **Tokyo** 168
Tel: 03-331-6111
Telex: 232-2024 YHP-Tokyo
Cable: YHPMARKET TOK 23 724

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
24 Kami Sasajima-cho
Nakamura-ku, **Nagoya**, 450
Tel: 052 571-5171

Yokogawa-Hewlett-Packard Ltd.
Tangawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
105, 1-chome, San-no-maru
Mito, Ibaragi 310
Tel: 0292-25-7470

Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

KENYA
Advanced Communications Ltd.
P.O. Box 30070
Nairobi
Tel: 331955
Telex: 22639

Medical Only
International Aeradio (E.A.) Ltd.
P.O. Box 19012
Nairobi Airport
Nairobi
Tel: 336055,56
Telex: 22201/22301
Cable: INTAERIO Nairobi

Medical Only
International Aeradio (E.A.) Ltd.
P.O. Box 95221
Mombasa

KOREA
Samsung Electronics Co., Ltd.
15th Floor, Daeyongak Bldg.
25-5, 1-KA
Choong Moo-Ro, Chung-Ku
Seoul
Tel: (23) 6811, 778-3401/2/3/4
Telex: 2257S

MALAYSIA
Hewlett-Packard Sales SDN BHD
Suite 2.21/2.22
Bangunan Angkasa Raya
Jalan Ampang
Kuala Lumpar
Tel: 23320/27491

Protel Engineering
P.O. Box 1917
Lot 259, Satok Road
Kuching, **Sarawak**
Tel: 53544
Cable: PROTELENG

MOZAMBIQUE
A.N. Goncalves, Ltd.
162, 1° Apt. 14 Av. D. Luis
Caixa Postal 107
Maputo
Tel: 27091, 27114
Telex: 6-203 NEGON Mo
Cable: NEGON

NEW GUINEA
Hewlett-Packard Australia Pty. Ltd.
Development Bank Building
Ground Floor
Ward Strip
Port Moresby, Paupua
Tel: 258933

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtney Place
Wellington
Tel: 877-199
Cable: HEWPACK Wellington

Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
Box 51092
Pakuranga
Tel: 569-651
Cable: HEWPACK Auckland

Analytical-Medical Only
Medical Supplies N.Z. Ltd.
Scientific Division
79 Carlton Gore Road, Newmarket
P.O. Box 1234
Auckland
Tel: 75-289
Cable: DENTAL Auckland

Analytical-Medical Only
Medical Supplies N.Z. Ltd.
Norrie and Parumoana Streets
Porirua
Tel: 75-098
Telex: 3858

Analytical-Medical Only
Medical Supplies N.Z. Ltd.
P.O. Box 309
239 Stanmore Road
Christchurch
Tel: 892-019
Cable: DENTAL Christchurch

Analytical-Medical Only
Medical Supplies N.Z. Ltd.
303 Great King Street
P.O. Box 233
Dunedin
Tel: 88-817
Cable: DENTAL Dunedin

NIGERIA
The Electronics Instrumentations Ltd.
N6B/770 Oyo Road
Oluseun House
P.M.B. 5402
Ibadan
Tel: 461577
Telex: 31231 TEIL NG
Cable: THETIEL Ibadan

The Electronics Instrumentations Ltd.
144 Agege Motor Road, Mushin
P.O. Box 6645
Lagos
Cable: THETEIL Lagos

PAKISTAN
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Telex: 2894
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
38B, Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
The Online Advanced Systems Corporation
Rico House
Amorsolo cor. Herrera Str.
Legaspi Village, Makati
P.O. Box 1510
Metro **Manila**
Tel: 85-35-81, 85-34-91,85-32-21
Telex: 3274 ONLINE

RHODESIA
Field Technical Sales
45 Kelvin Road North
P.O. Box 3458
Salisbury
Tel: 705231 (5 lines)
Telex: RH 4122

SINGAPORE
Hewlett-Packard Singapore (Pte.) Ltd.
1150 Depot Road
Alexandra P.O. Box 58
Singapore 4
Tel: 270-2355
Telex: HPSG RS 21486
Cable: HEWPACK, Singapore

SOUTH AFRICA
Hewlett-Packard South Africa (Pty.) Ltd.
Private Bag Wendywood
Sandton, Transvaal, 2144
Hewlett-Packard Centre
Daphne Street, Wendywood,
Sandton, 2144
Tel: 802-1040/8
Telex: 8-4782
Cable: HEWPACK Johannesburg

Hewlett-Packard South Africa (Pty.) Ltd.
P.O. Box 120
Howard Place, Cape Province, 7450
Pine Park Centre, Forest Drive,
Pinelands, Cape Province, 7405
Tel: 53-7955 thu 9
Telex: 57-0006

SRI LANKA
Metropolitan Agencies Ltd.
209/9 Union Place
Colombo 2
Tel: 35947
Telex: 1377METROLTD CE
Cable: METROLTD

SUDAN
Radison Trade
P.O. Box 921
Khartoum
Tel: 44048
Telex: 375

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819160-9,3141010
Cable: HEWPACK TAIPEI

Hewlett-Packard Far East Ltd.
Taiwan Branch
68-2 Chung Cheng 3rd. Road
Kaohsiung
tel: (07) 242318-Kaohsiung

Analytical Only
San Kwang Instruments Co., Ltd.
20 Yung Sui Road
Taipei
Tel: 3615446-9 (4 lines)
Telex: 22894 SANKWANG
Cable: SANKWANG Taipei

TANZANIA
Medical Only
International Aeradio (E.A.), Ltd.
P.O. Box 861
Dar es Salaam
Tel: 21251 Ext. 265
Telex: 41030

THAILAND
UNIMESA Co. Ltd.
Elcom Research Building
2538 Sukumvit Ave.
Bangchak, Bangkok
Tel: 3932387, 3930338
Cable: UNIMESA Bangkok

UGANDA
Medical Only
International Aeradio (E.A.), Ltd.
P.O. Box 2577
Kampala
Tel: 54388
Cable: INTAERIO Kampala

ZAMBIA
R.J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Tel: 73793
Cable: ARJAYTEE, Lusaka

OTHER AREAS NOT LISTED, CONTACT:
Hewlett-Packard Intercontinental
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 856-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
Twx: 610-821-6141

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
Richmond V6X 2W7
Tel: (604) 270-2277
TWX: 610-925-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
380-550 Century St.
Winnipeg R3H 0Y1
Tel: (204) 786-6701
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 469-7820
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
1020 Morrison Dr.
Ottawa K2H 8K7
Tel: (613) 820-6483
TWX: 610-563-1636

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga L4V 1M8
Tel: (416) 678-9430
TWX: 610-492-4246

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
London N6E 2S5
Tel: (519) 686-9181

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 697-4232
TWX: 610-422-3022
TLX: 05-821-521 HPCL

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Mississauga.

2/79

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.
Av. Leandro N. Alem 822 - 12°
1001 **Buenos Aires**
Tel: 31-6063, 4.5.6
Telex: 122443 AR CIGY
Cable: HEWPACKARG

Biotron S.A.C.I.y.M.
Bolivar 177
1066 **Buenos Aires**
Tel: 30-4846, 34-9356, 34-0460, 33-2863
Telex: 011-7595
Cable: Biotron Baries

BOLIVIA
Casa Kavlin S.A.
Calle Potosi 1130
P.O. Box 500
La Paz
Tel: 41530, 53221
Telex: CWC BX 5298, ITT 3560082
Cable: KAVLIN

BRAZIL
Hewlett-Packard do Brasil I e C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 **Barueri** SP
Tel: 429-3222
Cable: HEWPACK Sao Paulo

Hewlett-Packard do Brasil I e C. Ltda.
Rua Padre Chagas, 32
90000-**Pôrto Alegre**-RS
Tel: (0512) 22-2998, 22-5621
Cable: HEWPACK Porto Alegre

Hewlett-Packard do Brasil I e C. Ltda.
Av. Epitacio Pessoa, 4664
Lagoa
20000-**Rio de Janeiro**-RJ
Tel:
Telex: 021-21905 HPBR-BR
Cable: HEWPACK
Rio de Janeiro

CHILE
Jorge Calcagni y Cia. Ltda.
Arturo Mackenna 3, Ofic. 1204
Casilla 16475
Correo 9, **Santiago**
Tel: 34152
Telex: JCALCAGNI

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aereo 6287
Bogotá, D.E.
Tel: 269-8877
Telex: 44400
Cable: AARIS Bogotá

Instrumentación
H.A. Langebaek & Kier S.A.
Carrera 63 No. 49-A-31
Apartado 54098
Medellin
Tel: 304475

COSTA RICA
Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San Jose
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
Cable: GALGUR

ECUADOR
Computadoras y Equipos Electrónicos del Ecuador
P.O. Box 6423 CCI
Eloy Alfaro No. 1824, 3°Piso
Quito
Tel: 453.482
Telex: 2548 CYEDE ED
Cable: CYEDE-Quito

Medical Only
Hospitalar S.A.
Casilla 3590
Robles 625
Quito
Tel: 545-250
Cable: HOSPITALAR-Quito

EL SALVADOR
IPESA
Bulevar de los Heroes 11-48
San Salvador
Tel: 252787

GUATEMALA
IPESA
Avenida Reforma 3-48, Zona 9
Guatemala City
Tel: 315627, 314786, 66471-5, ext. 9
Telex: 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana, S.A. de C.V.
Av. Periférico Sur No. 6501
Tepepan, Xochimilco
Mexico 23, D.F.
Tel: 905-676-4600
Telex: 017-74-507

Hewlett-Packard Mexicana, S.A. de C.V.
Ave. Construcción No. 2184
Monterrey, N.L.
Tel: 48-71-32, 48-71-84
Telex: 038-410

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 25114, 23412, 23454, 22400
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
Aparatado 4929
Panama 5
Calle Samuel Lewis
Edificio "Alfa", No. 2
Ciudad de Panama
Tel: 64-2700
Telex: 3483103 Curundu, Canal Zone
Cable: ELECTRON Panama

PERU
Compañía Electro Médica S.A.
Los Flamencos 145
San Isidro Casilla 1030
Lima 1
Tel: 41-4325
Telex: Pub. Booth 25424 SISIDRO
Cable: ELMED Lima

SURINAME
Surtel Radio Holland N.V.
Grote Hofstr. 3-5
P.O. Box 155
Paramaribo
Tel: 72118, 77880
Cable: Surtel

TRINIDAD & TOBAGO
CARTEL
Caribbean Telecoms Ltd.
P.O. Box 732
69 Frederick Street
Port-of-Spain
Tel: 62-53068

URUGUAY
Pablo Ferrando S.A.C.e.I.
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Telex: 702 Public Booth Para Pablo Ferrando
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela C.A.
P.O. Box 50933
Caracas 105
Los Ruices Norte
3a. Transversal
Edificio Segre
Caracas 107
Tel: 239-4133 (20 lines)
Telex: 25146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 856-1501
TWX: 910-373-1260
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelskai 52
P.O. Box 7
A-1205 **Vienna**
Tel: 351621-27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BAHRAIN
Medical Only
Wael Pharmacy
P.O. Box 648
Bahrain
Tel: 54886, 56123
Telex: 8550 WAEL GJ
Cable: WAELPHARM

Analytical Only
Al Hamidiya Trading
and Contracting
P.O. Box 20074
Manama
Tel: 259978, 259958
Telex: 8895 KALDIA GJ

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1,
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (02) 672 60 50
Cable: PALOBEN Brussels
Telex: 23-494 paloben bru

CYPRUS
Kyronics
19 Gregorios Xenopoulos Street
P.O. Box 1152
Nicosia
Tel: 45628/29
Cable: Kyronics Pandehis
Telex: 3018

CZECHOSLOVAKIA
Vyvojova a Provozni Zakladna
VyzKumnych Ustavu v Bechovicich
CSSR-25097 **Bechovice u Prahy**
Tel: 89 93 41
Telex: 12133

Institute of Medical Bionics
Vyskumny Ustav Lekarskej Bioniky
Jedlova 6
CS-88346
Bratislava-Kramare
Tel: 4251
Telex: 93229

DDR
Entwicklungslabor der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Waldheim/Meinsberg
Tel: 37 667
Telex: 518741

Export Contact AG Zuerich
Guenther Forgber
Schlegelstrasse 15
1040 **Berlin**
Tel: 42-74-12
Telex: 111889

DENMARK
Hewlett-Packard A/S
Datavej 52
DK-3460 **Birkerod**
Tel: (02) 81 66 40
Cable: HEWPACK AS
Telex: 37409 hpas dk

Hewlett-Packard A/S
Navervej 1
DK-8600 **Silkeborg**
Tel: (06) 82 71 66
Telex: 37409 hpas dk
Cable: HEWPACK AS

EGYPT
I.E.A.
International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
Cairo
Tel: 23 829
Telex: 93830
Cable: INTENGASSO

SAMITRO
Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdine-Cairo
Tel: 24932
Cable: SAMITRO CAIRO

FINLAND
Hewlett-Packard OY
Nahkahuosuntie 5
P.O. Box 6
SF-00211 **Helsinki** 21
Tel: (90) 6923031

FRANCE
Hewlett-Packard France
Avenue des Tropiques
Les Ulis
Boite Postale No. 6
91401 **Orsay**-Cedex
Tel: (1) 907 78 25
TWX: 600048F

Hewlett-Packard France
Chemin des Mouilles
B.P. 162
69130 **Ecully**
Tel: (78) 33 81 25,
TWX: 310617F

Hewlett-Packard France
Péricentre de la Cépière
31081 **Toulouse-Le Mirail**
Tel: (61) 40 11 12
TWX: 510957F

Hewlett-Packard France
Le Ligoures
Bureau de vente de Marseilles
Place Rouée de Villeneuve
I3100 **Aix-en-Provence**
Tel: (42) 59 41 02

Hewlett-Packard France
2, Allee de la Bourgnette
35100 **Rennes**
Tel: (99) 51 42 44
TWX: 740912F

Hewlett-Packard France
I8, rue du Canal de la Marne
67300 **Schiltigheim**
Tel: (88) 83 08 10
TWX: 890141F

Hewlett-Packard France
Immeuble péricentre
Rue van Gogh
59650 **Villeneuve** D Ascq
Tel: (20) 91 41 25
TWX: 160124F

Hewlett-Packard France
Bureau de Vente
Centre d' affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
93153 **Le Blanc Mesnil Cédex**
Tel: (01) 931 88 50

Hewlett-Packard France
Av. du Pdt. Kennedy
33700 **Merignac**
Tel: (56) 97 22 69

Hewlett-Packard France
"France-Evry" immeuble Lorraine
Boilevard de France
91035 **Evry-Cedex**
Tel: 077 96 60

Hewlett-Packard France
60, Rue de Metz
57130 **Jouy aux Arches**
Tel: (87) 69 45 32

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Posttach 560 140
D-6000 **Frankfurt** 56
Tel: (0611) 50-04-1
Cable: HEWPACKSA Frankfurt
Telex: 04 13249 hpftm d

Hewlett-Packard GmbH
Technisches Büro Böblingen
Herrenberger Strasse 110
D-7030 **Böblingen**, Württemberg
Tel: (0703) 667-1
Cable: HEWPACK Böblingen
Telex: 07265739 bbn

Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1 (Seestern)
D-4000 **Düsseldorf**
Tel: (0211) 59711
Telex: 085/86 533 hpdd d

Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendenstrasse 23
D-2000 **Hamburg** 1
Tel: (040) 24 13 93

Cable: HEWPACKSA Hamburg
Telex: 21 63 032 hphh d

Hewlett-Packard GmbH
Technisches Büro Hannover
Am Grossmarkt 6
D-3000 **Hannover 91**
Tel: (0511) 46 60 01
Telex: 092 3259

Hewlett-Packard GmbH
Technisches Büro Nürnberg
Neumeyerstrasse 90
D-8500**Nürnberg**
Tel: (0911) 56 30 83
Telex: 0623 860

Hewlett-Packard GmbH
Technisches Büro München
Eschenstrasse 5
D-8021 **Taufkirchen**
Tel: (089) 6117-1

Hewlett-Packard GmbH
Technisches Büro Berlin
Kaithstrasse 2-4
D-1000 **Berlin** 30
Tel: (030) 24 90 86
Telex:018 3405 hpbln d

GREECE
Kostas Karayannis
8 Omirou Street
Athens 133
Tel: 32 30 303/32/37 731

Analytical Only
INTECO
G. Papathanassiou & Co.
17 Marni Street
Athens 103
Tel: 5522 915/5221 989
Telex: 21 5329 INTE GR
Cable: INTEKNIKA

Medical Only
Technomed Hellas Ltd.
52 Skoufa Street
Athens 135
Tel: 3626 972

HUNGARY
MTA
Müszerügy és Méréstechnikai
Szolgalata
Hewlett-Packard Service
Lenin Krt. 67. P.O Box 241
1391Budapest VI
Tel: 42 03 38
Telex: 22-51 14

ICELAND
Medical Only
Elding Trading Company Inc
Hafnarhvoli - Tryggvagötu
P.O Box 895
IS-**Reykjavik**
Tel: 1 58 20/1 63 03
Cable: ELDING Reykjavik

IRAN
Hewlett-Packard Iran Ltd.
No. 13, Fourteenth St.
Mir Emad Avenue
P.O. Box 41/2419
Tehran
Tel: 851082-5
Telex: 213405 hewp ir

IRELAND
Hewlett-Packard Ltd.
King Street Lane
Winnersh, Wokingham
Berks. RG11 5AR
GB-England
Tel: (0734) 78 47 74
Telex: 847178
Cable: Hewpie London

Hewlett-Packard Ltd.
2C Avonbeg Industrial Estate
Long Mile Road
Dublin 12. Eire
Tel: (01) 514322
Telex: 30439

Medical Only
Cardiac Services (Ireland) Ltd.
Kilmore Road
Artane
Dublin 5, Eire
Tel: (01) 315820

Medical Only
Cardiac Services Co.
95A Finaghy Rd. South
Belfast BT10 0BY
GB-Northern Ireland

ITALY
Hewlett-Packard Italiana S.p.A.
Via G.Di Vittorio , 9
20063 Cernusco
Sul Naviglio (MI)
Tel: (2) 903691
Telex: 311046 HEWPACKIT

Hewlett-Packard Italiana S.p.A.
Via Turazza , 14
35100 **Padova**
Tel: (49) 664888
Telex: 41612 HEWPACKI

Hewlett-Packard Italiana S.p.A.
Via G. Armellini 10
1-00143 **Roma**
Tel: (06) 54 69 61
Telex: 61514
Cable: HEWPACKIT Roma

Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 **Torino**
Tel: (011) 68224/659308

Medical/Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 G/C
I-95126 **Catania**
Tel: (095) 37 05 04

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco A.
Capodimonte, 62A
I-80131 **Napoli**
Tel. (081) 7913544

Hewlett-Packard Italiana S.p.A.
Via E. Mattei, 96
I-40137 **Bologna**
Tel. (051) 307887/300040

JORDAN
Mouasher Cousins Co.
P.O. Box 1387
Amman
Tel: 24907/39907
Telex: SABCO JO 1456
Cable: MOUASHERCO

KUWAIT
Al-Khaldiya Trading &
Contracting
P.O. Box 830-Safat
Kuwait
Tel 42 4910/41 1726

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (02) 672 22 40
Cable: PALOBEN Brussels
Telex: 23 494

MOROCCO
Dolbeau
81 rue Karatchi
Casablanca
Tel: 3041 82
Telex: 23051,22822
Cable: MATERIO

Gerep
3, rue d'Agadir
Casablanca
Tel: 272093/5
Telex: 23739
Cable: GEREP-CASA

Cogedir
31 rue Omar Slaoui
Casablanca
Tel: 27 65 40
Telex: 21737/23003
Cable: COGEDIR

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
NL-**Amstelveen** 1134
Tel: (020) 47 20 21

NORWAY
Hewlett-Packard Norge A/S
Österdalen 18
P.O. Box 34
1345 **Osterasa**
Tel: (02) 1711 80
Telex: 16621 hpnas n

Hewlett-Packard Norge A/S
Nygaardsgaten 114
5000 **Bergen**

POLAND
Biuro Informacji Technicznej
Hewlett-Packard
Ul Stawki 2, 6P
00-950 **Warszawa**
Tel: 33 25 88,39 67 43
Telex: 81 24 53 hepa pl

UNIPAN
Biuro Obslugi Technicznej
01-447 Warszawa
ul **Newelska** 6
Poland

Zaklady Naprawcze Sprzetu
Medycznego
Plac Komuny Paryskiej 6
90-007 **Lódz**
Tel: 334-41, 337-83
Telex: 886981

PORTUGAL
Telectra-Empresa Técnica de
Equipamentos Eléctricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (19) 68 60 72
Cable: TELECTRA Lisbon
Telex: 12598

Medical only
Mundinter
Intercambio Mundial de Comércio
S.a.r.l.
P.O. Box 2761
Avenida Antonio Augusto
de Aguiar 138
P - Lisbon
Tel: (19) 53 21 31/7
Telex: 16691 munter p
Cable: INTERCAMBIO Lisbon

QATAR
Nasser Trading & Contracting
P.O. Box 1563
Doha
Tel: 22170
Telex: 4439 NASSER
Cable: NASSER

RUMANIA
Hewlett-Packard Reprezentanta
Bd.n. Balcescu 16
Bucuresti
Tel: 15 80 23/13 88 85
Telex: 10440

I.I.R.U.C.
Intreprinderea Pentru
Intretinerea
Si Repararea Utilajelor de Calcul
B-dul Prof. Dimitrie Pompei 6
Bucuresti-Sectorul 2
Tel: 88-20-70, 88-24-40, 88-67-95
Telex: 118

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH

Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596,66232
Cable: RAOUFCO

Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44813

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-**Madrid** 16
Tel: (1) 458 26 00 (10 lines)
Telex: 23515 hpe

Hewlett-Packard Espadñola S.A.
Colonia Mirasierra
Edificio Jubian
⅝ Costa Brava, 13
Madrid 34

Hewlett-Packard Española, S.A.
Milanesado 21-23
E-**Barcelona** 17
Tel: (3) 203 6200 (5 lines)

Hewlett-Packard Española, S.A.
Av Ramón y Cajal, 1
Edificio Sevilla, planta 9°
Seville 5
Tel: 64 44 54/58

Hewlett-Packard Española S.A.
Edificio Albia II 7° B
E-**Bilbao** 1
Tel: 23 83 06/23 82 06

Hewlett-Packard Española S.A.
C/Ramon Gordillo 1
(Entlo.)
E-**Valencia**-10
Tel: 96-361.13.54/361 13.58

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 3, Fack
S-161 **Bromma** 20
Tel: (08) 730 05 50
Telex: 10721
Cable: MEASUREMENTS
Stockholm

Hewlett-Packard Sverige AB
Frötallsgatan 30
S-421 32 **Västra Frölunda**
Tel: (031) 49 09 50
Telex: 10721 via Bromma office

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 307
CH-8952 **Schlieren-Zurich**
Tel: (01) 7305240
Telex: 53933 hpag ch
Cable: HPAG CH

Hewlett-Packard (Schweiz) AG
Château Bloc 19
CH-1219 **Le Lignon-Geneva**
Tel: (022) 96 03 22
Telex: 27333 hpag ch
Cable: HEWPACKAG Geneva

SYRIA
General Electronic Inc.
Nuri Basha-Ahnaf Ebn Kays Street
P.O. Box 5781
Damascus
Tel: 33 24 87
Telex: 11215 ITIKAL
Cable: ELECTROBOR DAMASCUS

Medical/Personal Calculator only
Sawah & Co.
Place Azmé
B.P. 2308
Damascus
Tel: 16 367-19 697-14 268

Suleiman Hilal El Mlawi
P.O. Box 2528
Mamoun Bitar Street, 56-58
DamascusTel: 11 46 63

TUNISIA
Tunisie Electronique
31 Avenue de la Liberte
Tunis
Tel: 280 144

Corema
1 ter. Av. de Carthage
Tunis
Tel: 253 821
Telex: 12319 CABAM TN

TURKEY
TEKNIM Company Ltd.
Riza Sah Pehlevi
Caddesi No. 7
Kavaklidere, **Ankara**
Tel: 275800
Telex: 42155

Teknim Com., Ltd.
Barbaros Bulvari 55/12
Besiktas, **Istanbul**
Tel: 613 546
Telex: 23540

Medical only
E.M.A.
Muhendislik Kollektif Sirketi
Mediha Eldem Sokak 41/6
Yüksel Caddesi
Ankara
Tel: 17 56 22
Cable: EMATRADE/Ankara

Analytical only
Yilmaz Özyurek
Milli Mudafaa Cad. 16/6
Kizilay

Ankara
Tel: 25 03 09 - 17 80 26
Telex: 42576 OZEK TR
Cable: OZYUREK ANKARA

UNITED ARAB EMIRATES
Emitac Ltd. (Head Office)
P.O. Box 1641
Sharjah
Tel: 354121/3
Telex: 8136

Emitac Ltd. (Branch Office)
P.O. Box 2711
Abu Dhabi
Tel: 331370/1

UNITED KINGDOM
Hewlett-Packard Ltd.
King Street Lane
Winnersh, Wokingham
Berks. RG11 5AR
Tel: (0734) 784774
Telex:847178/9

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
Altrincham
Cheshire WA14 1NU
Tel: (061) 928-6422
Telex: 668068

Hewlett-Packard Ltd.
Lygon Court
Hereward Rise
Dudley Road
Halesowen
West Midlands B62 8SD
Tel: (021) 550 9911
Telex: 339105

Hewlett-Packard Ltd.
Wedge House
799, London Road
Thornton Heath
Surrey CR4 6XL
Tel: (01) 6840103
Telex: 946825

Hewlett-Packard Ltd
10, Wesley St.
Castleford
Yorks WF10 1AE
Tel: (0977) 550016
Telex: 557355

Hewlett-Packard Ltd
1, Wallace Way
Hitchin
Hertfordshire, SG4 0SE
Tel: (0462) 31111
Telex: 82 59 81

USSR
Hewlett-Packard
Representative Office USSR
Pokrovsky Boulevard 4/17-kw 12
Moscow 101000
Tel: 294 20 24
Telex: 7825 hewpak su

YUGOSLAVIA
Iskra-Standard/Hewlett-Packard
Miklosiceva 38/VII
61000 **Ljubljana**
Tel: 31 58 79/32 16 74

SOCIALIST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard Ges.m.b.H
Handelskai 52
P.O. Box 7
A-1205 **Vienna**, Austria
Tel: (0222) 35 16 21 to 27

MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard S.A.
Mediterranean and Middle
East Operations
35, Kolokotroni Street
Platia Kefallariou
GR-Kifissia-**Athens**, Greece
Tel: 8080037/259.429

FOR OTHER AREAS NOT LISTED CONTACT
Hewlett-Packard S.A.
7, rue du Bois-du-Lan
P.O. Box
CH-1217 Meyrin 2 - **Geneva**
Switzerland
Tel: (022) 82 70 00

UNITED STATES

ALABAMA
P.O. Box 4207
8290 Whitesburg Dr.
Huntsville 35802
Tel: (205) 881-4591

8933 E. Roebuck Blvd.
Birmingham 35206
Tel: (205) 836-2203/2

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361

2424 East Aragon Rd.
Tucson 85706
Tel: (602) 889-4661

***ARKANSAS**
Medical Service Only
P.O. Box 5646
Brady Station
Little Rock 72215
Tel: (501) 376-1844

CALIFORNIA
1579 W. Shaw Ave.
Fresno 93711
Tel: (209) 224-0582

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2671

5400 West Rosecrans Blvd.
P.O. Box 92105
World Way Postal Center
Los Angeles 90009
Tel: (213) 776-7500
TWX: 910-325-6608

***Los Angeles**
Tel: (213) 776-7500

3003 Scott Boulevard
Santa Clara 95050
Tel: (408) 988-7000
***Ridgecrest**
Tel: (714) 446-6165

646 W. North Market Blvd
Sacramento 95834
Tel: (916) 929-7222

9606 Aero Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200

***Tarzana**
Tel: (213) 705-3344

COLORADO
5600 DTC Parkway
Englewood 80110
Tel: (303) 771-3455

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2727 N.W. 62nd Street
Ft. Lauderdale 33309
Tel: (305) 973-2600

4428 Emerson Street
Unit 103
Jacksonville 32207
Tel: (904) 725-6333

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (305) 859-2900

P.O. Box 12826
Suite 5, Bldg. 1
Office Park North
Pensacola 32575
Tel: (904) 476-8422

GEORGIA
P.O. Box 105005
450 Interstate North Parkway
Atlanta 30348
Tel: (404) 955-1500
Medical Service Only
***Augusta** 30903
Tel: (404) 736-0592

P.O. Box 2103
1172 N. Davis Drive
Warner Robins 31098
Tel: (912) 922-0449

HAWAII
2875 So. King Street
Honolulu 96826
Tel: (808) 955-4455

ILLINOIS
5201 Tollview Dr.
Rolling Meadows 60008
Tel: (312) 255-9800
TWX: 910-687-2260

INDIANA
7301 North Shadeland Ave.
Indianapolis46250
Tel: (317) 842-1000
TWX: 810-260-1797

IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY
Medical Only
3901 Atkinson Dr.
Suite 407 Atkinson Square
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P.O. Box 1449
3229-39 Williams Boulevard
Kenner 70063
Tel: (504) 443-6201

MARYLAND
7121 Standard Drive
Parkway Industrial Center
Hanover 21076
Tel: (301) 796-7700
TWX: 710-862-1943

2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400

724 West Centre Ave.
Kalamazoo 49002
Tel: (606) 323-8362

MINNESOTA
2400 N. Prior Ave.
St. Paul 55113
Tel: (612) 636-0700

MISSISSIPPI
322 N. Mart Plaza
Jackson 39206
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

1024 Executive Parkway
St. Louis 63141
Tel: (314) 878-0200

NEBRASKA
Medical Only
7101 Mercy Road
Suite 101
Omaha 68106
Tel: (402) 392-0948

NEVADA
***Las Vegas**
Tel: (702) 736-6610

NEW JERSEY
W. 120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

Crystal Brook Professional
Building, Route 35
Eatontown 07724
Tel: (201) 542-1384

NEW MEXICO
P.O. Box 11634
Station E
11300 Lomas Blvd., N.E.
Albuquerque 87123
Tel.: (505) 292-1330
TWX: 910-989-1185

156 Wyatt Drive
Las Cruces 88001
Tel.: (505) 526-2484
TWX: 910-9983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961

650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092

No. 1 Pennsylvania Plaza
55th floor
34th street & 8th Avenue
New York 10001
Tel: (212) 971-0800

5858 East Molloy Road
Syracuse 13211
Tel: (315) 455-2486

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300

NORTH CAROLINA
5605 Roanne Way
Greensboro 27405
Tel: (919) 852-1800

OHIO
Medical/Computer Only
Bldg. 300
1313 E. Kemper Rd.
Cincinnati 45246
Tel: (513) 671-7400

16500 Sprague Road
Cleveland 44130
Tel: (216) 243-7300
TWX: 810-423-9430

330 Progress Rd.
Dayton 45449
Tel: (513) 859-8202

1041 Kingsmill Parkway
Columbus 43229
Tel: (614) 436-1041

OKLAHOMA
P.O. Box 32008
6301 N. Meridan Avenue
Oklahoma City 73112
Tel: (405) 721-0200

9920 E. 42nd Street
Suite 121
Tulsa 74145

OREGON
17890 SW Lower Boones
Ferry road
Tualatin 97062
Tel: (503) 620-3350

PENNSYLVANIA
111 Zeta Drive
Pittsburgh 15238
Tel: (412) 782-0400

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

PUERTO RICO
Hewlett-Packard Inter-Americas
Puerto Rico Branch Office
Calle 272,
Edif. 203 Urg. Country Club
Carolina 00924
Tel: (809) 762-7255
Telex: 345 0514

SOUTH CAROLINA
P.O. Box 6442
6941-0 N. Trenholm Road
Columbia 29260
Tel: (803) 782-6493

TENNESSEE
8914 Kingston Pike
Knoxville 37922
Tel: (615) 523-0522

3027 Vanguard Dr.
Director's Plaza
Memphis 38131
Tel: (901) 346-8370

***Nashville**
Medical Service only
Tel: (615) 244-5448

TEXAS
4171 North Mesa
Suite C110
El Paso 79902
Tel: (915) 533-3555

P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101

P.O. Box 42816
10535 Harwin Dr.
Houston 77036
Tel: (713) 776-6400

***Lubbock**
Medical Service only
Tel: (806) 799-4472

205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241

UTAH
2160 South 3270 West Street
Salt Lake City 84119
Tel: (801) 972-4711

VIRGINIA
P.O. Box 12778
Norfolk 23502
Tel: (804) 460-2671

P.O. Box 9669
2914 Hungary Springs Road
Richmond 23228
Tel: (804) 285-3431

WASHINGTON
Bellefield Office Pk.
1203-114th Ave. S.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2446

P.O. Box 4010
Spokane 99202
Tel: (509) 535-0864

***WEST VIRGINIA**
Medical/Analytical Only
Charleston
Tel: (304) 345-1640

WISCONSIN
9004 West Lincoln Ave.
West Allis 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office
nearest you: Atlanta, Georgia...
North Hollywood, California...
Rockville, Maryland...Rolling Meadows,
Illinois. Their complete
addresses are listed above.

***Service Only**

HEWLETT hp PACKARD

01805-90903

PRINTED IN U.S.A.